


HEADLIGHT CLEANER HOSE REMOVAL/INSTALLATION


id091900803100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Partially peel back the front over fender. (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
3. Set the mudguard aside. (See MUDGUARD REMOVAL/INSTALLATION.)
4. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
5. Remove the headlight cleaner hose from hooks.
6. Remove clips and headlight cleaner hose as a single unit from the front bumper.

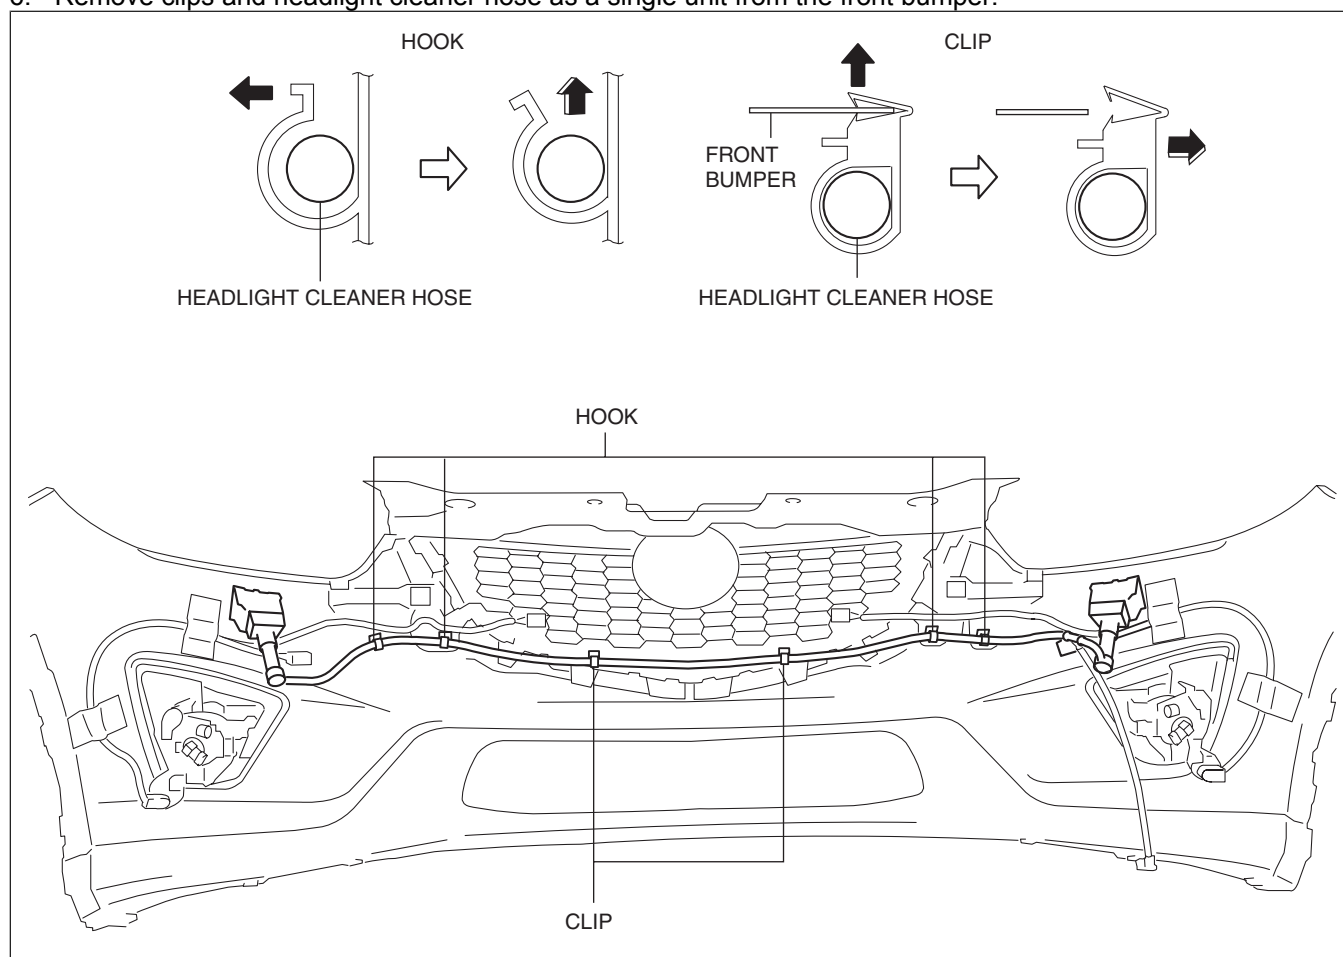

ac5wzw00001642

7. While pressing tabs in the direction of the arrows (1) shown in the figure, pull up the headlight cleaner hose in the direction of the arrow (2) to remove it from the headlight cleaner actuator.
8. Install in the reverse order of removal.

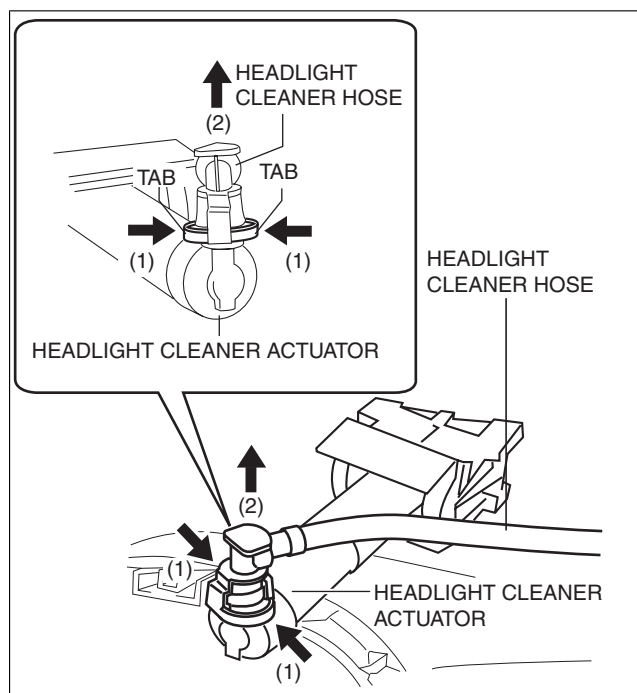

ac5wzw00001643