


REAR WASHER NOZZLE REMOVAL/INSTALLATION

id091900802200

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the liftgate upper trim. (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
3. Remove the rear spoiler. (See REAR SPOILER REMOVAL/INSTALLATION.)
4. Disconnect the rear washer hose from the rear washer nozzle. (See REAR WASHER HOSE REMOVAL/INSTALLATION.)
5. While pressing tabs of the rear washer nozzle in the direction of the arrows (1) shown in the figure, pull the rear washer nozzle in the direction of the arrow (2) to remove it from the liftgate.

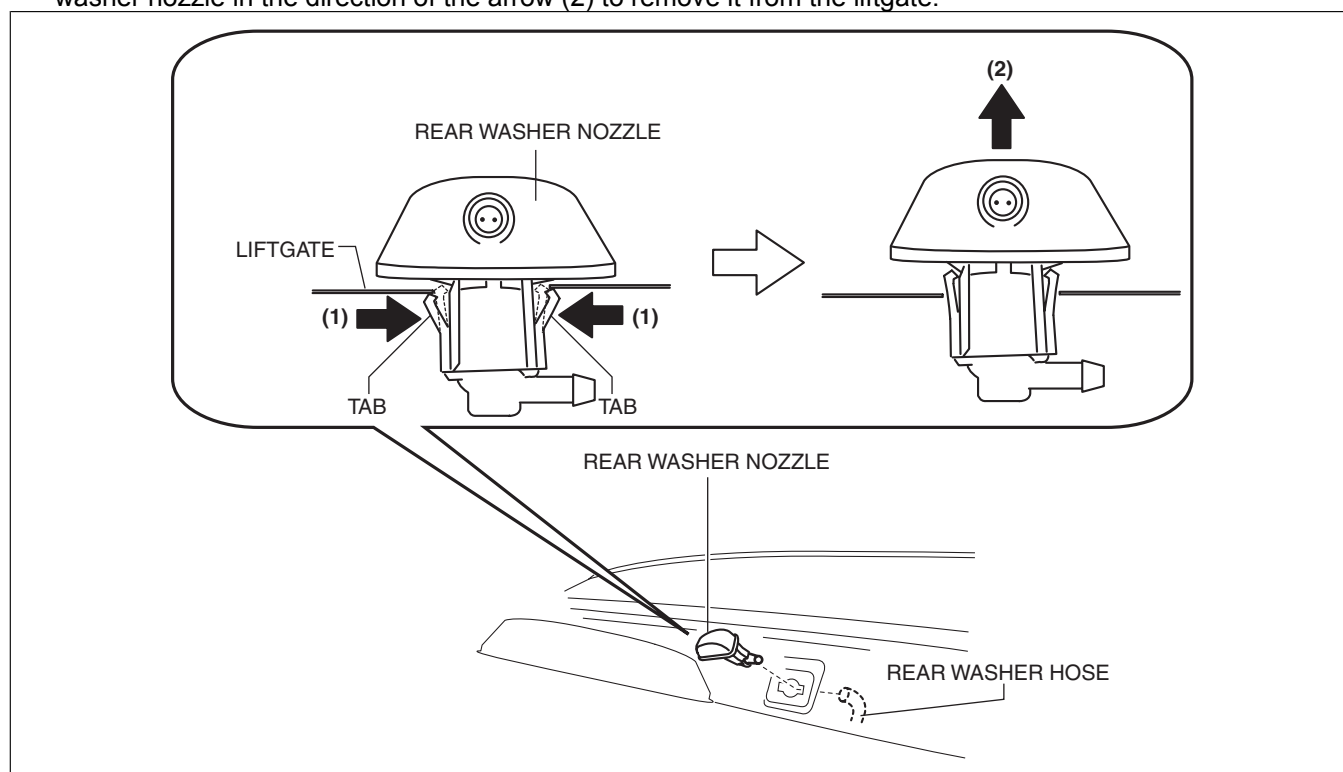

6. Install in the reverse order of removal.
7. Adjust the rear washer nozzle. (See REAR WASHER NOZZLE ADJUSTMENT.)

ac5wzw00002490