


CHECK VALVE INSPECTION [SKYACTIV-D 2.2]

id0113z7082800

1. Remove the check valve. (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
2. Verify that there is airflow through port B when pressure is applied from port A.
 - If there is no airflow, replace the check valve. (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3. Verify that there is no airflow through port A when pressure is applied from port B.
 - If there is airflow, replace the check valve. (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

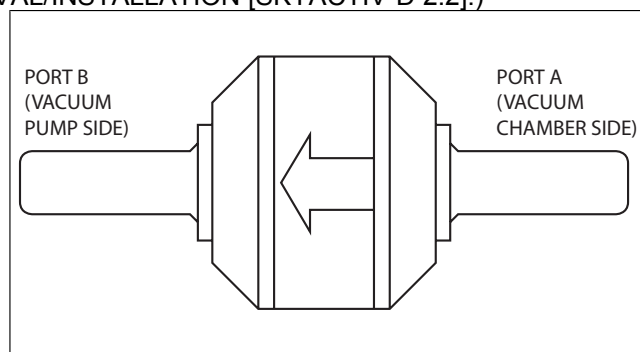

ac5wzw00004907