


## D-PILLAR SPEAKER INSPECTION

id092000811200

### D-pillar speaker

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
  - (2) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
  - (3) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
  - (4) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
  - (5) D-pillar trim (See D-PILLAR TRIM REMOVAL/INSTALLATION.)
3. Disconnect the D-pillar speaker connector. (See D-PILLAR SPEAKER REMOVAL/INSTALLATION.)
4. Verify that the resistance between the D-pillar speaker terminals is as indicated in the table.

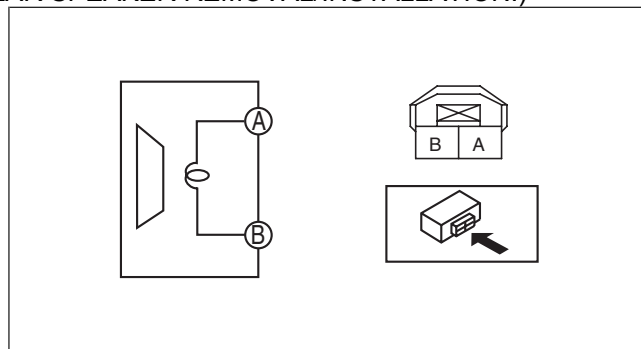

am6zzw00001612


- If not as indicated in the table, replace the D-pillar speaker.

Test condition	Terminal		Resistance (ohm)
	A	B	
Under any condition			3.24—3.96

ac5uuw00002877

### Short-cord

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
  - (2) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
  - (3) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
  - (4) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
  - (5) D-pillar trim (See D-PILLAR TRIM REMOVAL/INSTALLATION.)
3. Disconnect the D-pillar speaker connector. (See D-PILLAR SPEAKER REMOVAL/INSTALLATION.)
4. Verify that the continuity between the short-cord terminals is as indicated in the table.

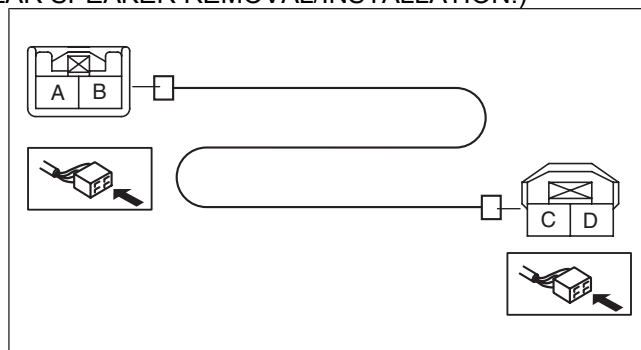

ac5jjw00001036

- If not as indicated in the table, replace the short-cord.

○—○ : Continuity

Test condition	Terminal			
	A	B	C	D
Under any condition	○—			—○
		○—	—○	

ac5wzw00005159