


AUTOMATIC TRANSAXLE LOCATION INDEX [GW6A-EL, GW6AX-EL]

id0517i2118200

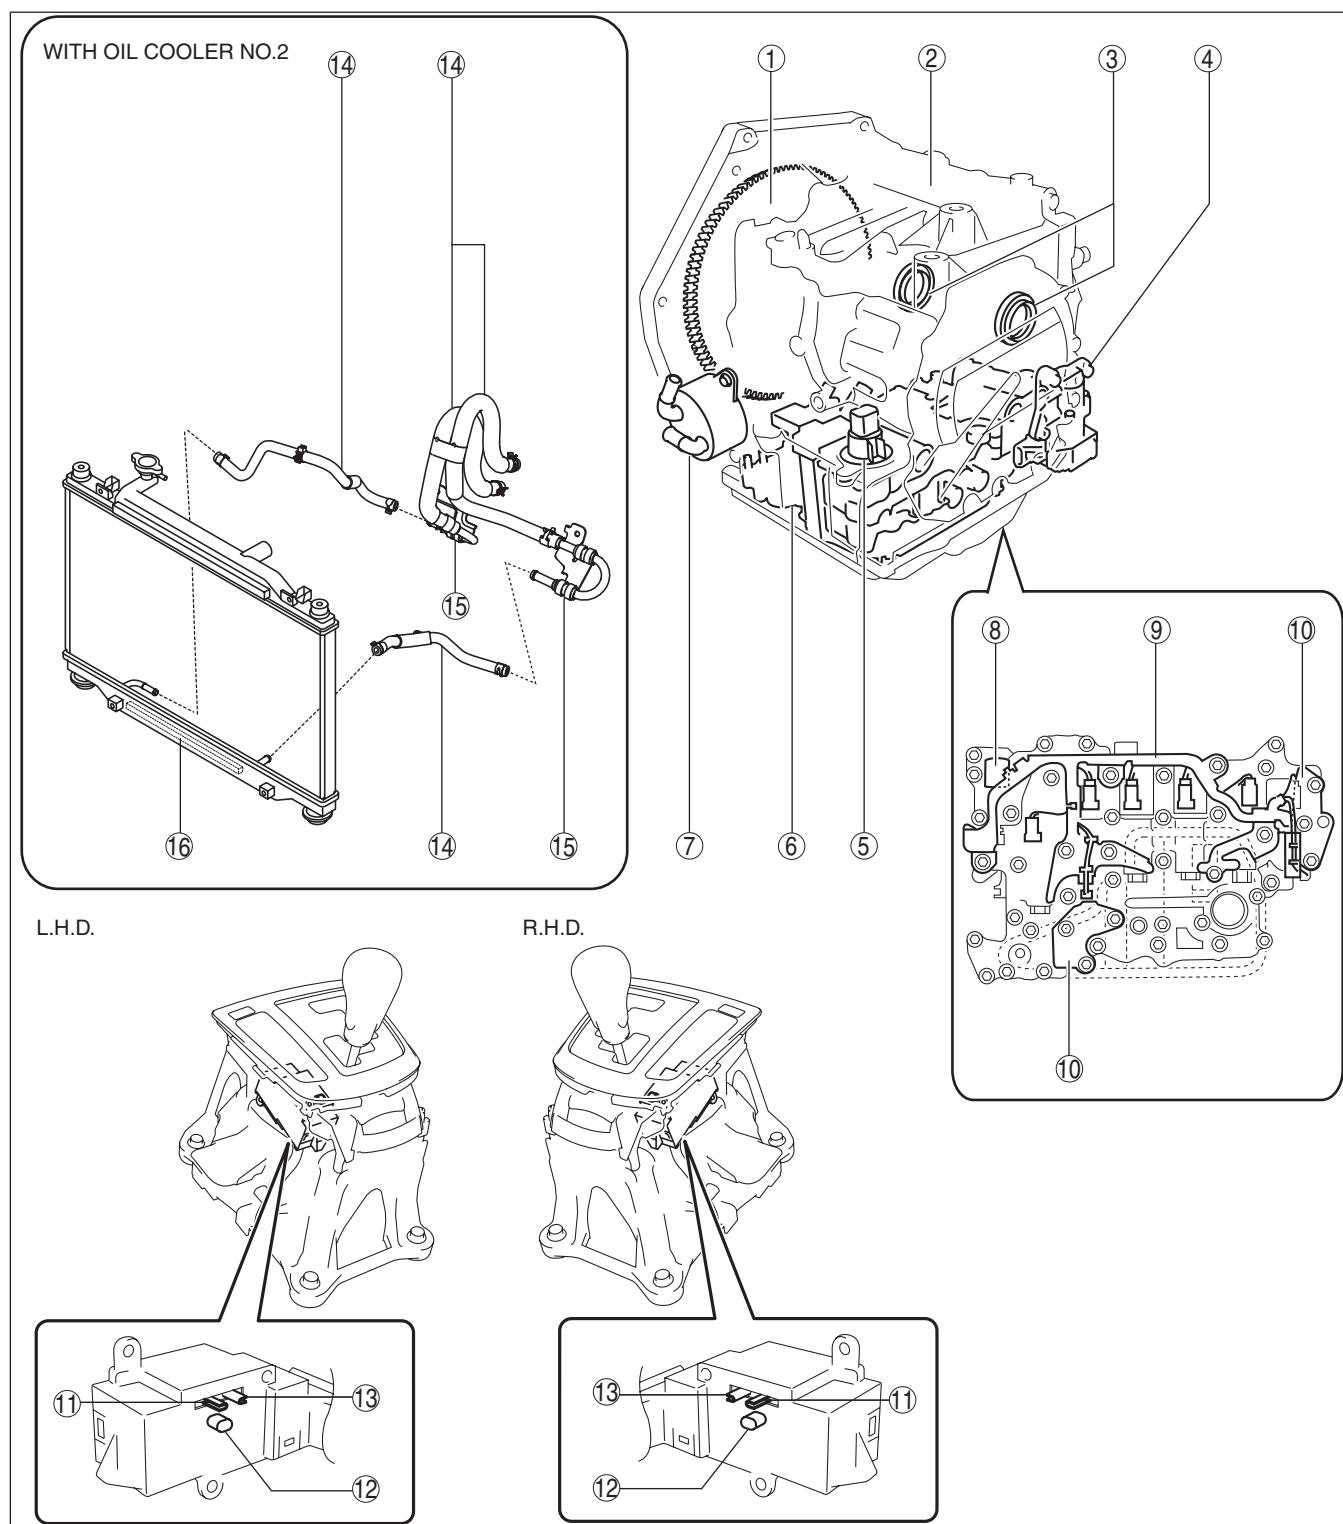

ac5wzw00000909

1 Drive plate
(See DRIVE PLATE REMOVAL/INSTALLATION [GW6A-EL, GW6AX-EL].)

2 Automatic transaxle
(See MECHANICAL SYSTEM TEST [GW6A-EL, GW6AX-EL].)
(See ROAD TEST [GW6A-EL, GW6AX-EL].)
(See AUTOMATIC TRANSAXLE FLUID (ATF) INSPECTION [GW6A-EL, GW6AX-EL].)
(See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [GW6A-EL, GW6AX-EL].)
(See AUTOMATIC TRANSAXLE FLUID (ATF) ADJUSTMENT [GW6A-EL, GW6AX-EL].)
(See INITIAL LEARNING [GW6A-EL, GW6AX-EL].)
(See AUTOMATIC TRANSAXLE REMOVAL/INSTALLATION [GW6A-EL].)
(See AUTOMATIC TRANSAXLE REMOVAL/INSTALLATION [GW6AX-EL].)

3	Oil seal (differential) (See OIL SEAL (DIFFERENTIAL) REPLACEMENT [GW6A-EL, GW6AX-EL].)
4	Electric AT oil pump (See ELECTRIC AT OIL PUMP REMOVAL/INSTALLATION [GW6A-EL, GW6AX-EL].)
5	Oil seal (control valve body) (See OIL SEAL (CONTROL VALVE BODY) REPLACEMENT [GW6A-EL, GW6AX-EL].)
6	Control valve body (See CONTROL VALVE BODY REMOVAL/INSTALLATION [GW6A-EL, GW6AX-EL].) (See TCM CONFIGURATION [GW6A-EL, GW6AX-EL].)
7	Oil cooler (See OIL COOLER REMOVAL/INSTALLATION [GW6A-EL, GW6AX-EL].)
8	ON/OFF solenoid (See ON/OFF SOLENOID REMOVAL/INSTALLATION [GW6A-EL, GW6AX-EL].)
9	Coupler component (See COUPLER COMPONENT REMOVAL/INSTALLATION [GW6A-EL, GW6AX-EL].)
10	Oil pressure switch (See OIL PRESSURE SWITCH REMOVAL/INSTALLATION [GW6A-EL, GW6AX-EL].)

11	Up switch (See UP SWITCH INSPECTION [GW6A-EL, GW6AX-EL].) (See UP SWITCH REMOVAL/INSTALLATION [GW6A-EL, GW6AX-EL].)
12	M position switch (See M POSITION SWITCH INSPECTION [GW6A-EL, GW6AX-EL].) (See M POSITION SWITCH REMOVAL/INSTALLATION [GW6A-EL, GW6AX-EL].)
13	Down switch (See DOWN SWITCH INSPECTION [GW6A-EL, GW6AX-EL].) (See DOWN SWITCH REMOVAL/INSTALLATION [GW6A-EL, GW6AX-EL].)
14	Oil hose (See OIL COOLER REMOVAL/INSTALLATION [GW6A-EL, GW6AX-EL].)
15	Oil pipe (See OIL COOLER REMOVAL/INSTALLATION [GW6A-EL, GW6AX-EL].)
16	Oil cooler No.2 (See OIL COOLER REMOVAL/INSTALLATION [GW6A-EL, GW6AX-EL].)