

FRONT SEAT SIDE COVER REMOVAL/INSTALLATION

id091300912100

Warning

- Handling a side air bag improperly can accidentally operate (deploy) the air bag, which may seriously injure you. Read the service warnings in the Workshop Manual before handling the front seat (side air bag integrated). (See AIR BAG SYSTEM SERVICE WARNINGS.) (See AIR BAG SYSTEM SERVICE CAUTIONS.)
- If the sliding mechanisms on both sides are not locked after assembling the front seat, the front seat will operate accidentally while the vehicle is driven, which could result in serious injury. After assembling the front seat, shake it up and down and verify that the sliding mechanism on the both sides are locked.


Caution

- If the slide lever is operated after the front seat is removed, the left/right slide positions will deviate and the adjuster unit could be damaged after the front seat is installed. After removing a front seat, do not operate the slide lever.
- Verify that there are no malfunctions in the forward/back slide of the seat and in the adjuster unit after installing a front seat.
- When performing the procedure with a front seat removed from the vehicle, perform the procedure on a clean cloth so as not to damage or soil the seat.

Front Door Side


Driver-side (With Power Seat System)

1. Switch the ignition off (LOCK).
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Pull the power seat switch knob in the direction of the arrow (1) shown in the figure, and remove it while disengaging tabs A and B.

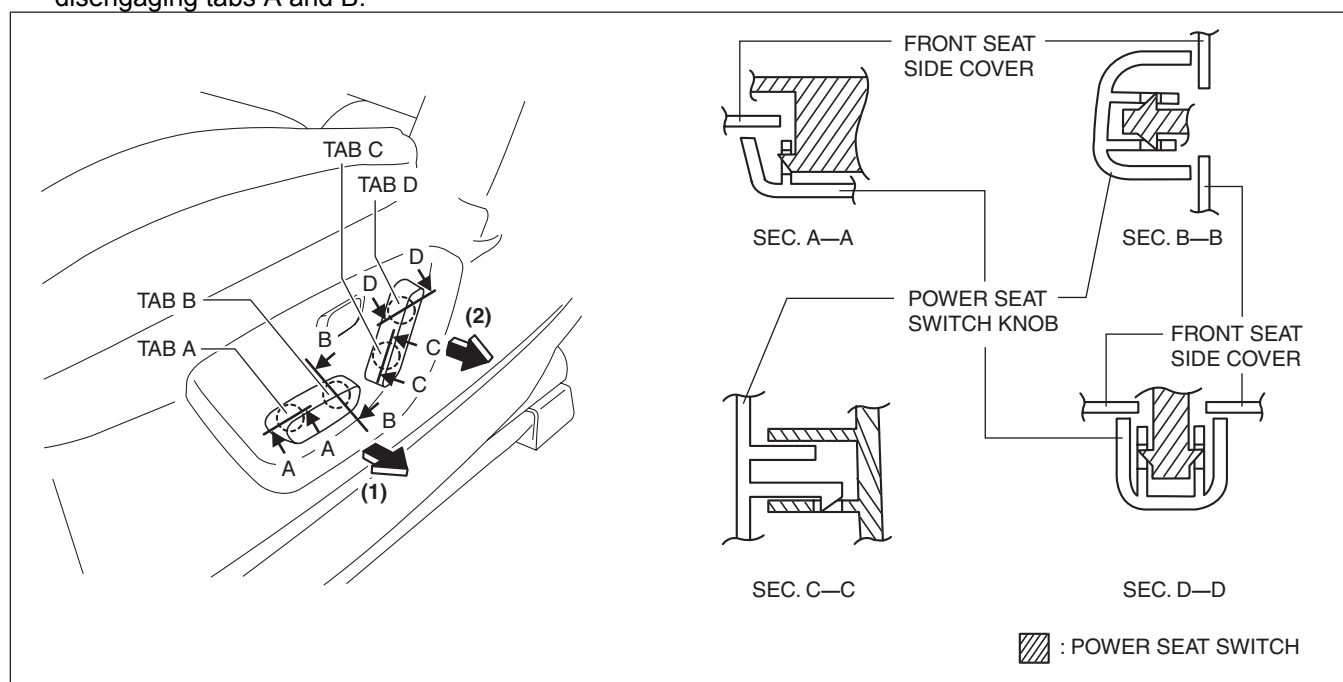


4. Pull the power seat switch knob in the direction of the arrow (2) shown in the figure, and remove it while disengaging tabs C and D.
5. Remove clips E from the front seat cushion frame.

ac5uuw00002003

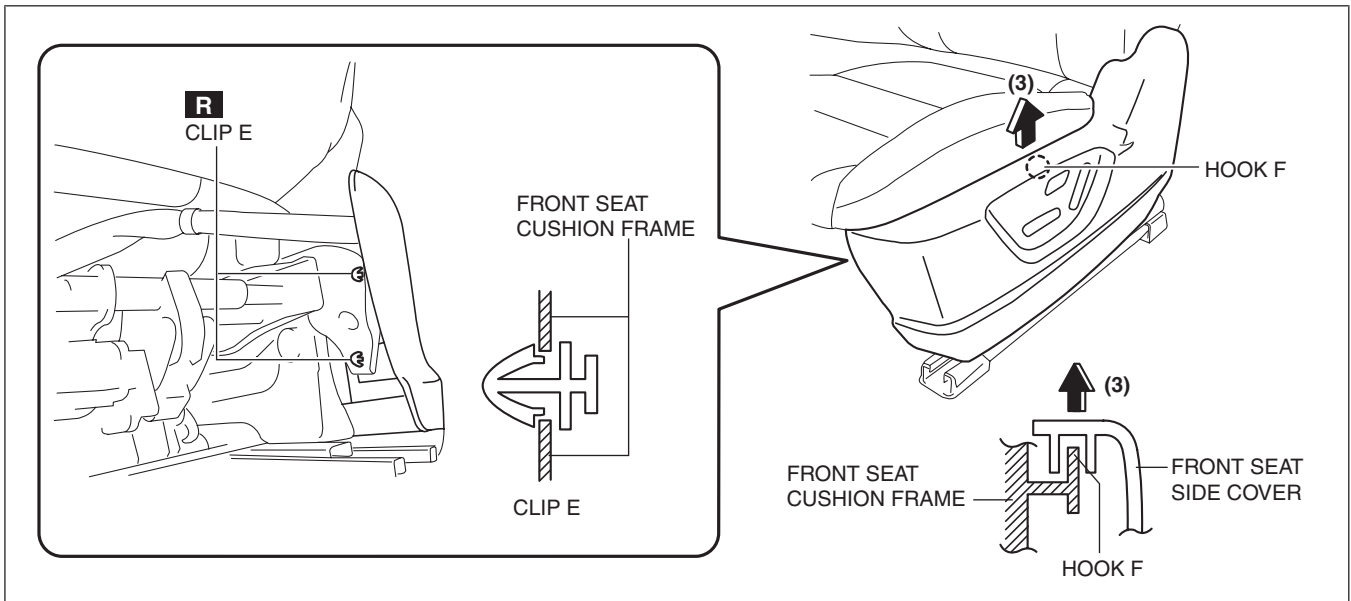


ac5wzw00006055

6. Pull up the front seat side cover in the direction of the arrow (3) shown in the figure and set hook F aside.
7. Pull the front seat side cover in the direction of the arrow (4) shown in the figure and disengage the tabs G and H, and the pin.

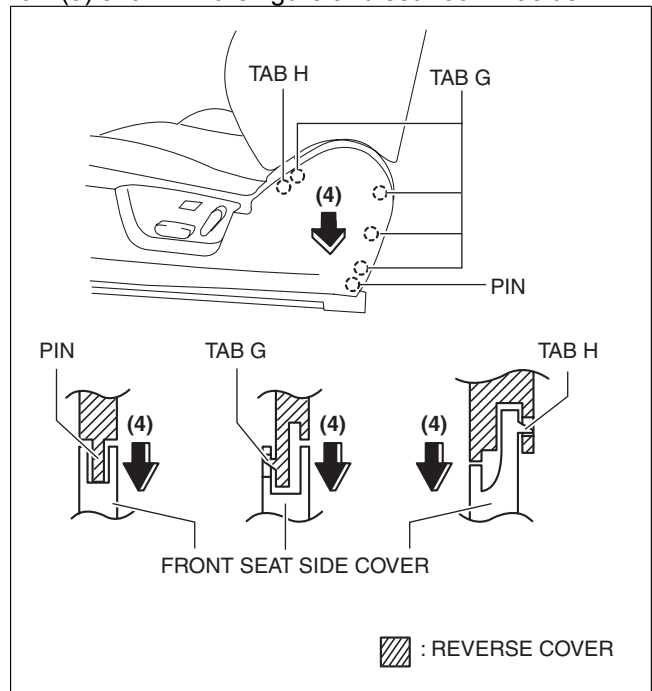


ac5wzw00003195

8. Pull the front seat side cover in the direction of the arrow (5) shown in the figure and set hook I aside.

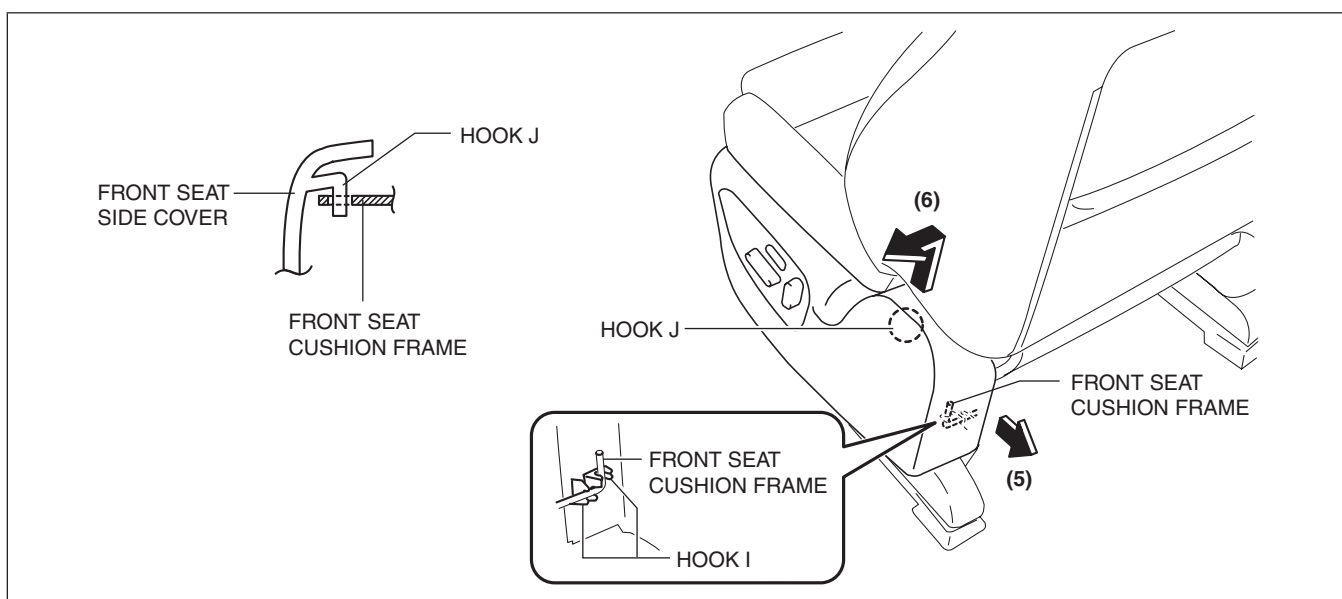

ac5uuw00002006

9. Pull the front seat side cover in the direction of the arrow (6) shown in the figure and set hook J aside.
10. Disconnect the power seat switch connector.
11. Set the wiring harness aside from hooks K and L, and remove the front seat side cover in the direction of the arrow (7) shown in the figure.
12. Remove the power seat switch. (See POWER SEAT SWITCH REMOVAL/INSTALLATION.)
13. Install in the reverse order of removal.

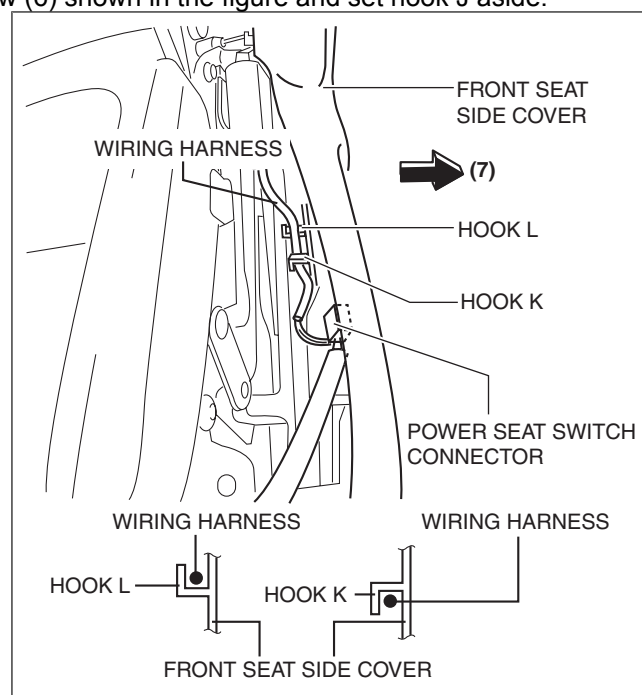

ac5uuw00002007


Driver-side (Without power seat system)

Caution


- The seat back folds forward when the recliner knob is operated. Be careful when operating the recliner lever.

1. Switch the ignition off (LOCK).
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)


3. Move the flathead screwdriver wrapped in protective tape in the direction of the arrow (1) shown in the figure and disengage tab A. (with lever type recliner knob)

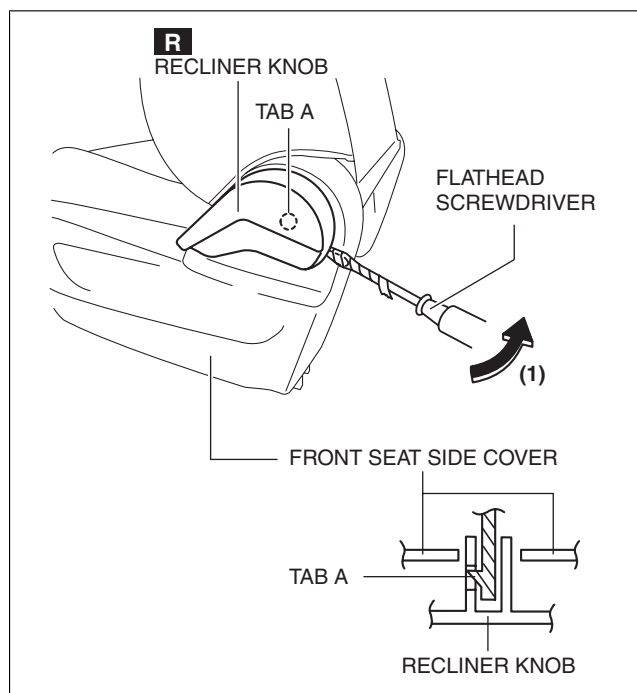


4. Move the flathead screwdriver wrapped in protective tape in the direction of the arrow (2) shown in the figure and disengage tab B. (with lever type recliner knob)

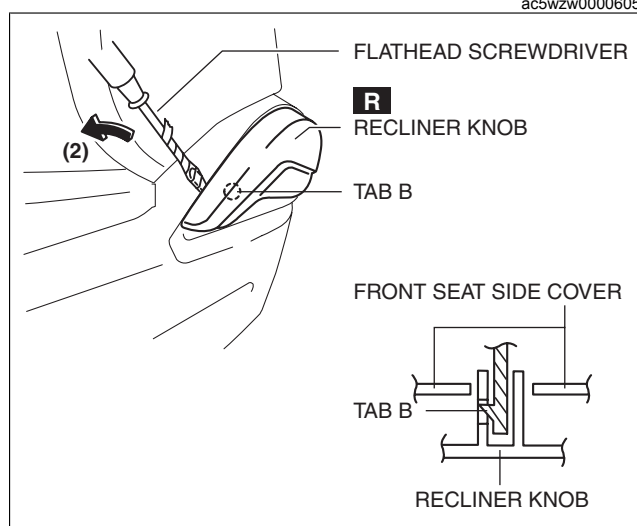


5. Remove the recliner knob in the direction of the arrow (3) shown in the figure. (with lever type recliner knob)

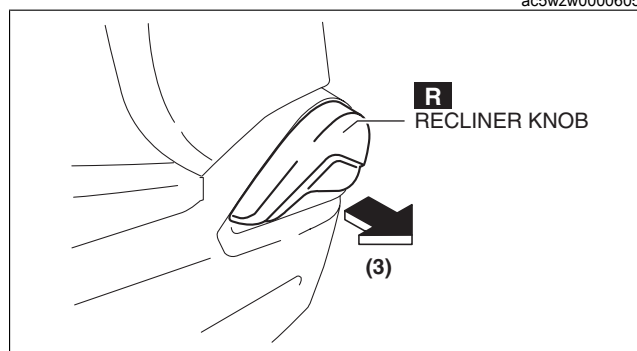


6. Remove the clip then remove the recliner knob.
(with dial type recliner knob)

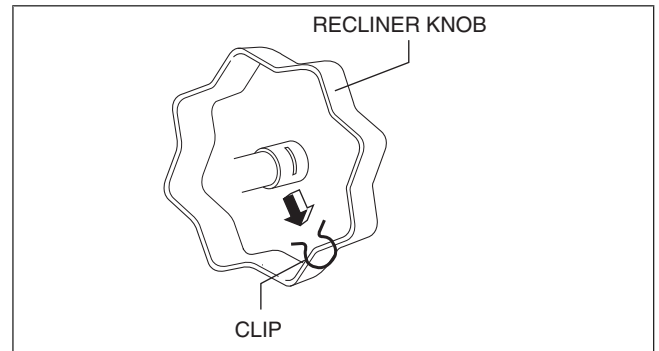


7. Remove the screw. (with dial type recliner knob)

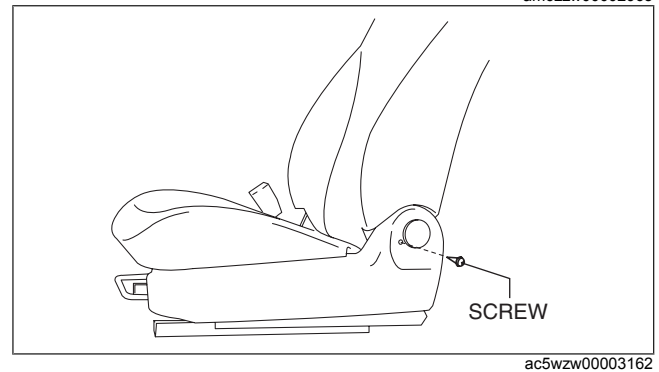

8. Affix the protective tape to the position shown in the figure.

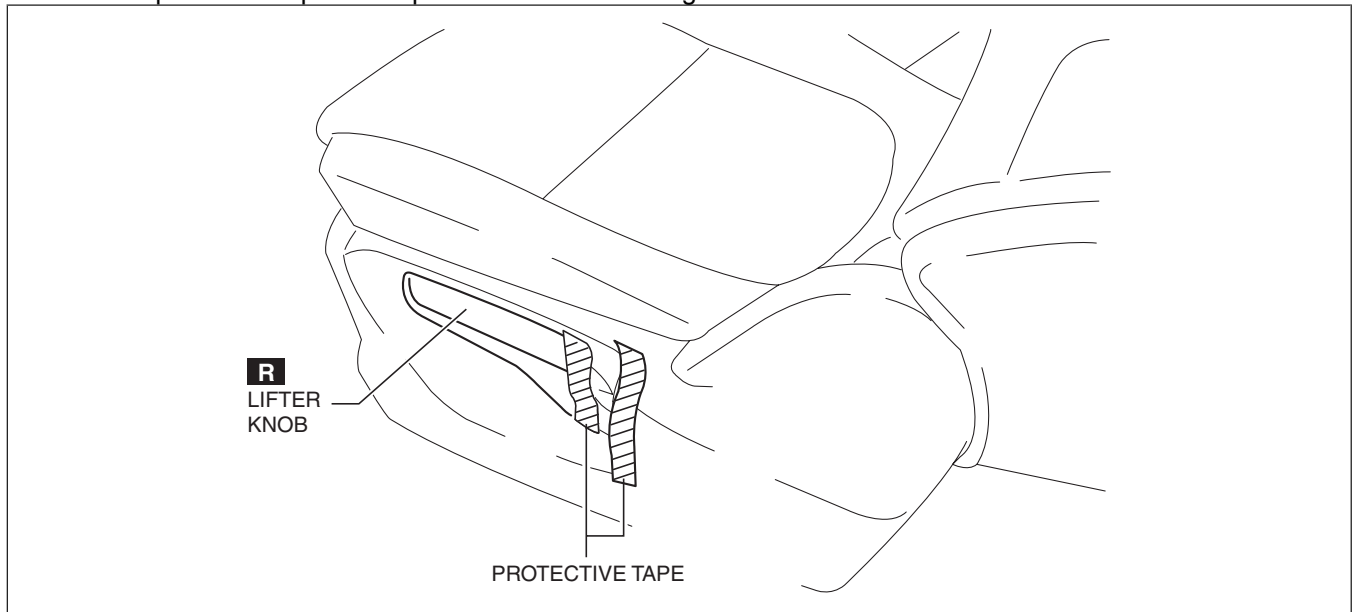


9. Using a wood slab, tap the end of the lifter knob with the plastic hammer and remove it in the direction of the arrow (4).

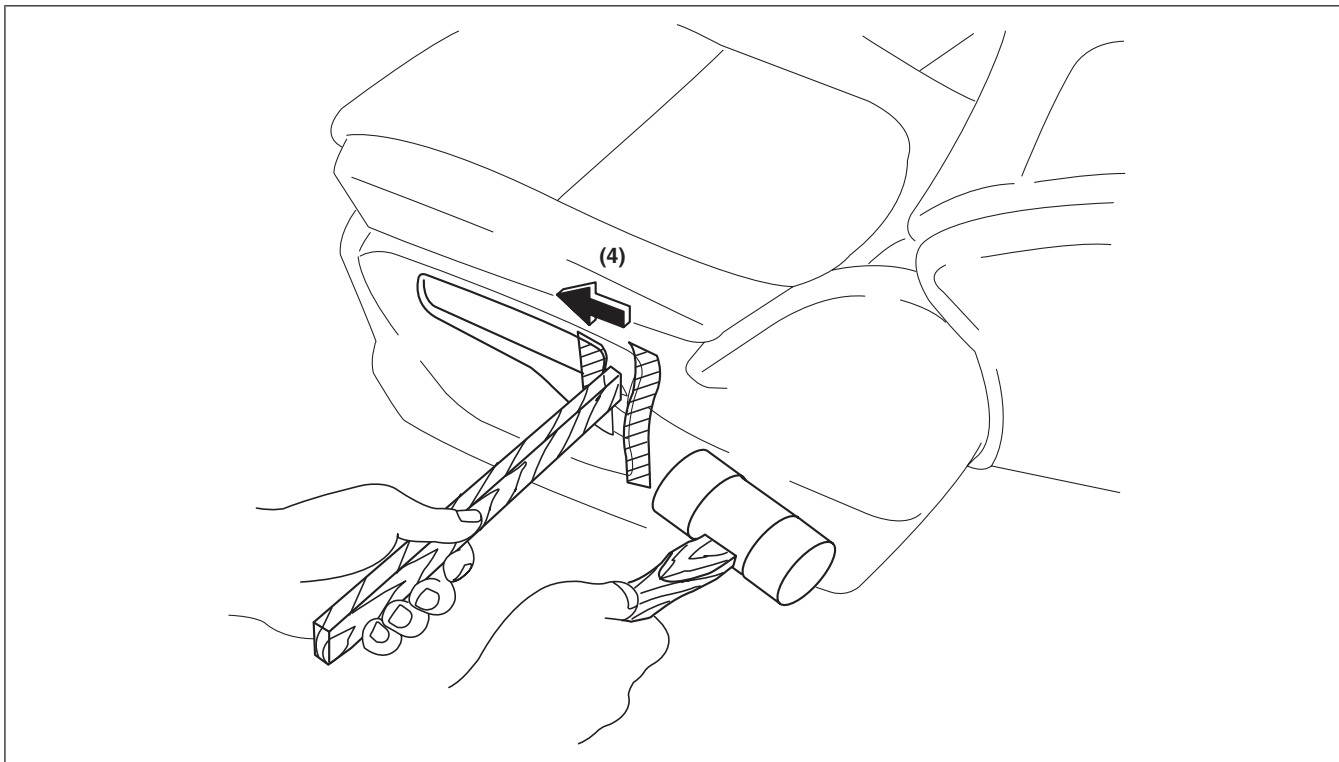

ac5uuw00002017


10. Remove clips D from the front seat cushion frame.

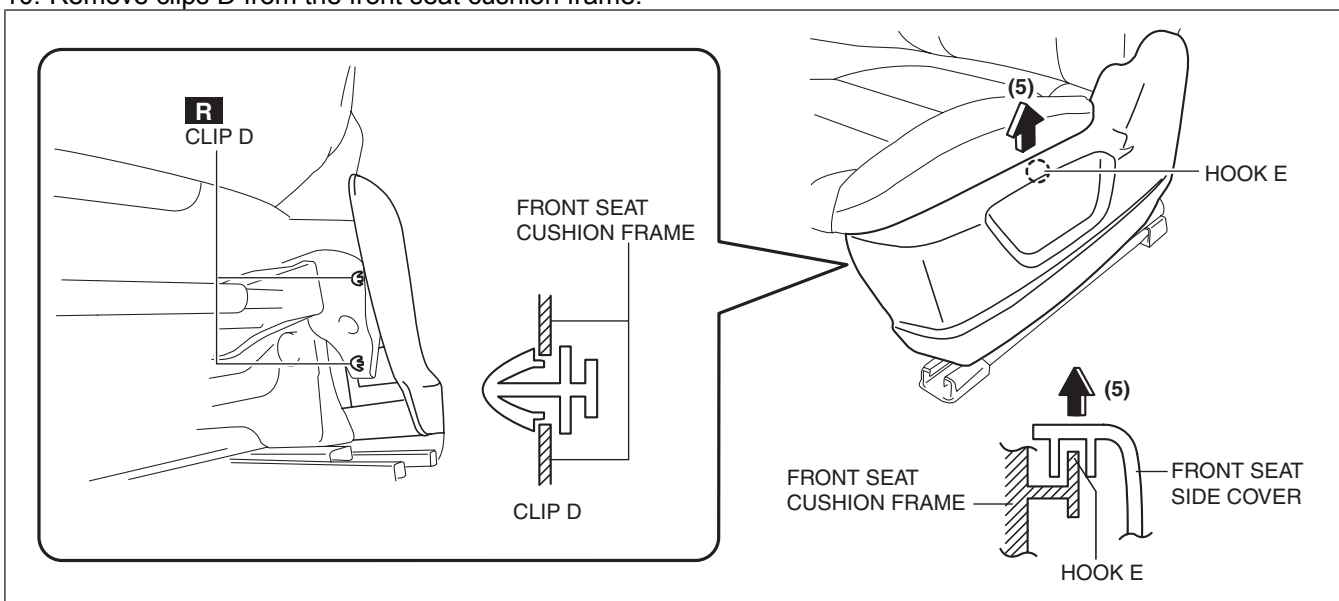

ac5wzw00006060


11. Pull up the front seat side cover in the direction of the arrow (5) shown in the figure and set hook E aside.

12. Pull the front seat side cover in the direction of the arrow (6) shown in the figure and disengage the tabs F and G, and the pin.

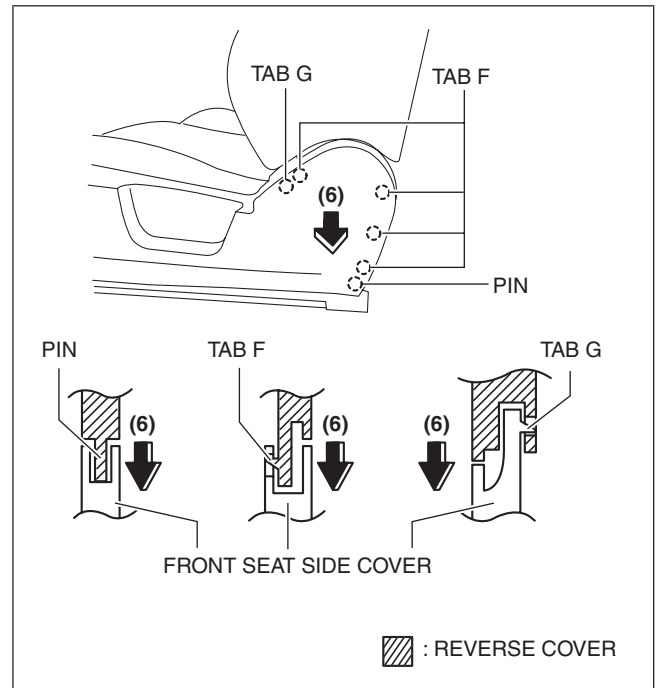

ac5wzw00003196

13. Pull the front seat side cover in the direction of the arrow (7) shown in the figure and set hook H aside.

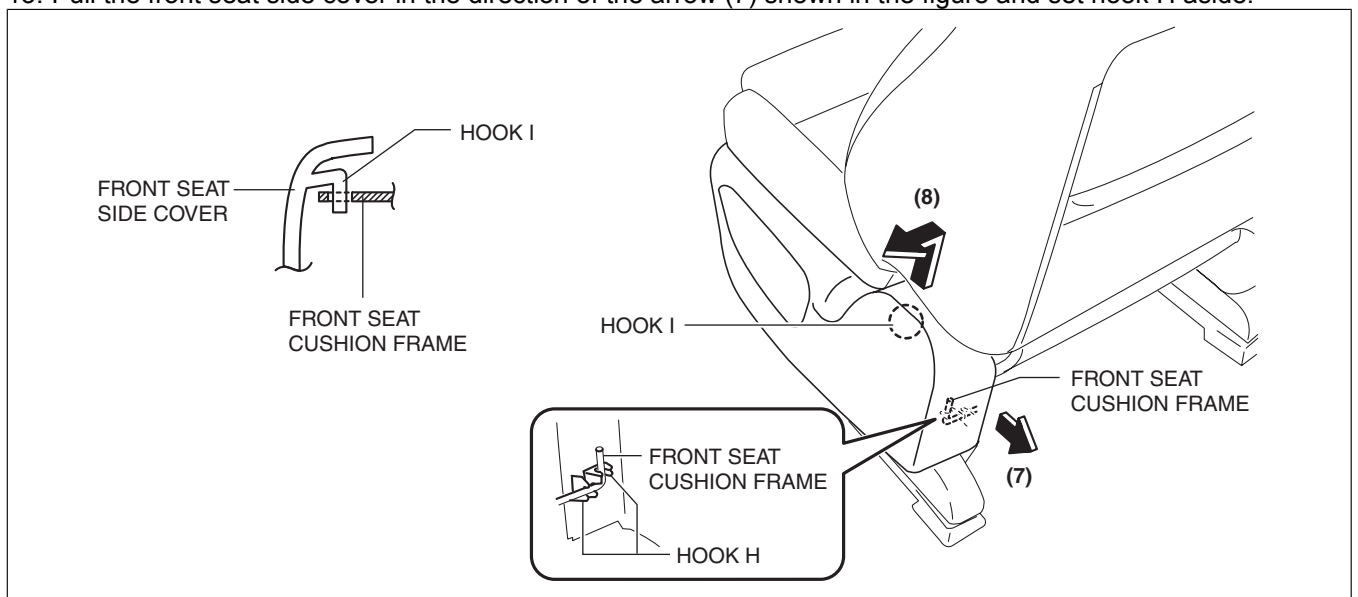

ac5wzw00003751

14. Pull the front seat side cover in the direction of the arrow (8) shown in the figure and set hook I aside.
 15. Remove the front seat side cover
 16. Install in the reverse order of removal.


Passenger-side

Caution


- The seat back folds forward when the recliner knob is operated. Be careful when operating the recliner lever.

- Switch the ignition off (LOCK).
- Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)


3. Using a tape-wrapped flathead screwdriver, detach tab A in the direction of arrows (1) shown in the figure. (with lever type recliner knob)

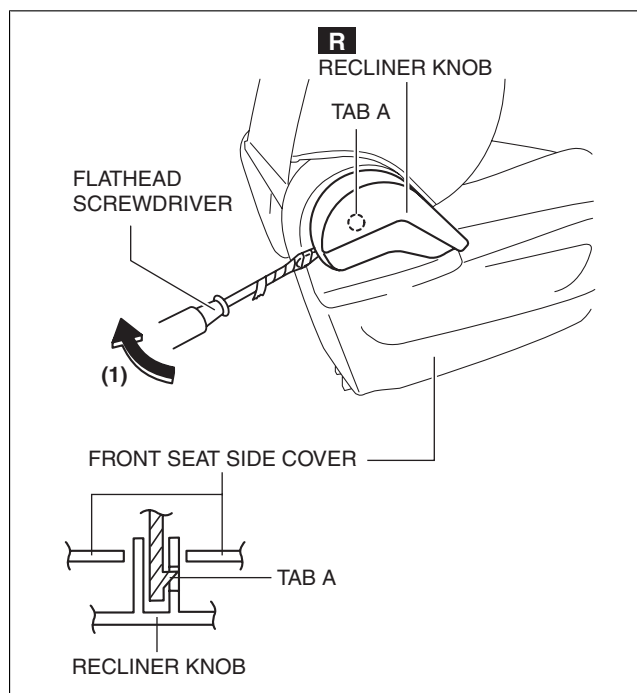


4. Using a tape-wrapped flathead screwdriver, detach tab B in the direction of arrows (2) shown in the figure. (with lever type recliner knob)

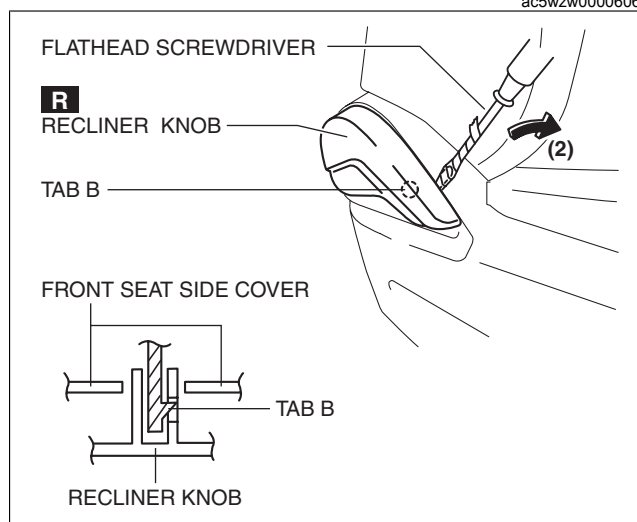

5. Remove the recliner knob in the direction of the arrow (3) shown in the figure. (with lever type recliner knob)

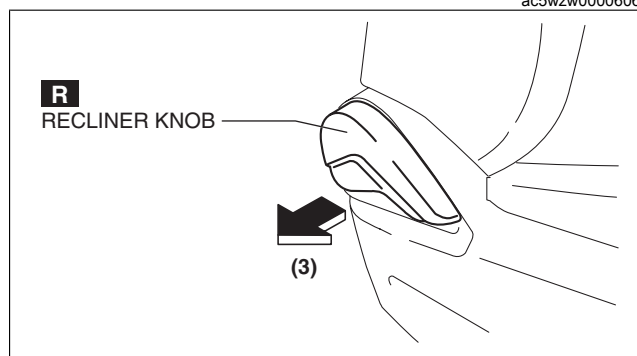


6. Remove the clip then remove the recliner knob.
(with dial type recliner knob)

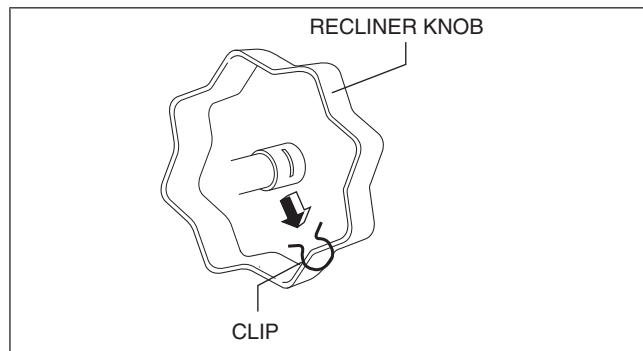


am6zzw00002965

7. Remove the screw. (with dial type recliner knob)

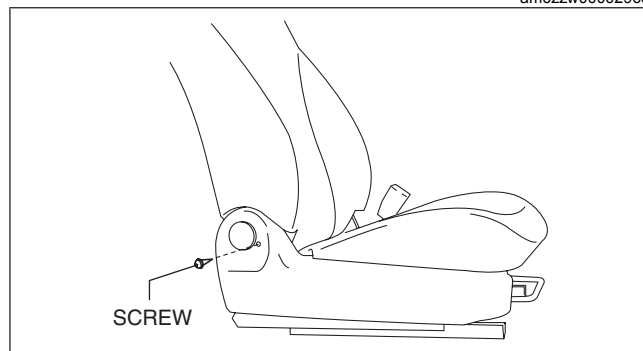

ac5wzw00003163


8. Remove clips C from the front seat cushion frame.

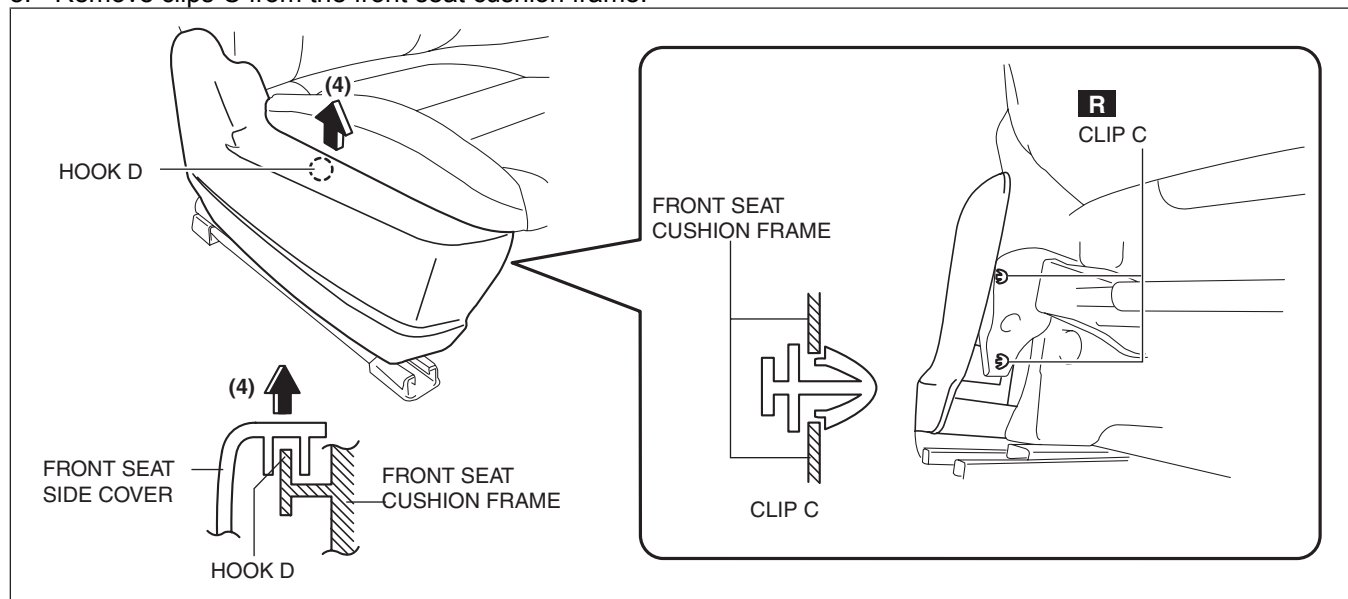

ac5wzw00006064


9. Pull up the front seat side cover in the direction of the arrow (4) shown in the figure and set hook D aside.

10. Pull the front seat side cover in the direction of the arrow (5) shown in the figure and disengage the tabs E and F, and the pin.

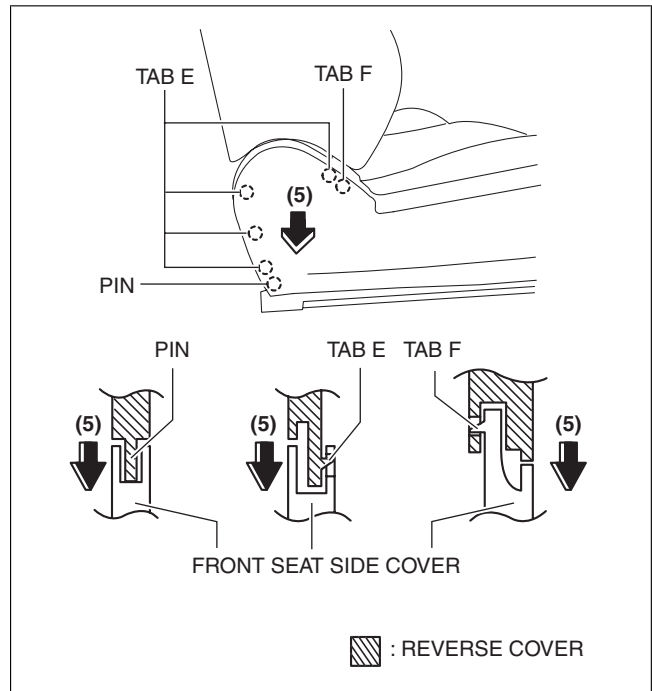

ac5wzw00003197

11. Pull the front seat side cover in the direction of the arrow (6) shown in the figure and set hook G aside.

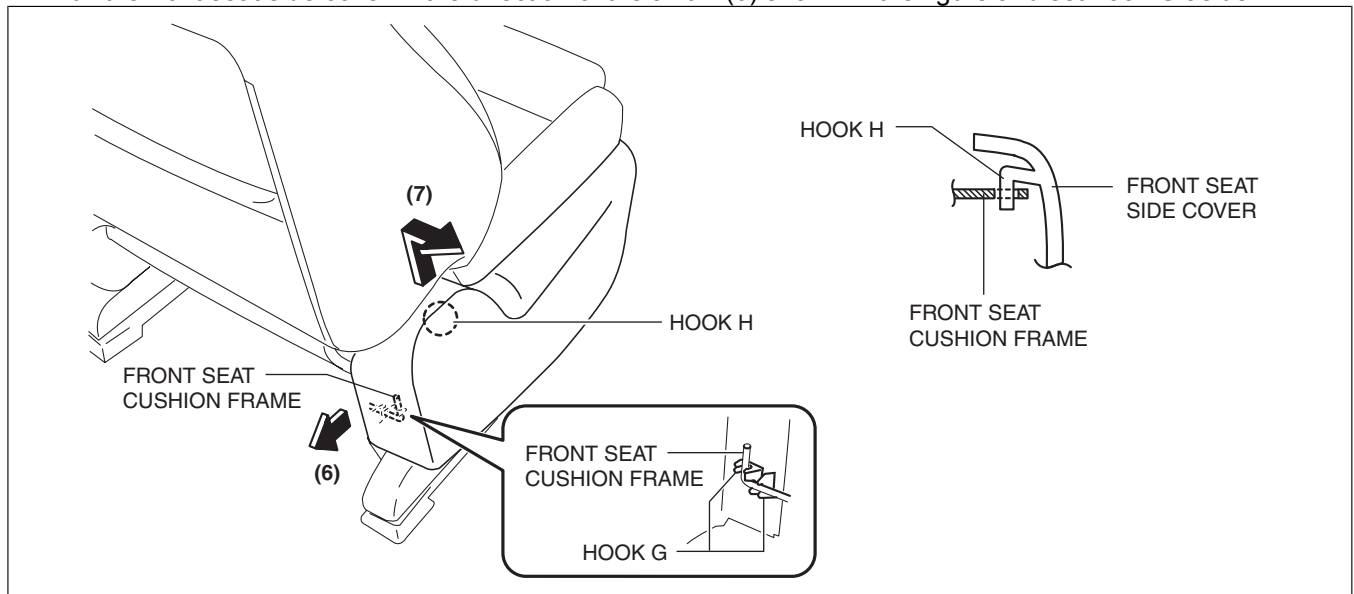


ac5uuw00002013

12. Pull the front seat side cover in the direction of the arrow (7) shown in the figure and set hook H aside.
13. Remove the front seat side cover
14. Install in the reverse order of removal.

Rear Console Side


1. Switch the ignition off (LOCK).
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the front seat. (See FRONT SEAT REMOVAL/INSTALLATION.)

4. Remove screw A.
5. Pull up the front seat side cover in the direction of the arrow (1) shown in the figure and set hook B aside.

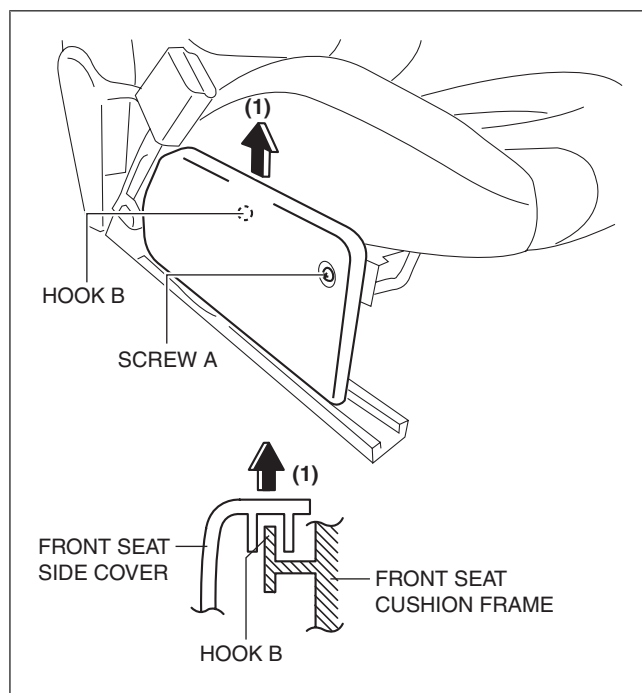


ac5wzw00003753

6. Pull the front seat side cover in the direction of the arrow (2) shown in the figure and disengage the tabs C and D, and the pin.

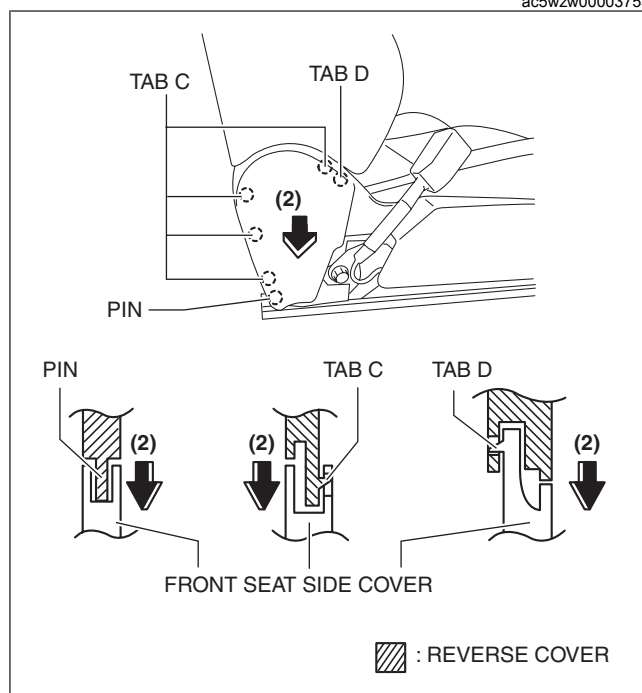

ac5wzw00003198

7. Pull the front seat side cover in the direction of the arrow (3) shown in the figure and set hook E aside.

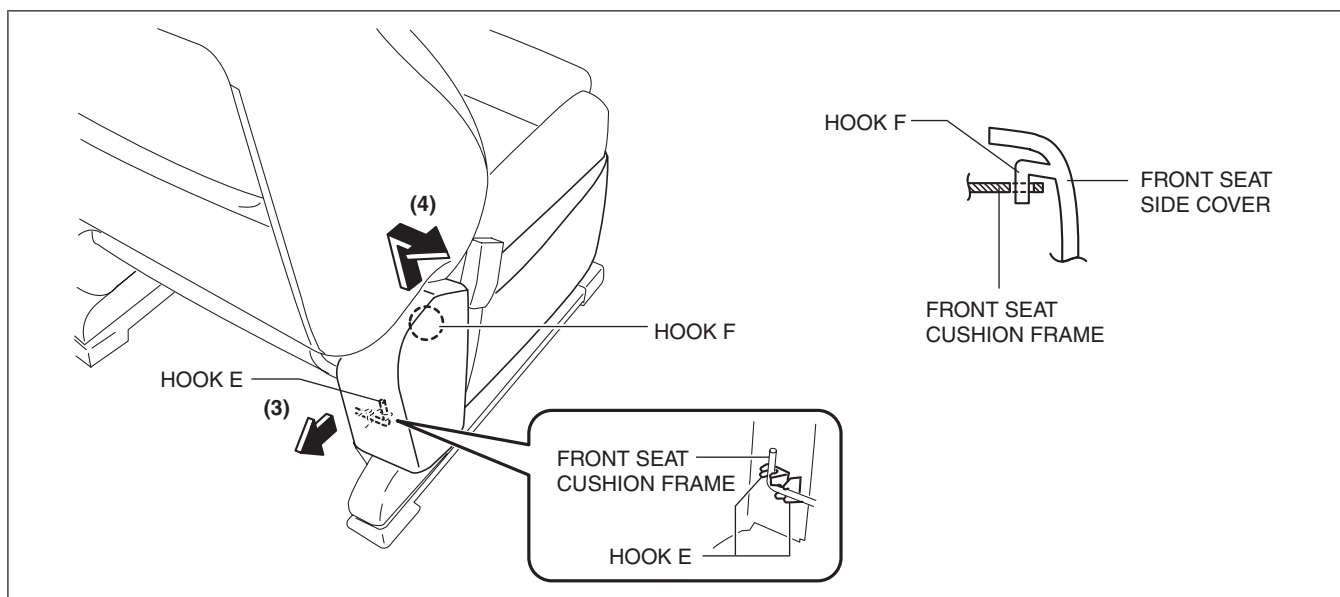

ac5uuw00002023

8. Pull the front seat side cover in the direction of the arrow (4) shown in the figure and set hook F aside.
9. Remove the front seat side cover
10. Install in the reverse order of removal.