


DYNAMIC STABILITY CONTROL LOCATION INDEX

id041500800500


Vehicle front side

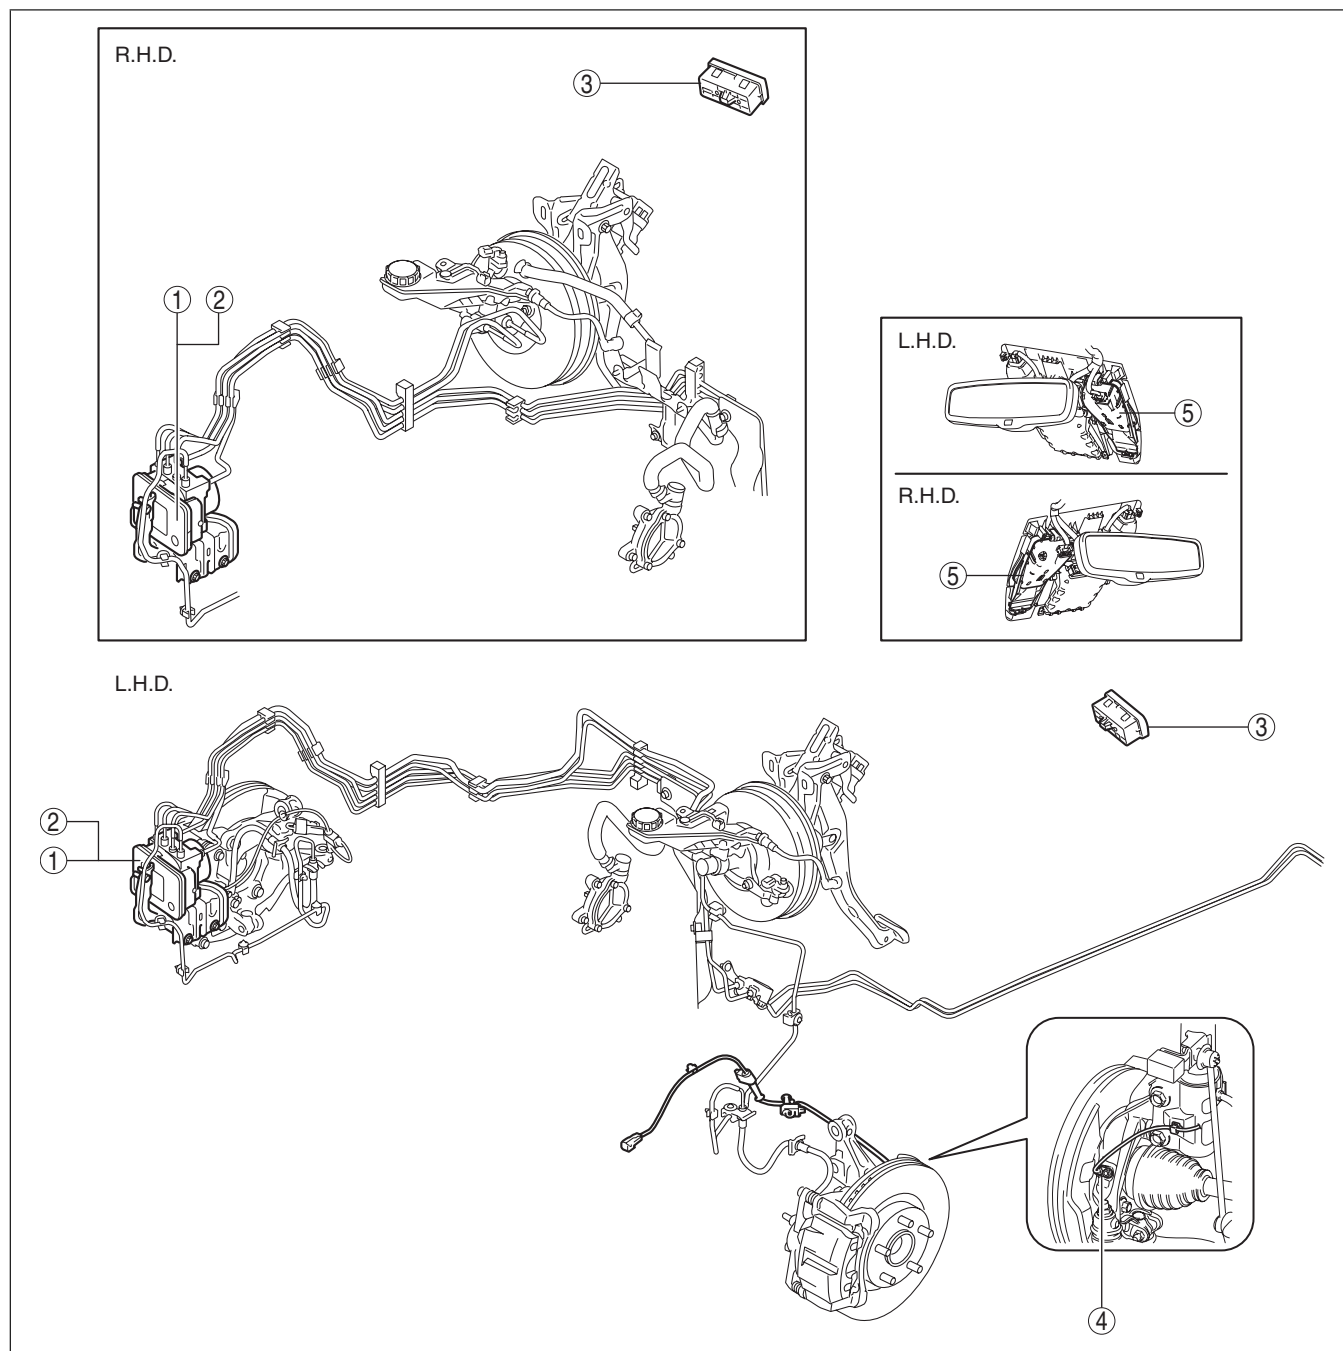

ac5wzw00000851

1	DSC HU/CM (See DSC HU/CM REMOVAL/INSTALLATION.) (See DSC RELATED PARTS SENSOR INITIALIZATION PROCEDURE.) (See DSC HU/CM INSPECTION.)	4	Front ABS wheel-speed sensor (See FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION.) (See FRONT ABS WHEEL-SPEED SENSOR INSPECTION.)
2	Brake fluid pressure sensor (built-into DSC HU/CM) (See BRAKE FLUID PRESSURE SENSOR INSPECTION.) (See DSC RELATED PARTS SENSOR INITIALIZATION PROCEDURE.)	5	Laser sensor (vehicles with smart city brake support (SCBS)) (See LASER SENSOR INSPECTION.) (See LASER SENSOR REMOVAL/INSTALLATION.)
3	TCS OFF switch (See TCS OFF SWITCH REMOVAL/INSTALLATION.) (See TCS OFF SWITCH INSPECTION.)		

Vehicle rear side

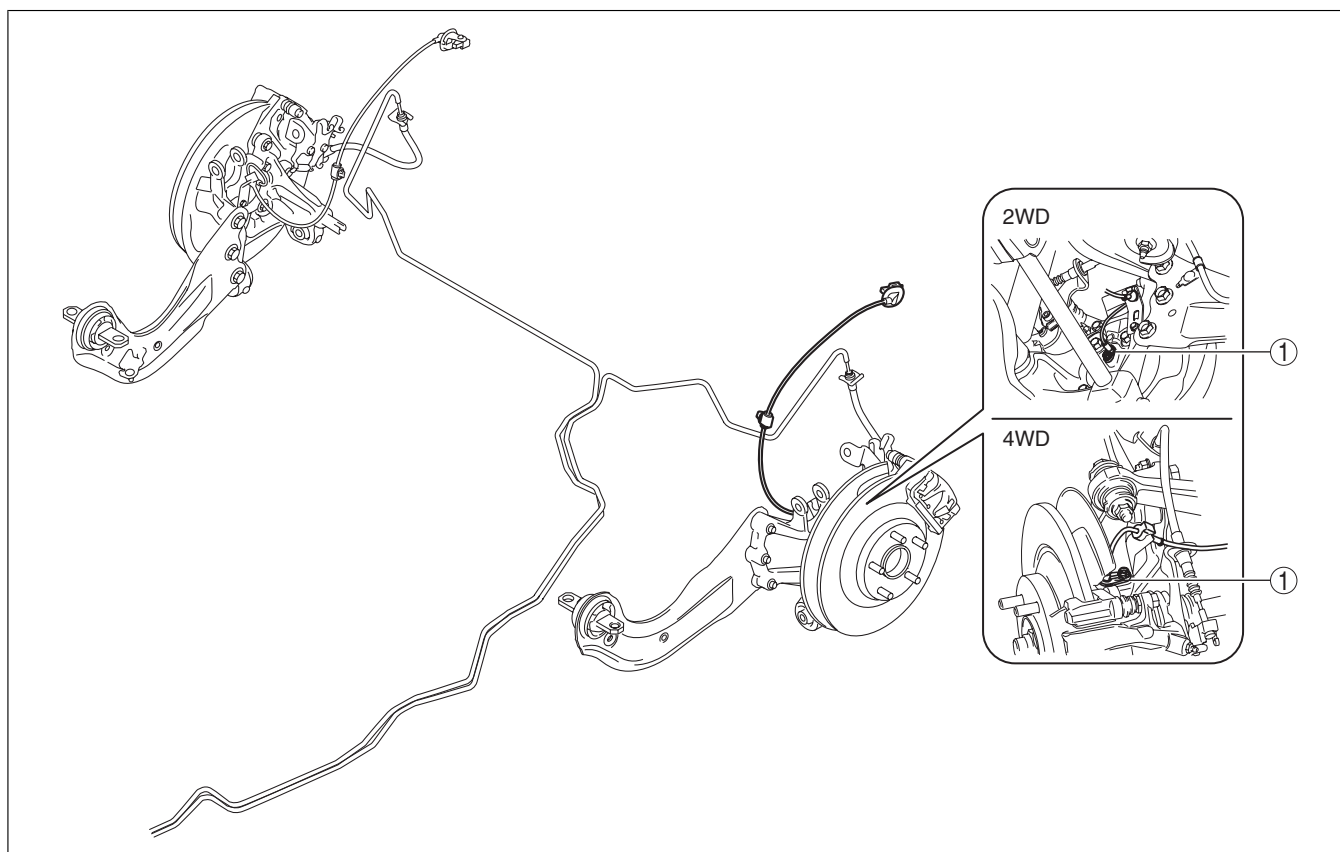

ac5wzw00000852

- | | |
|---|---|
| 1 | Rear ABS wheel-speed sensor
(See REAR ABS WHEEL-SPEED SENSOR
REMOVAL/INSTALLATION.)
(See REAR ABS WHEEL-SPEED SENSOR
INSPECTION [2WD].)
(See REAR ABS WHEEL-SPEED SENSOR
INSPECTION [4WD].) |
|---|---|