


## CLUTCH PEDAL POSITION (CPP) SWITCH INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0140g2801600

### Continuity Inspection

1. Verify that the CPP switch is installed properly. (See CLUTCH PEDAL POSITION SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)
3. Disconnect the CPP switch connector.
4. Verify that the continuity between CPP switch terminals A and B when the clutch pedal is depressed and when it is released is according to the following table:
  - If not as verified, replace the CPP switch. (See CLUTCH PEDAL POSITION SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].)

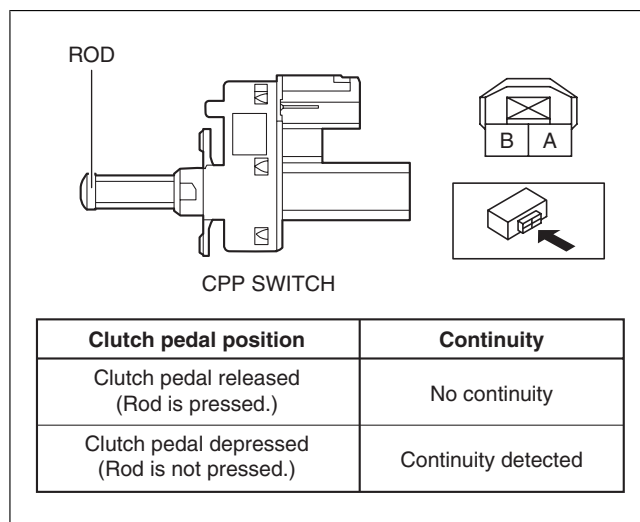

ac5wzw00006331