

PARKING SENSOR BUZZER


id092200024700

Purpose, Function

- Sound is generated based on the signal from the parking sensor control module.

Construction

- The parking sensor buzzers are provided for the front and rear.
- The front parking sensor buzzer is installed inside the instrument cluster.
- The rear parking sensor buzzer is installed inside the liftgate lower trim.

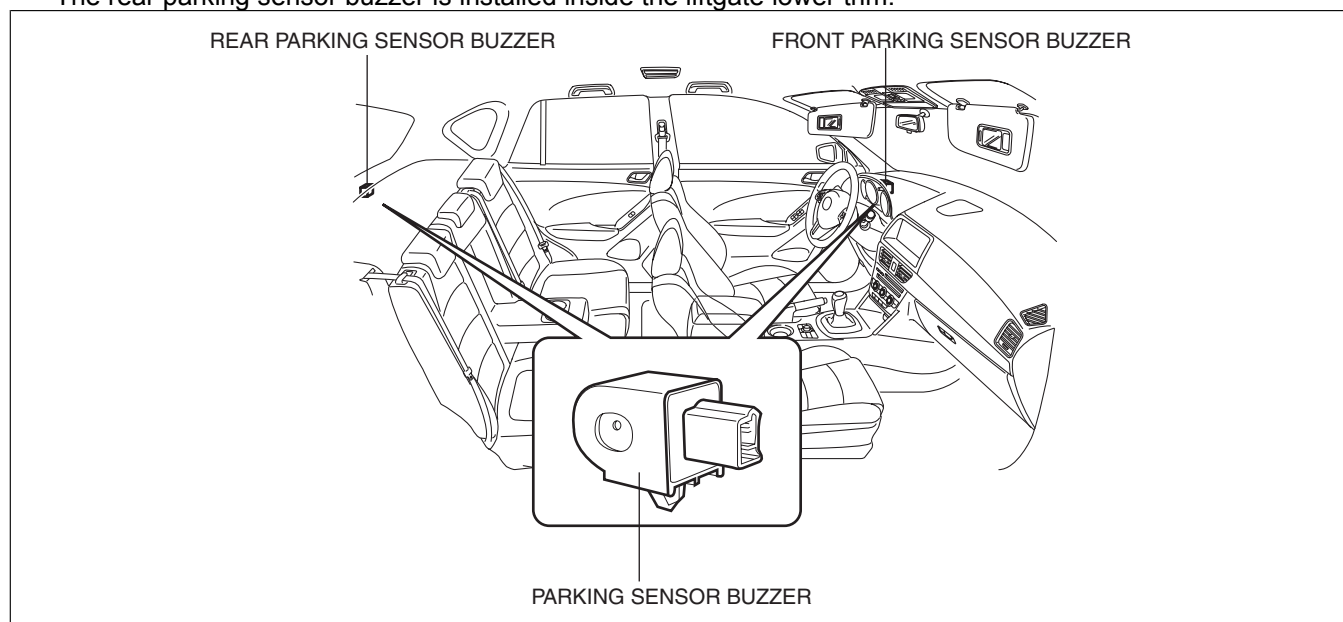

ac5ijn00001522

Operation

- If the front ultrasonic sensor detects an obstruction, the front parking sensor buzzer sounds. If the rear ultrasonic sensor detects an obstruction, the rear parking sensor buzzer sounds. For details on the parking buzzer operation, refer to PARKING SENSOR SYSTEM.

Fail-safe

- Function not equipped.