


AIR FILTER REMOVAL/INSTALLATION

id071100360100

1. Remove the glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
2. Remove the air filter.
3. Install in the reverse order of removal.

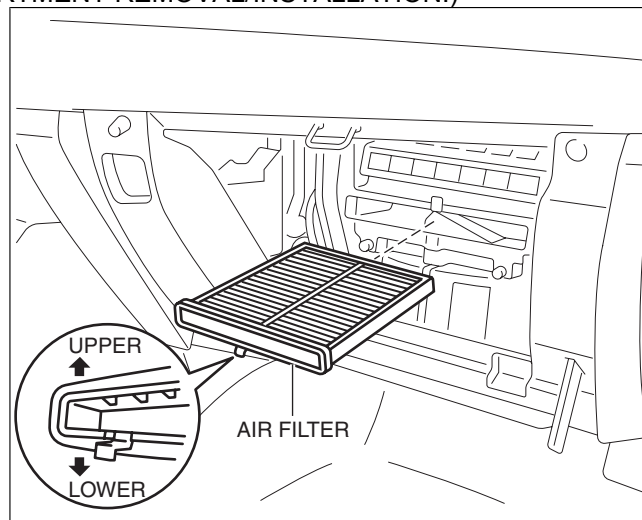

ac5wzw00003534