

CLUTCH [C66M-R, C66MX-R]


id0510mc283600

Purpose, Function

- The clutch unit transmits or cuts the drive force between the engine and manual transaxle according to the clutch pedal operation.

Construction/Operation

- The construction/operation of the clutch unit is the same as the original manual transaxle (ex: G66M-R).

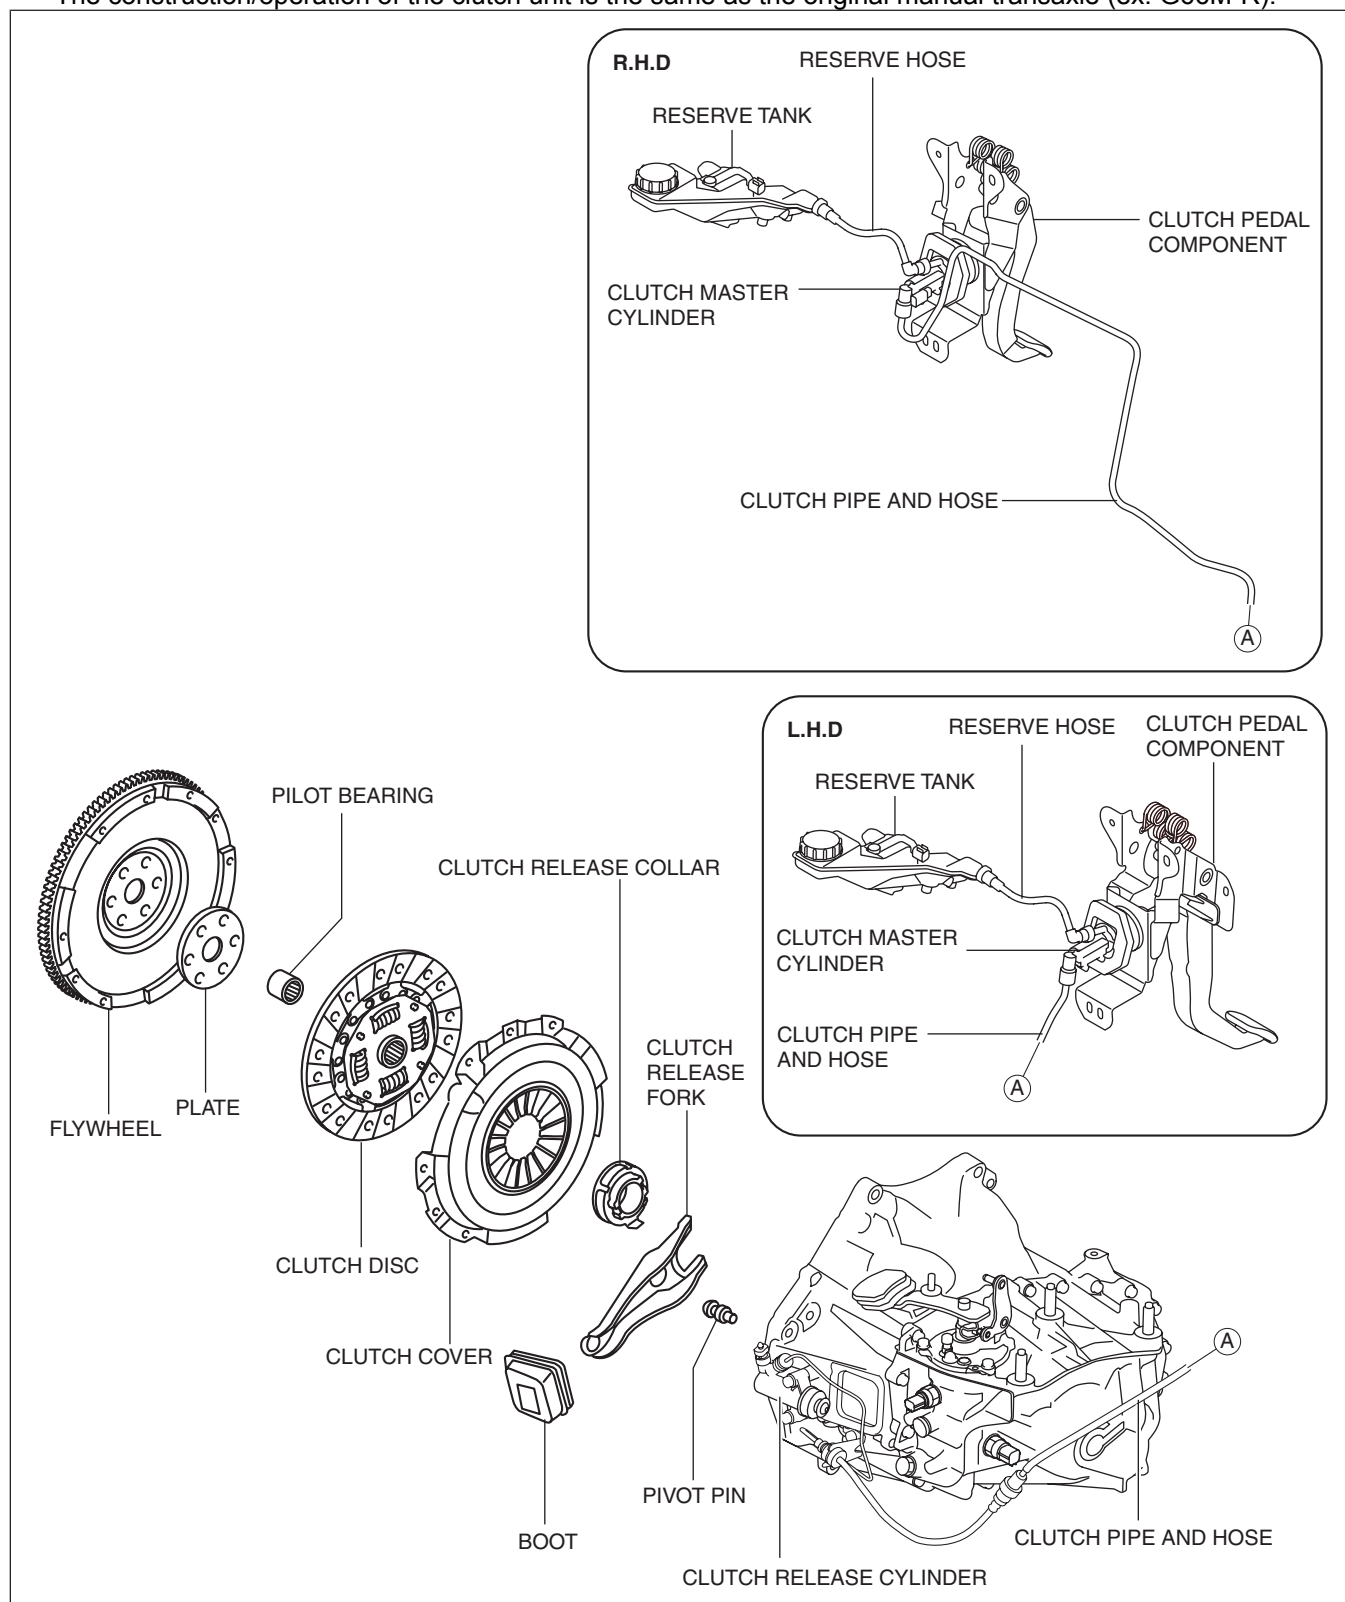

ac5wzn00000322