


REAR WIPER AND WASHER SWITCH INSPECTION

id091900800400

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Column cover (See COLUMN COVER REMOVAL/INSTALLATION.)
 - (2) Wiper and washer switch (See WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.)
3. Verify that the continuity between the rear wiper and washer switch terminals is as indicated in the table.
 - If the continuity is not as indicated in the table, replace the wiper and washer switch. (See WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.)

With wiper and washer switch on right side

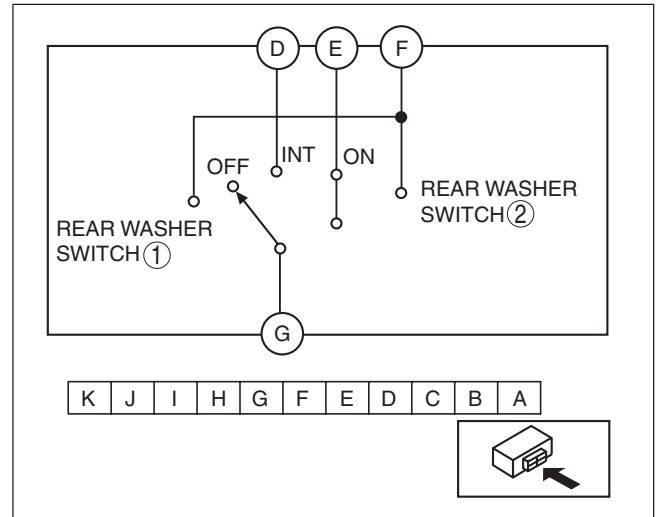


○—○: Continuity

| Switch position | | Terminal | | | |
|--------------------|-----|----------|-----|-----|-----|
| | | G | F | E | D |
| Rear washer ① | ON | ○—○ | | | |
| Rear washer switch | OFF | | | | |
| | INT | ○—○ | ○—○ | | ○—○ |
| | ON | ○—○ | ○—○ | ○—○ | |
| Rear washer ② | ON | ○—○ | ○—○ | ○—○ | |

ac5wzw00004632

With wiper and washer switch on left side

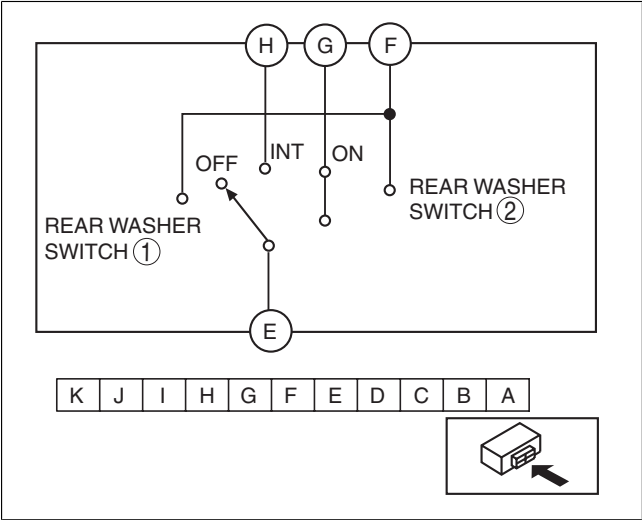

○—○: Continuity

| Switch position | | Terminal | | | |
|--------------------|-----|----------|-----|---|---|
| | | E | F | G | H |
| Rear washer① | ON | ○—○ | | | |
| Rear washer switch | OFF | | | | |
| | INT | ○— | —○ | | ○ |
| | ON | ○— | —○ | ○ | |
| Rear washer② | ON | ○—○ | ○—○ | | |

ac5wzw00001591