


BLOWER MOTOR INSPECTION [MANUAL AIR CONDITIONER]

id0740a2801000

1. Connect battery positive voltage to blower motor terminal B, connect terminal A to ground, and then verify its operation.
 - If there is any malfunction, replace the blower motor.

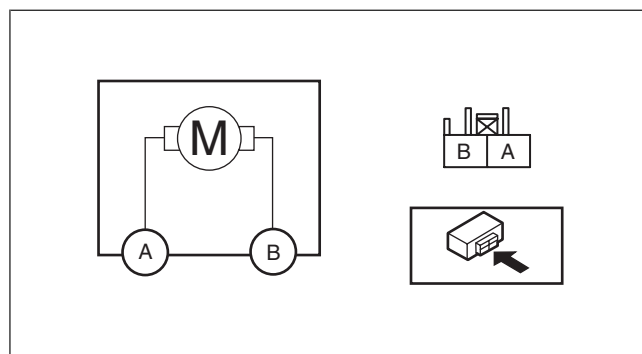

ac5wzw00002777