

KEYLESS BEEPER


id091400109700

Purpose, Function

- Notifies the user that the lock/unlock operation of the advanced keyless entry system is completed, and warns if the system is operated incorrectly.

Construction, Operation

- Installed inside the cowl grille.
- The keyless beeper operates based on the LF control unit signals. For the details of the beeper operation, see [ALERT FUNCTION OPERATION] in ADVANCED KEYLESS ENTRY SYSTEM.

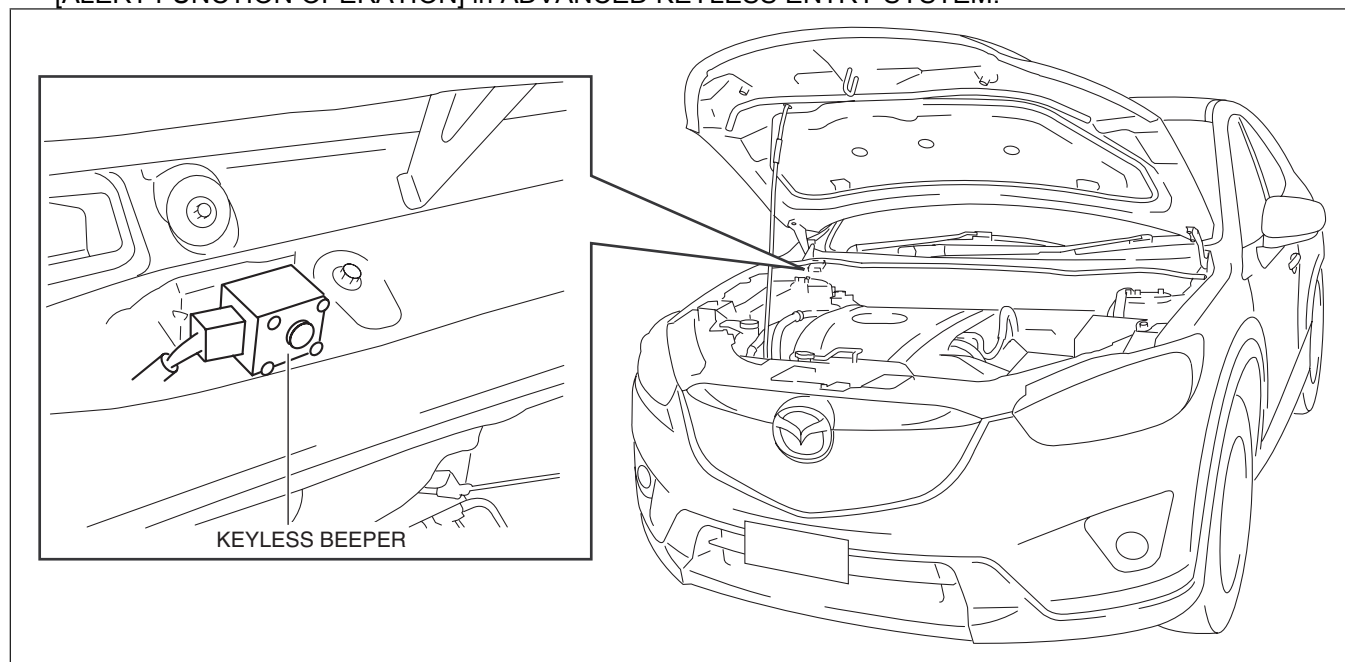

ac5wzn00001554

Fail-safe

- Function not equipped.