

## STARTER [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0119i2108300

### Purpose, Function

- The starter rotates the crankshaft via the ring gear and it serves as a trigger to start the engine.


### Construction

- The starter is installed to the rear part of the engine on the left side.

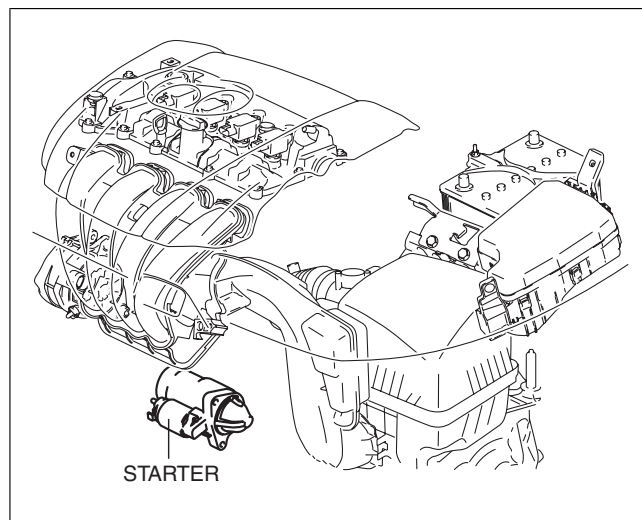

ac5wzn00001032

- The starter is a coaxial reduction type which can obtain high torque.

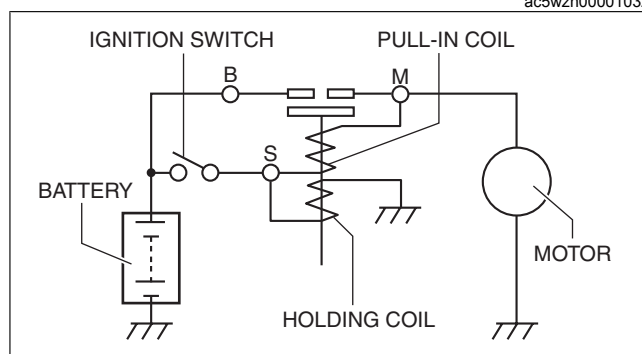

ac5wzn00001033

### Operation

- For starter cut-off control details, refer to CONTROL SYSTEM. (See STARTER CUT-OFF CONTROL [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

### Fail-safe

DTC	Fail-safe
P0A0F:00	• Inhibits engine-stop by operating the i-stop function.(Vehicle with i-stop)