

REAR DOOR MODULE PANEL REMOVAL/INSTALLATION


id091100520900

1. Fully lower the rear door glass.
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the following parts:
 - (1) Rear door trim (See REAR DOOR TRIM REMOVAL/INSTALLATION.)
 - (2) Rear door speaker (See REAR DOOR SPEAKER REMOVAL/INSTALLATION.)
 - (3) Rear door quarter glass (See REAR DOOR QUARTER GLASS REMOVAL/INSTALLATION.)
 - (4) Remove the rear power window motor (See POWER WINDOW MOTOR REMOVAL/INSTALLATION.)
 - (5) Rear door glass (See REAR DOOR GLASS REMOVAL/INSTALLATION.)

Note


- After removing the rear door trim, secure the inner handle using screws so that the procedure is performed smoothly.

4. Detach rear door wiring harness securing clips A, B and C.

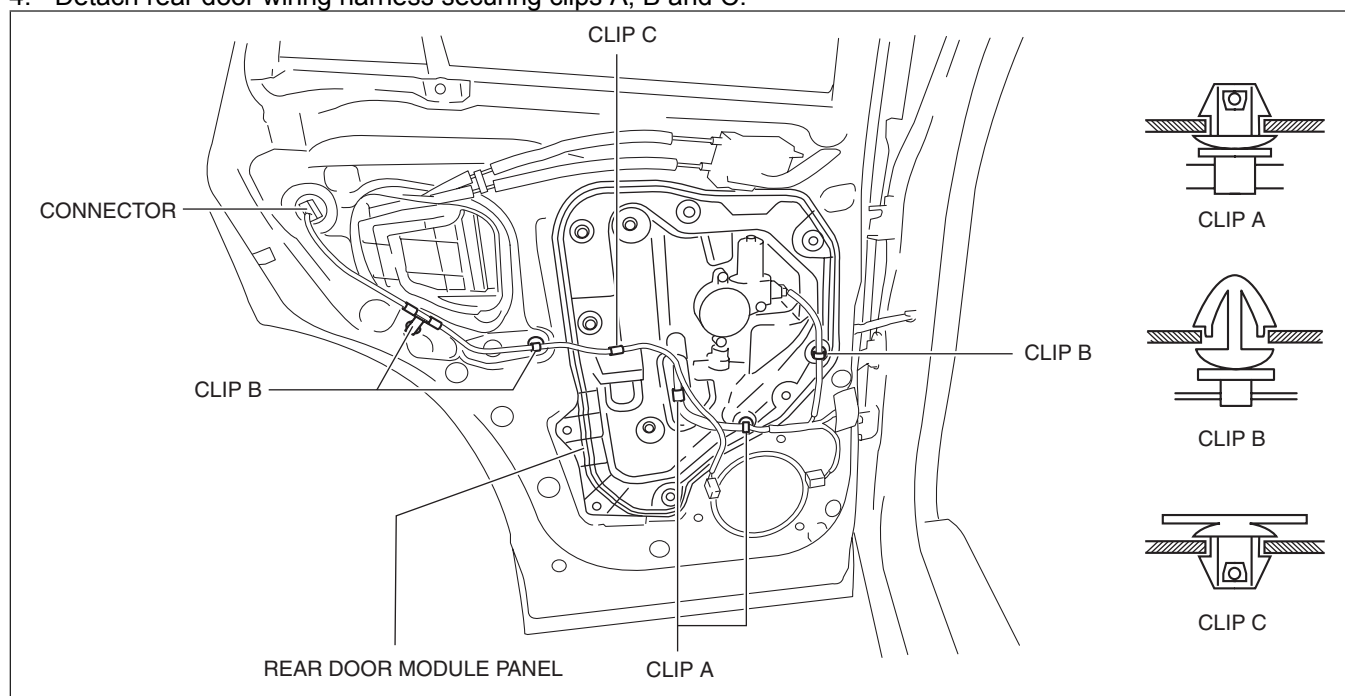

5. Disconnect the connector.
6. Remove screws D.

ac5uuw00000853

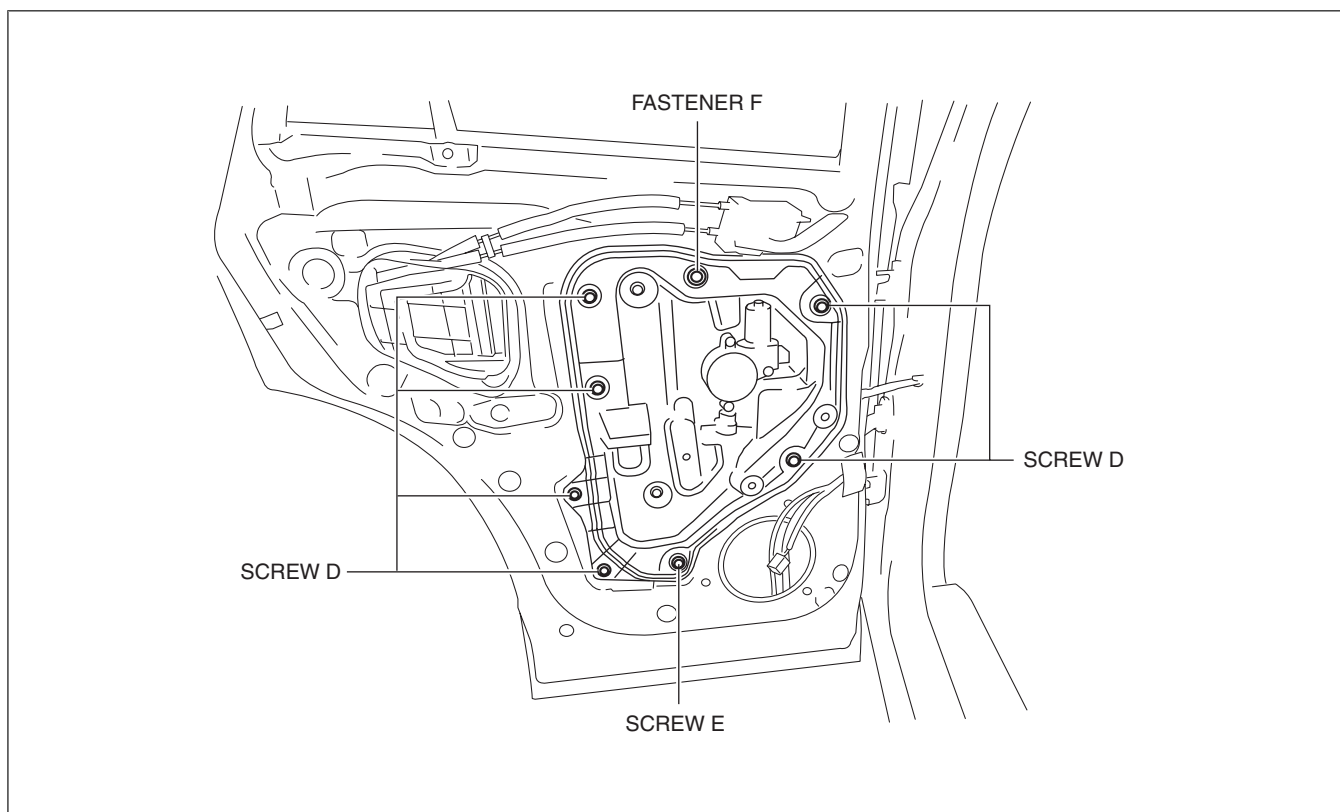


ac5uuw00000854

7. Remove screw E.
8. Remove screw F.
9. Pull the rear door module panel in the direction of arrow (1) shown in the figure and remove the protector and pin from the rear door inner panel.


Caution

- If the protector does not come out easily from the rear door inner panel, pulling the rear door module panel forcibly may cause the rear door module panel to deform. If the protector does not come out easily, remove the rear door module panel while gradually removing the protector.
- If the rear power window regulator contacts the rear door inner panel during the rear door module panel removal, the coating film on the rear door inner panel may get scratched, and the rear door module panel and rear power window regulator could be damaged. Remove the rear door module panel while verifying that the rear power window regulator and the rear door inner panel do not contact each other.

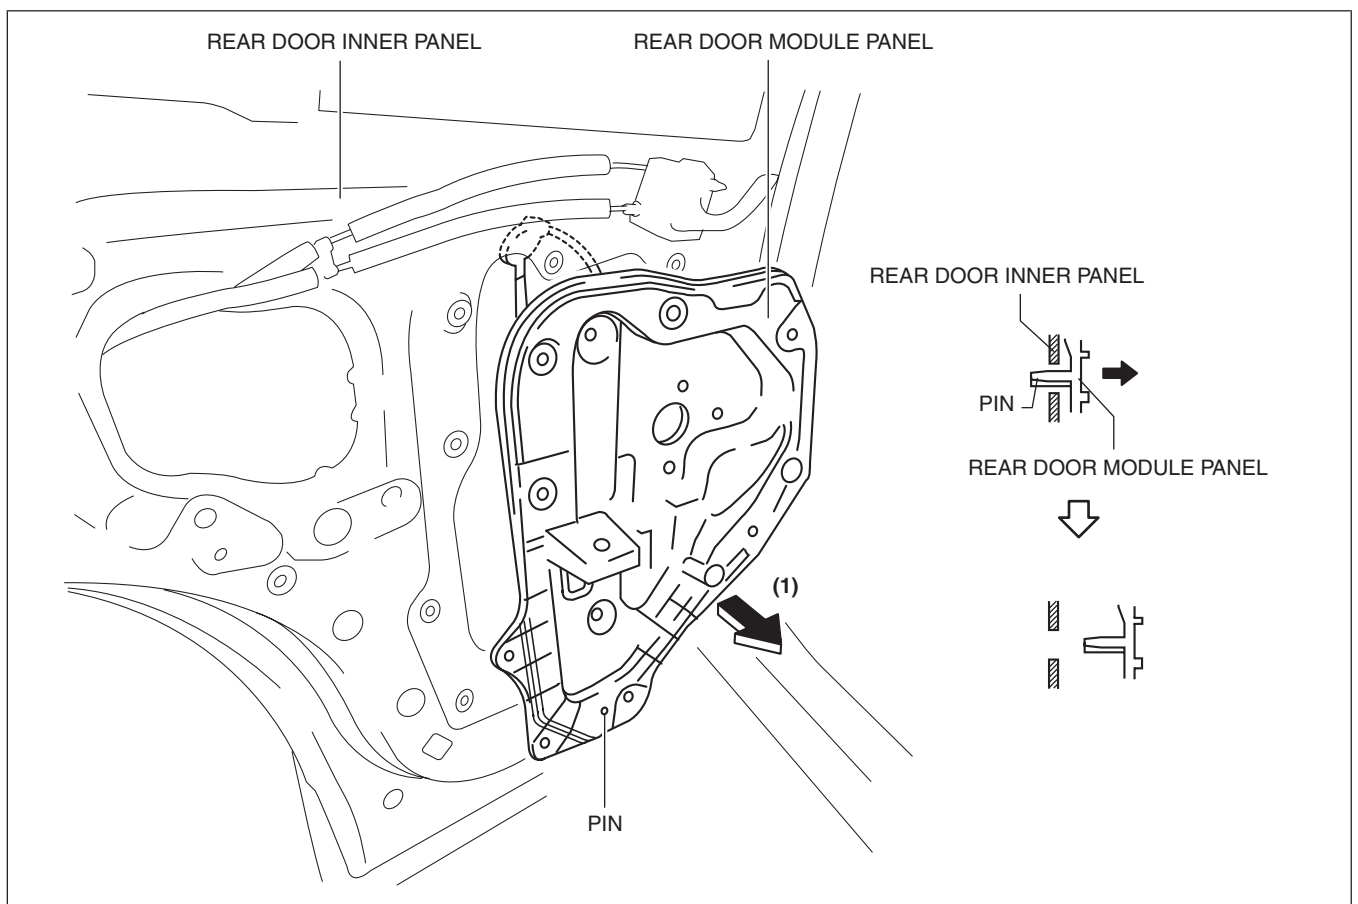

ac5wzw00003080

10. Move the rear door module panel in the direction of arrow (2) shown in the figure so that the upper part of the rear power window regulator does not contact the rear door inner panel, and remove the rear door module panel and the rear power window regulator as a single unit.
11. Remove the rear power window regulator. (See REAR POWER WINDOW REGULATOR REMOVAL/INSTALLATION.)
12. Install in the reverse order of removal.

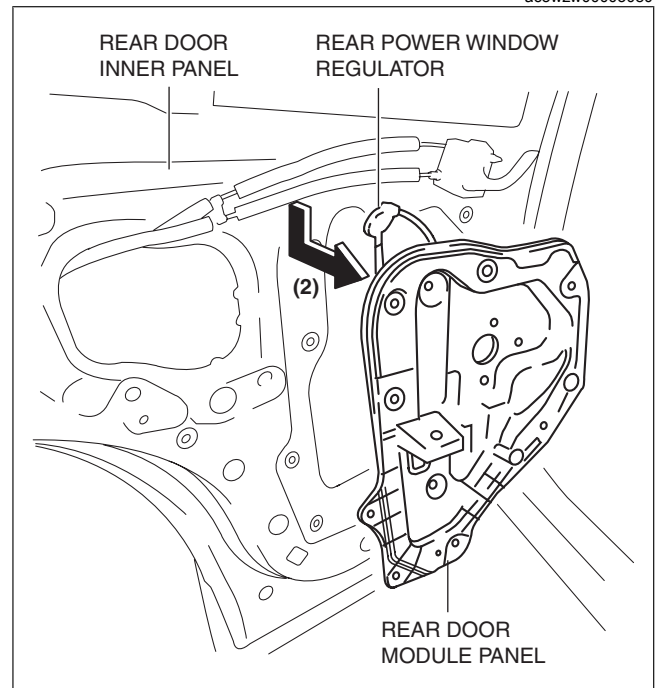

ac5uuw00000856