

REAR SEAT BACK FRAME REMOVAL/INSTALLATION


id091300912500

Caution

- When performing the procedure with a rear seat removed from the vehicle, perform the procedure on a clean cloth so as not to damage or soil the seat.


6:4 Split Type

1. Remove the trunk board. (See TRUNK BOARD REMOVAL/INSTALLATION.)
2. Remove the rear seat back. (See REAR SEAT BACK REMOVAL/INSTALLATION.)
3. Remove the headrest.
4. Open fasteners A.

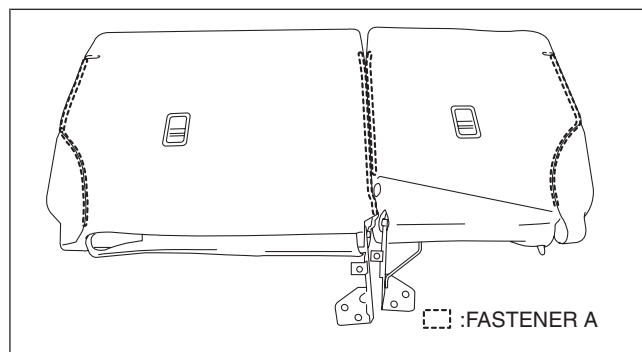


ac5uuw00001925

5. Slide hooks B in the order of the arrows (1) and (2) shown in the figure, and set the rear seat back frames aside.

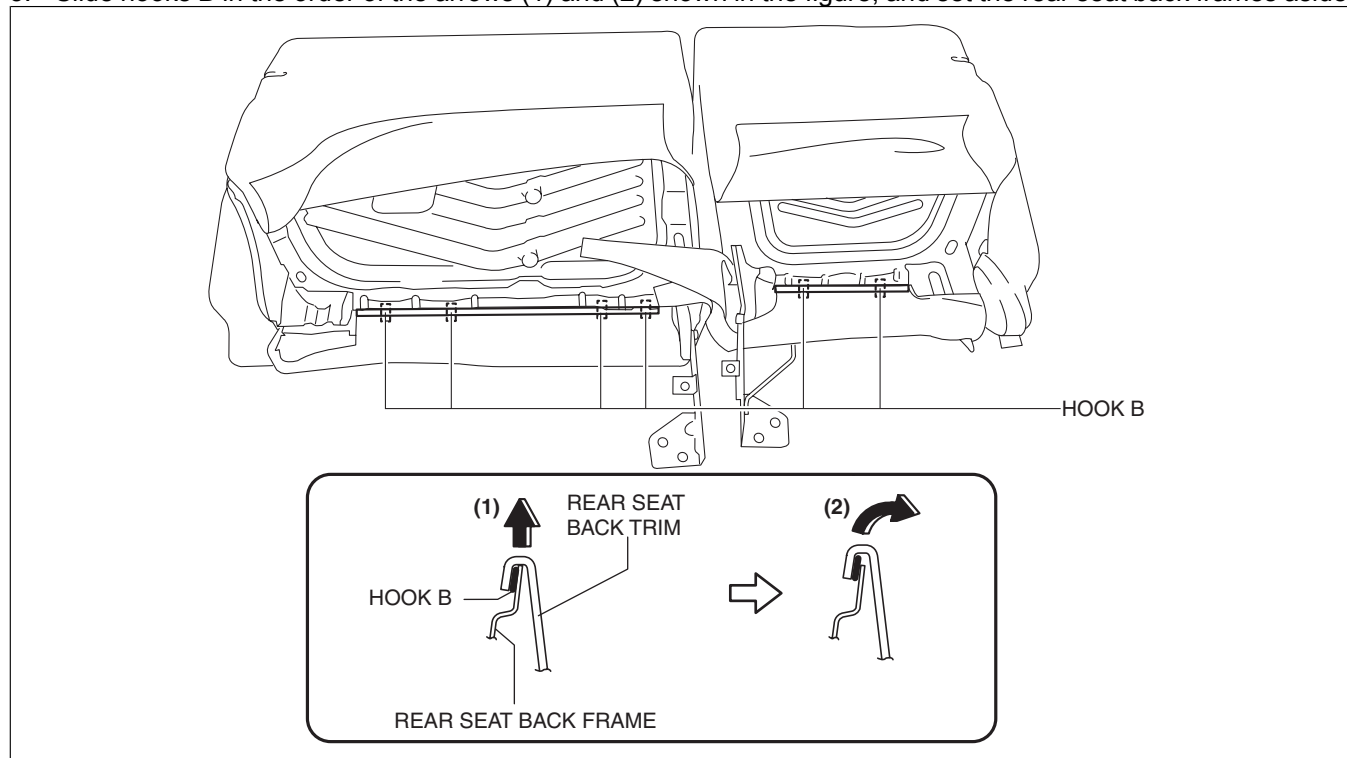


ac5uuw00001926

6. Release tabs C in the direction of the arrow (3) shown in the figure and remove the top tether anchor cover in the direction of the arrow (4).

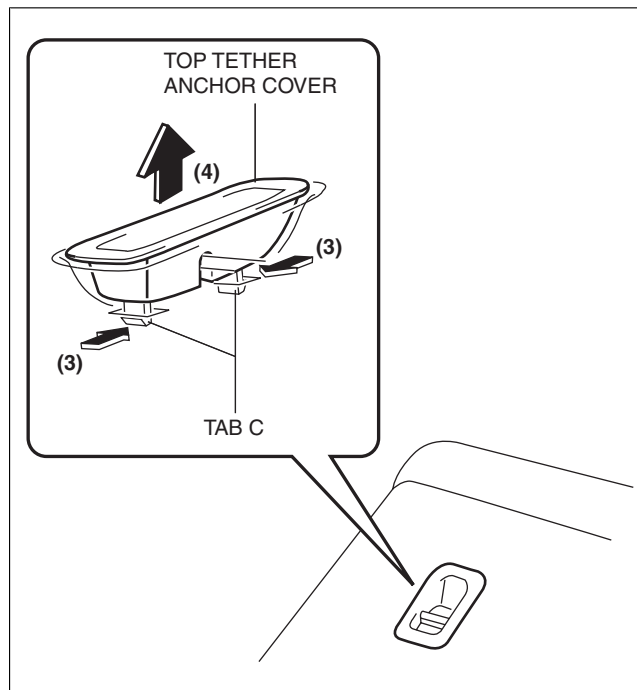


ac5wzw00003118

7. Remove screws A, and remove the seat belt cover in the direction of the arrow (5) shown in the figure while setting hooks D aside.
8. Remove screw B.

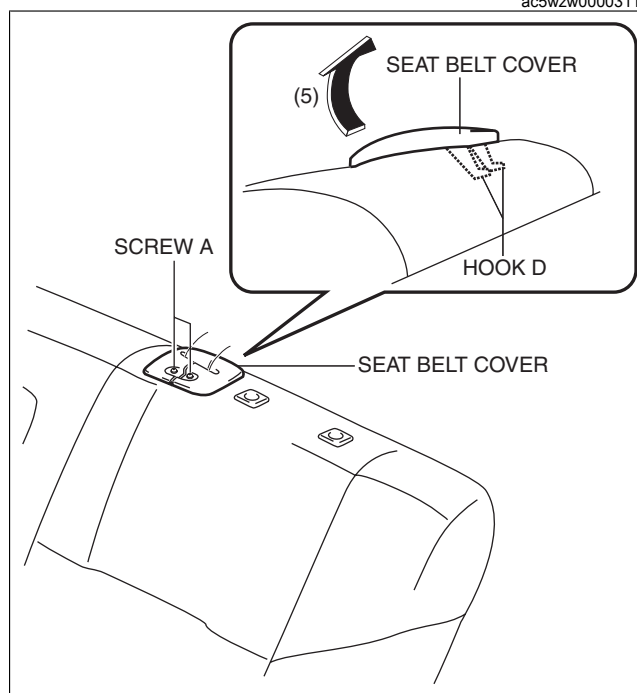


ac5wzw00003202

9. Remove clip E, and remove the push knob cover in the direction of the arrow (6) shown in the figure while setting hook F aside.

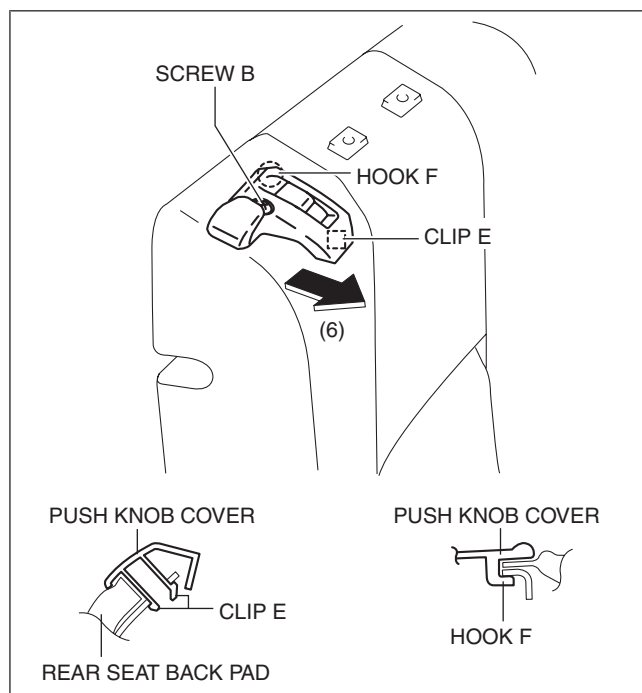


ac5wzw00003203

10. Peel back the rear seat back pad, and pull out the pole guide in the direction of the arrow (7) while releasing the tabs H in the direction of the arrow (8) shown in the figure.

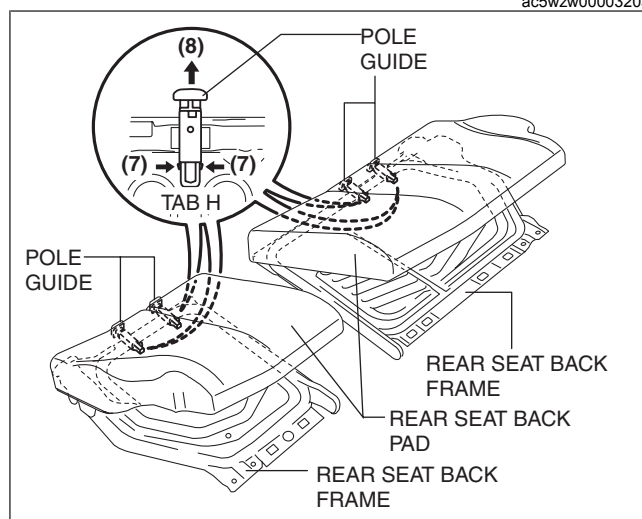


ac5wzw00003131

11. Pull the rear seat back frame in the direction of the arrow (9) shown in the figure, and remove it from the rear set back pad.

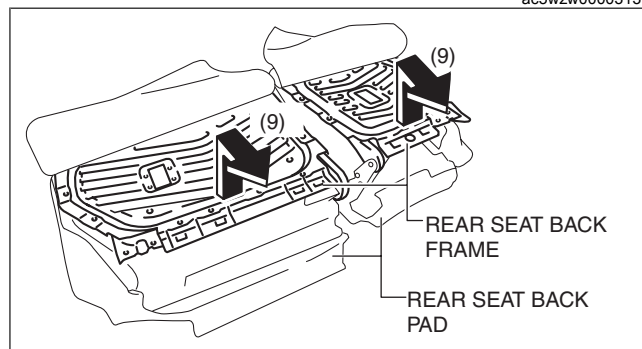


ac5wzw00003132

12. Remove tabs G in the direction of the arrow (10) shown in the figure and remove the push knob in the direction of the arrow (11).

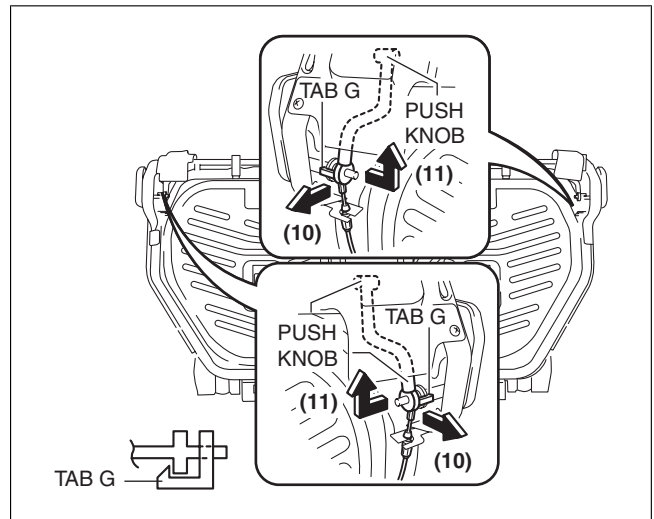


ac5wzw00003133

13. Remove nuts, and then remove the rear center seat belt.

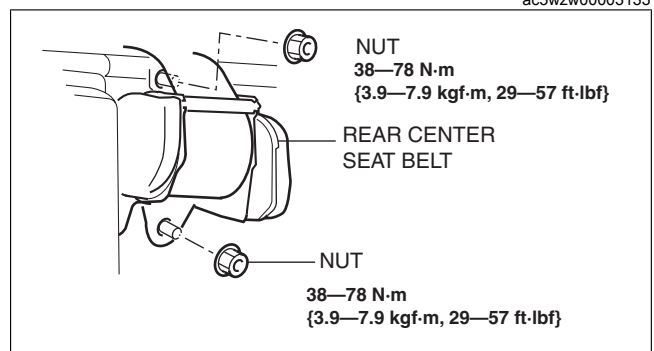

ac5wzw00003124

14. Remove the clips I, and then remove the striker cover in the direction of the arrow (12) while setting hooks J aside.
15. Install in the reverse order of removal.

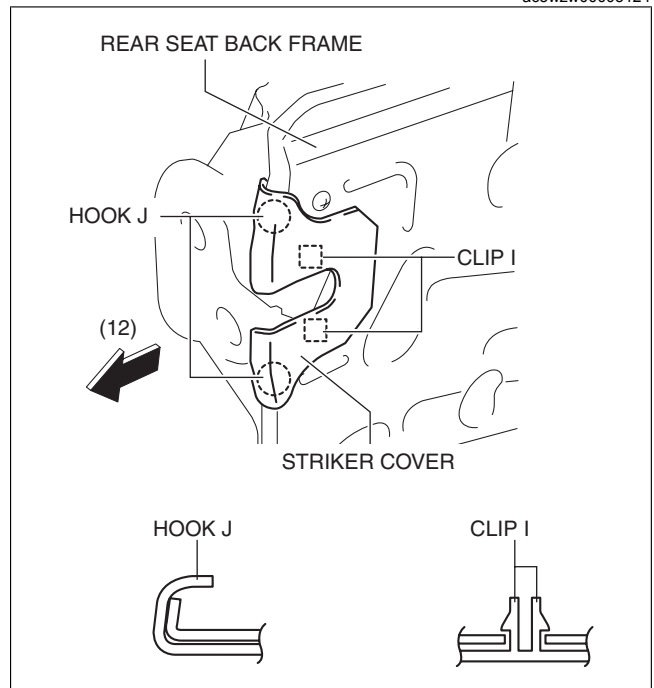


ac5wzw00003204

4:2:4 Split Type


1. Remove the rear seat center armrest. (See REAR SEAT CENTER ARMREST REMOVAL/INSTALLATION.)
2. Remove the rear seat. (See REAR SEAT REMOVAL/INSTALLATION.)
3. Remove the rear seat back. (See REAR SEAT BACK REMOVAL/INSTALLATION.)
4. Remove the headrest.

5. After releasing tab A in the direction of the arrow (1) shown in the figure, release tab B in the direction of the arrow (2) shown in the figure, and remove the rear seat center armrest hinge cover (LH) in the direction of the arrow (3).

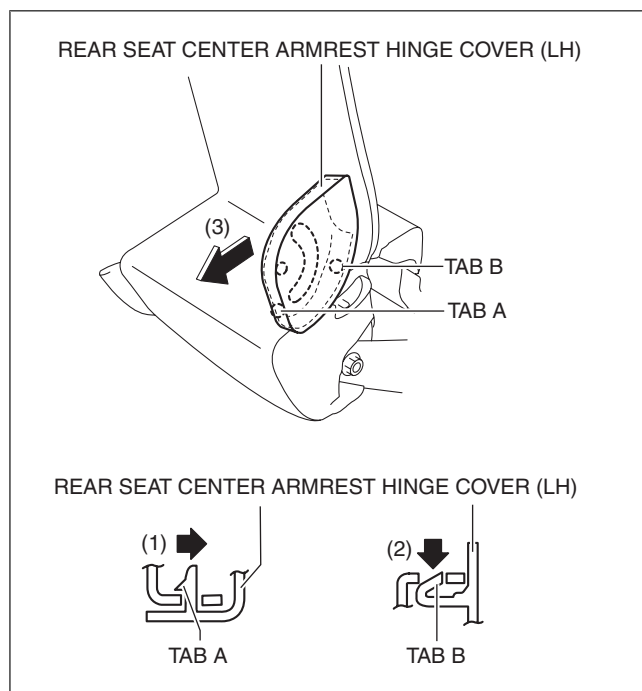


ac5wzw00003205

6. Open fasteners C.

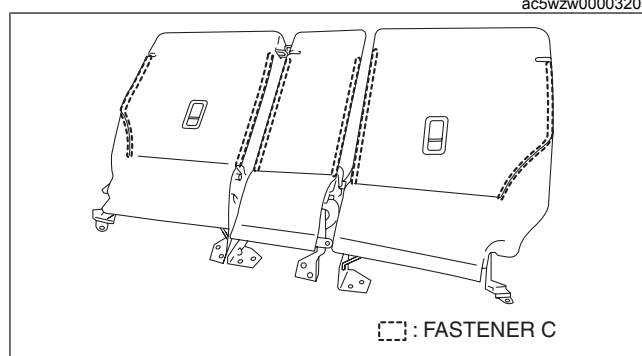


ac5uuw00001936

7. Slide hooks D in the order of the arrows (4) and (5) shown in the figure, and set the rear seat back frames aside.

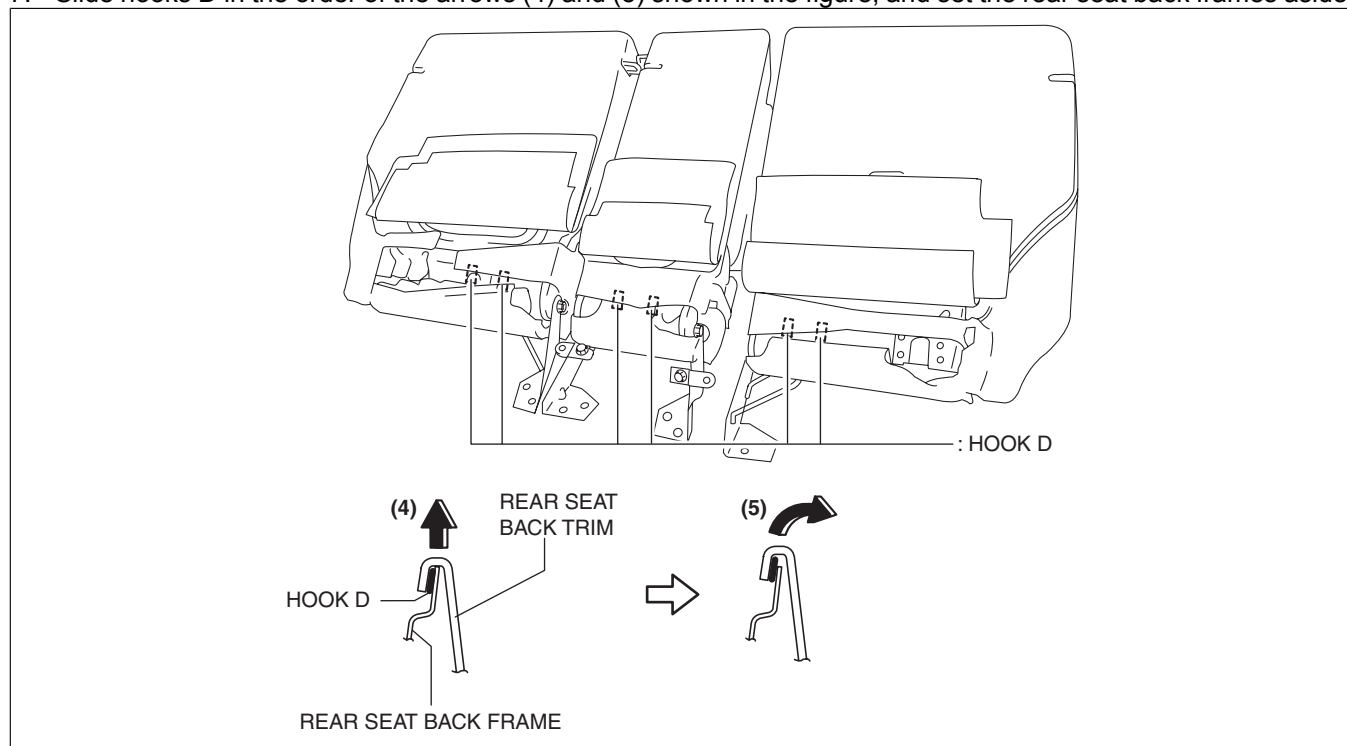


ac5wzw00003754

8. Release tabs E in the direction of the arrow (6) shown in the figure and remove the top tether anchor cover in the direction of the arrow (7).

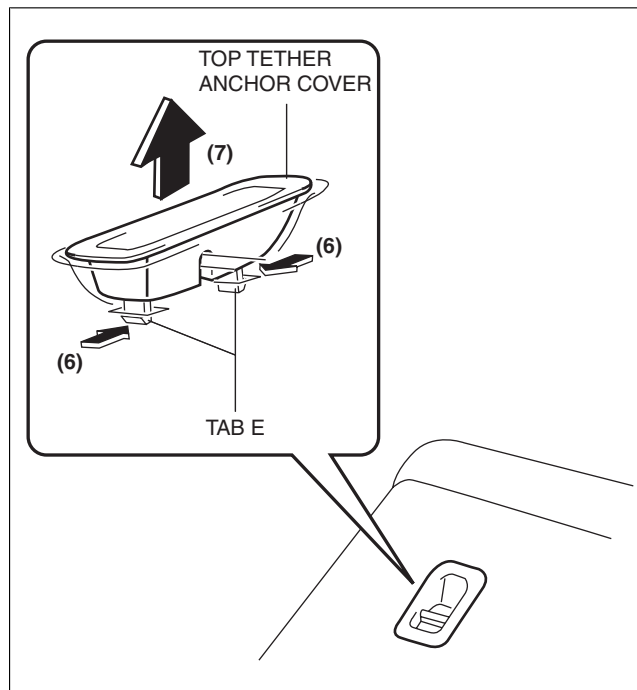


ac5wzw00003120

9. Remove screws A, and remove the seat belt cover in the direction of the arrow (8) shown in the figure while setting hooks F aside.
10. Remove screw B.

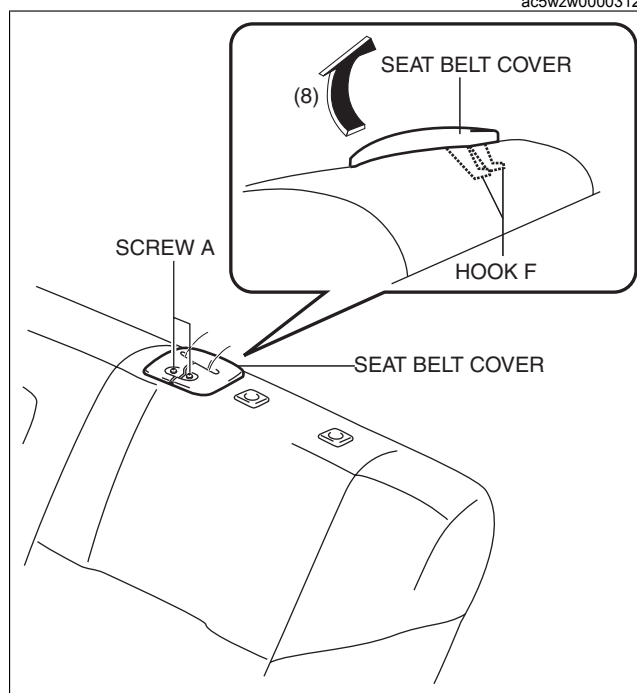


ac5wzw00003206

11. Remove clip G, and remove the push knob cover in the direction of the arrow (9) shown in the figure while setting hook H aside.

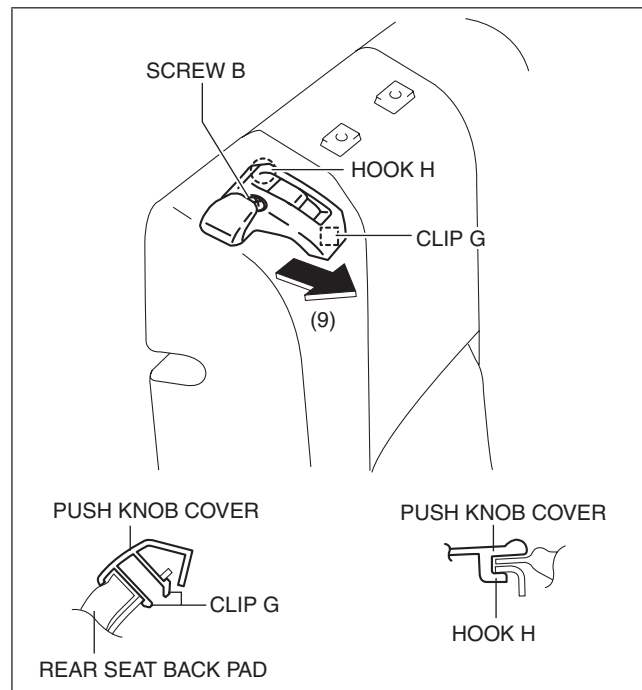


ac5wzw00003207

12. Partially peel back the rear seat back pad, release tabs I in the direction of the arrow (10) shown in the figure and pull out the pole guide in the direction of the arrow (11).

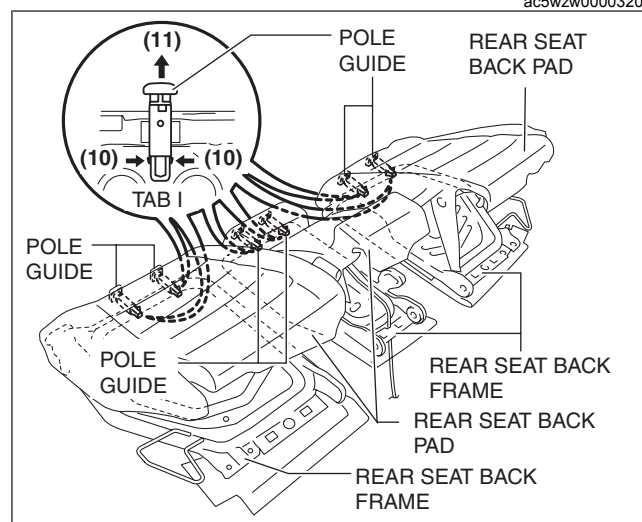


ac5wzw00003134

13. Pull the rear seat back frame in the direction of the arrow (12) shown in the figure, and remove it from the rear set back pad.

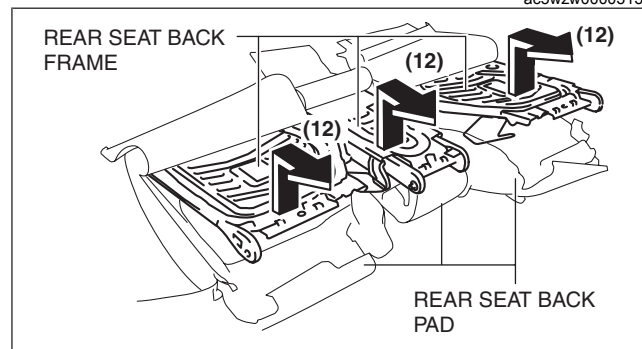


ac5wzw00003135

14. Remove tabs J in the direction of the arrow (13) shown in the figure and remove the push knob in the direction of the arrow (14).

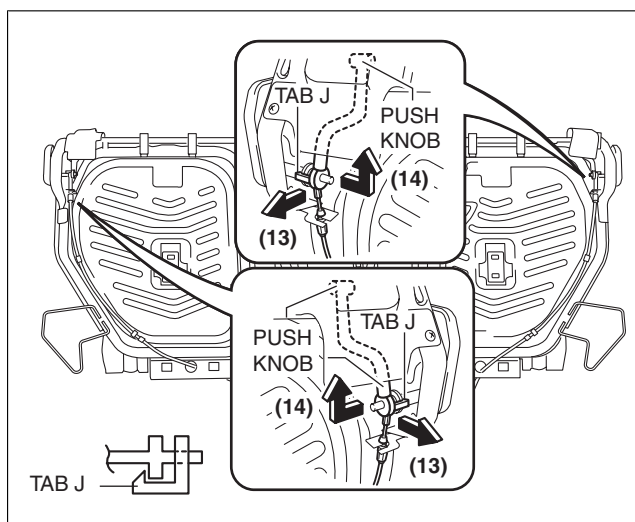


ac5wzw00003136

15. Remove clips K.

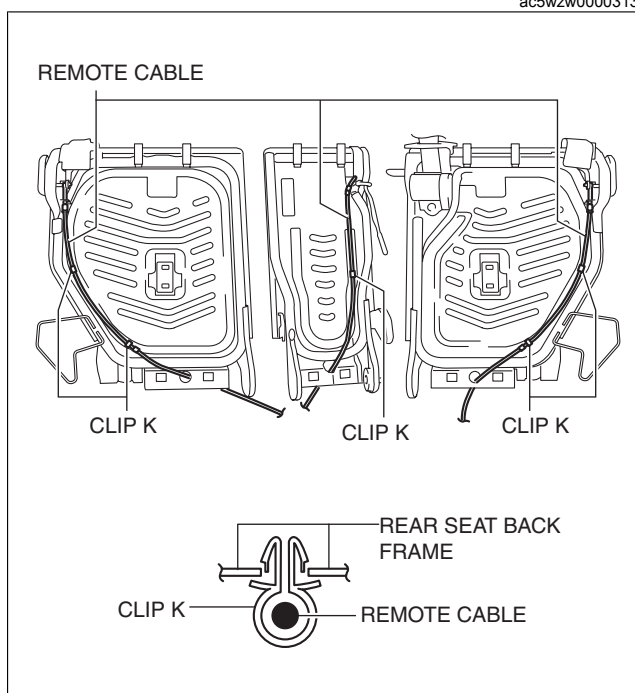


ac5uuw00001944

16. Remove the remote cable in the direction of the arrow (15) and (16) shown in the figure.

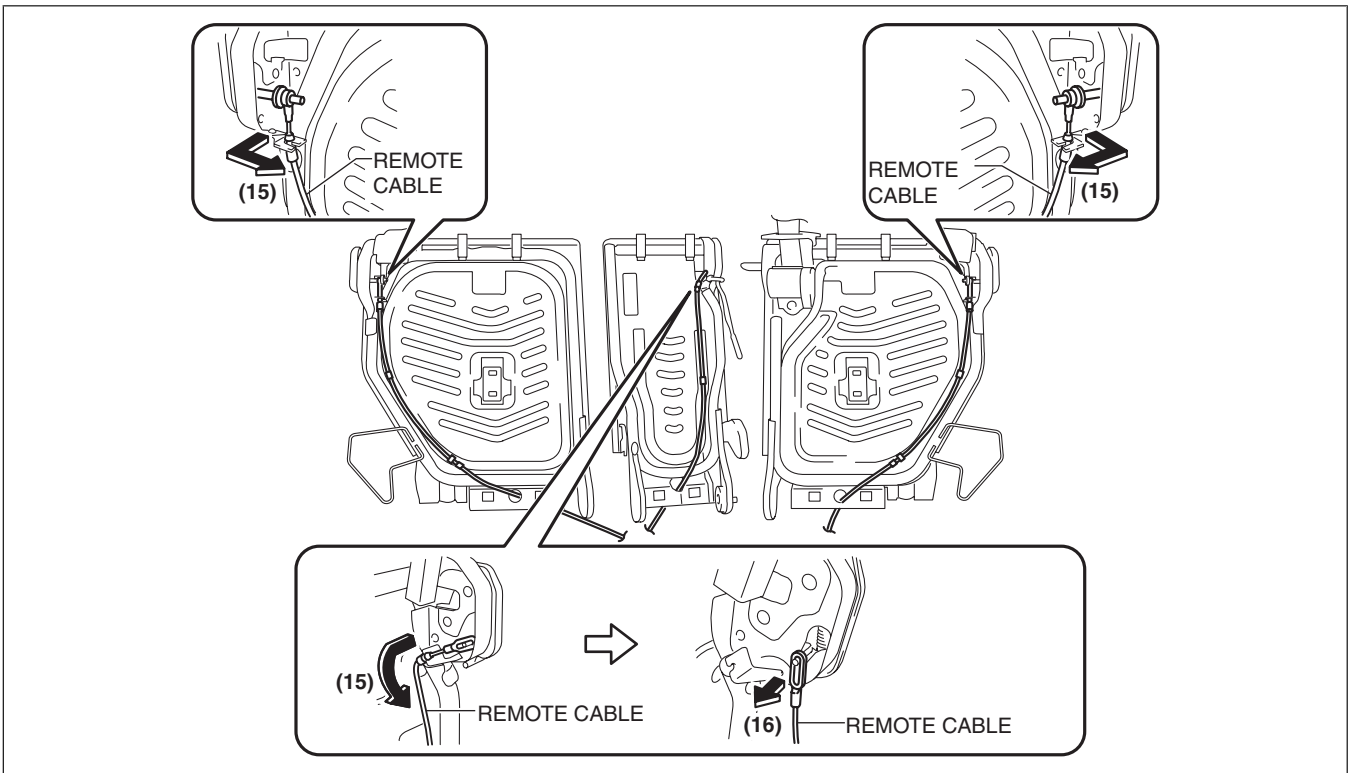


ac5wzw00003187

17. Remove screw C.
18. Remove the strap.

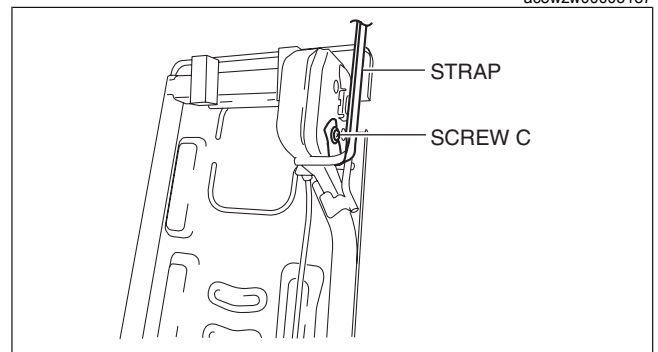


ac5uuw00001946

19. Remove clips L, and then remove the striker cover in the direction of the arrow (17) while setting hooks M aside.

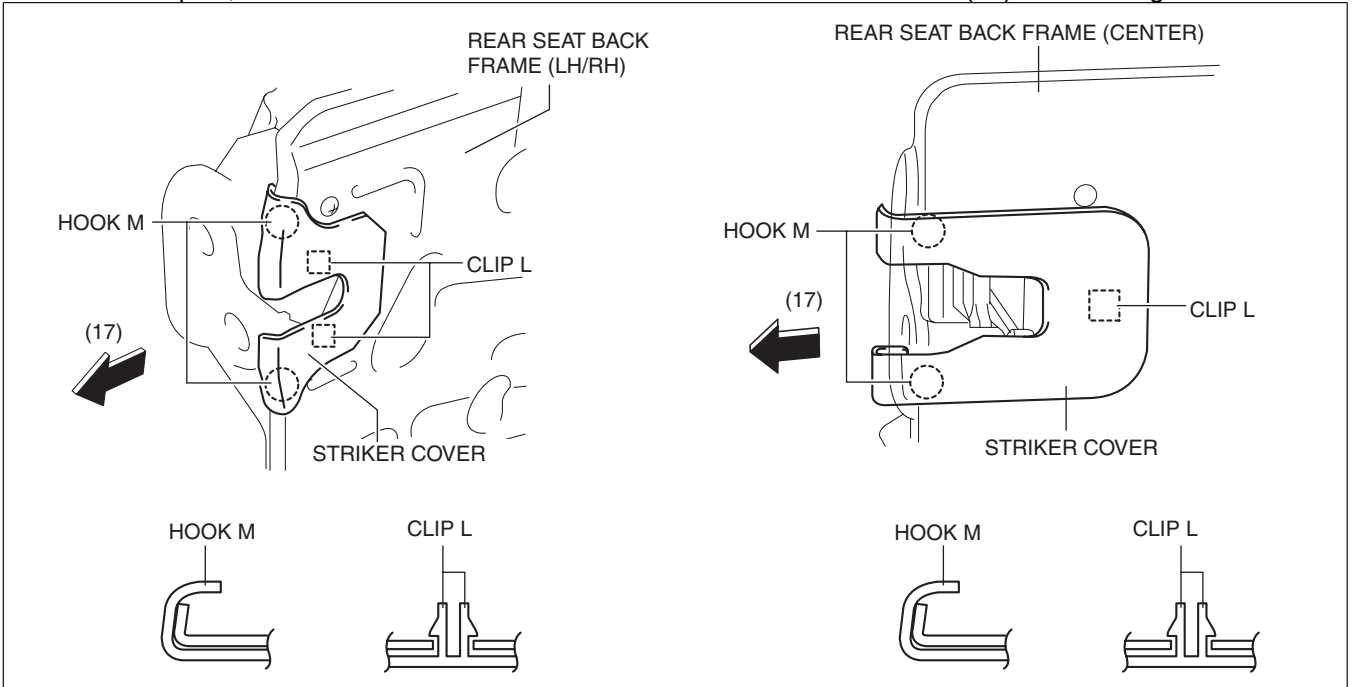

ac5wzw00003208

20. Remove nuts, and then remove the rear center seat belt.
21. Install in the reverse order of removal.

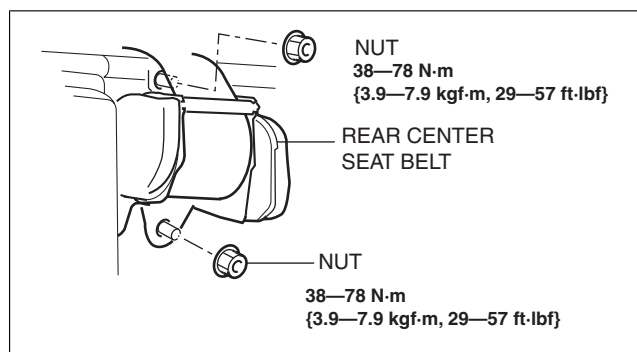

ac5wzw00003124