

## AIR INTAKE ACTUATOR [FULL-AUTO AIR CONDITIONER]


id0740a1320400

### Purpose

- The air intake actuator moves the air intake door in the blower unit to switch the air intake port.

### Function

- The air intake actuator drives the motor based on the signal from the climate control unit and moves the air intake door to the FRESH or REC position.

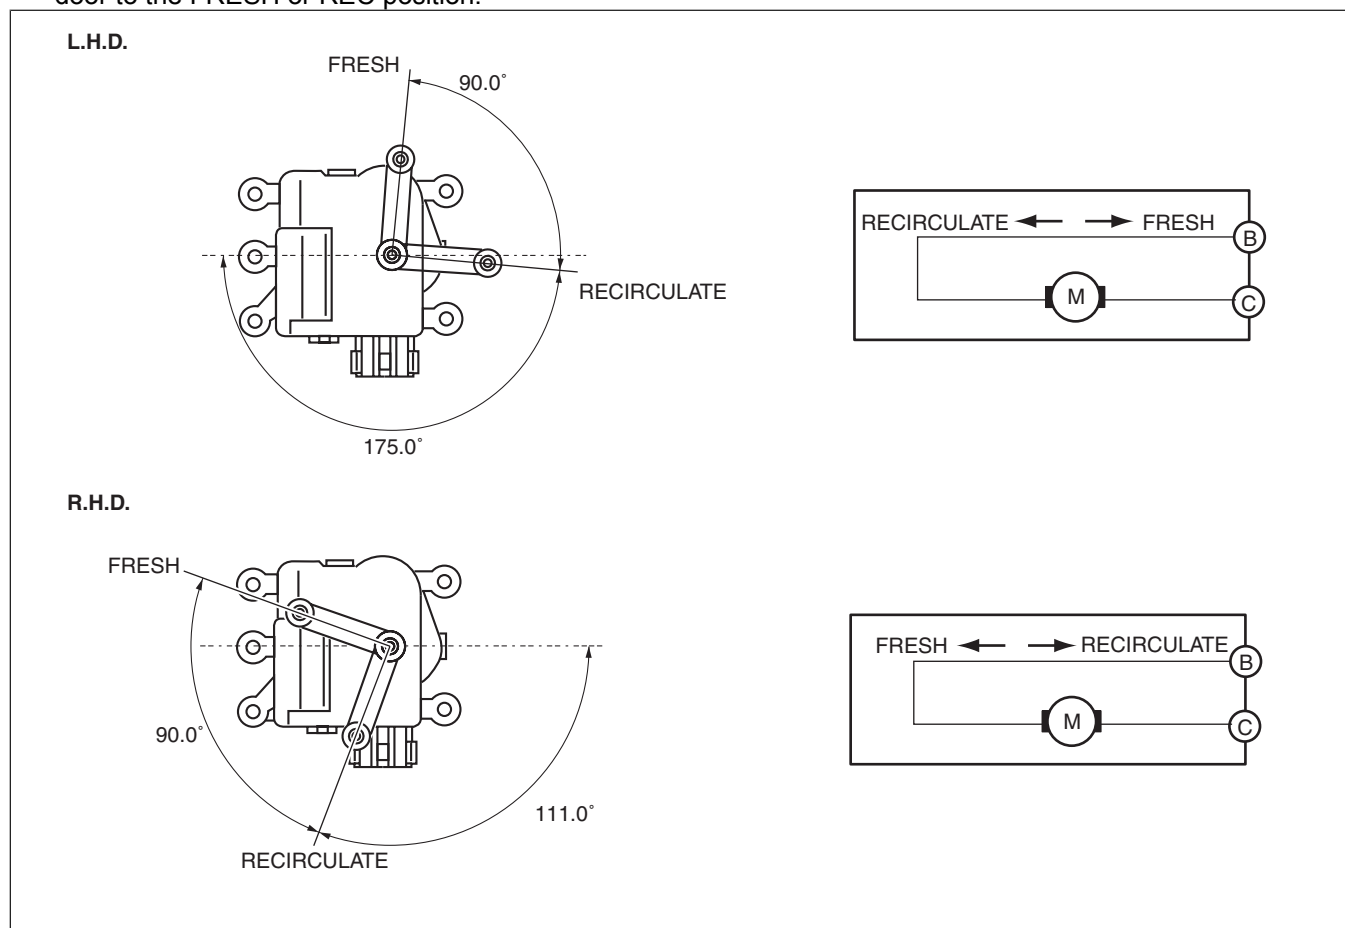

ac5wzn00000712


### Construction

- A mechanical lock type air intake actuator has been adopted.
- The air intake actuator is installed to the blower unit.

### Operation

- The climate control unit outputs a motor drive signal to the air intake actuator based on the air intake mode determined by the air intake control.
- When the air intake actuator moves to FRESH or REC, the motor locks.
- When the motor locks and is under excessive load, the current value flowing from the climate control unit increases more than the specification (lock current).
- When the lock current is detected, the climate control unit stops the motor drive signal to the air intake actuator.

# SWITCHING FROM FRESH TO RECIRCULATE

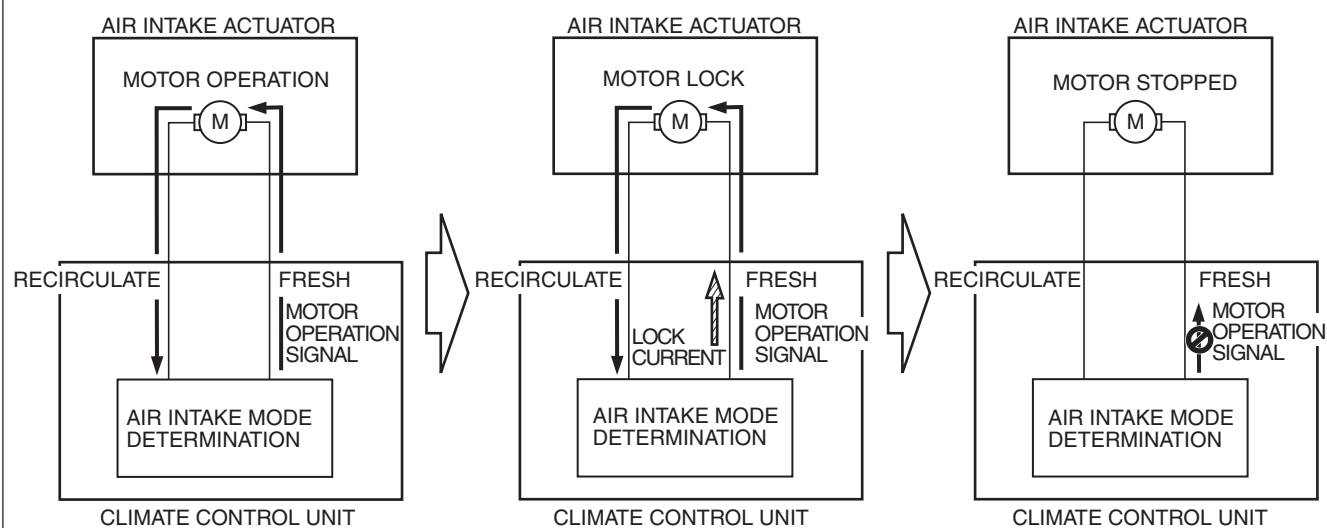

ac5wzn00000713

## Fail-safe

- Function not equipped.