

Caution


- The supply pump is sealed to maintain the function. Therefore, SSTs and tester are required to disassemble the supply pump securely.
- If a malfunction in the supply pump is verified, place a repair order with the DENSO, Ltd. services network (supply pump manufacturer), and do not disassemble the supply pump yourself.

Resistance inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Disconnect suction control valve connector.
3. Measure the resistance between the suction control valve terminals.

Suction control valve resistance (specification) Approx. 2.1 ohms [20 °C {68 °F}]

- If not within the specification, place a repair order with the DENSO, Ltd. services network.

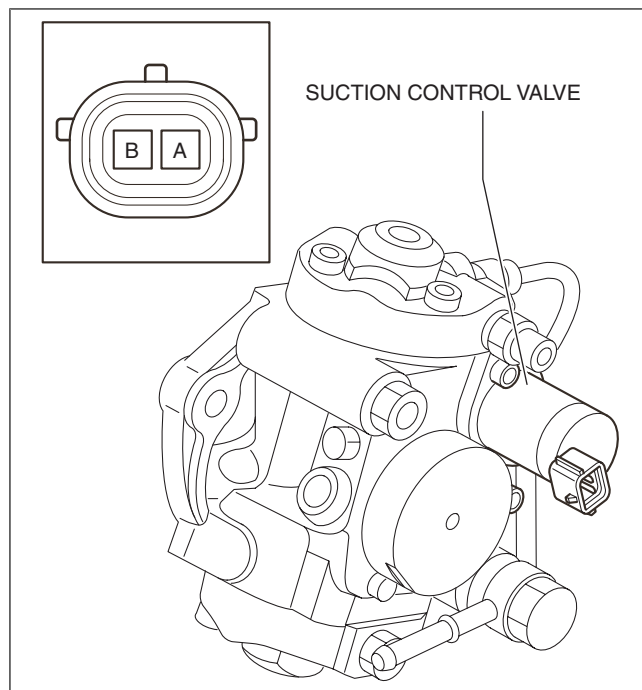

ac5wzw00005332