
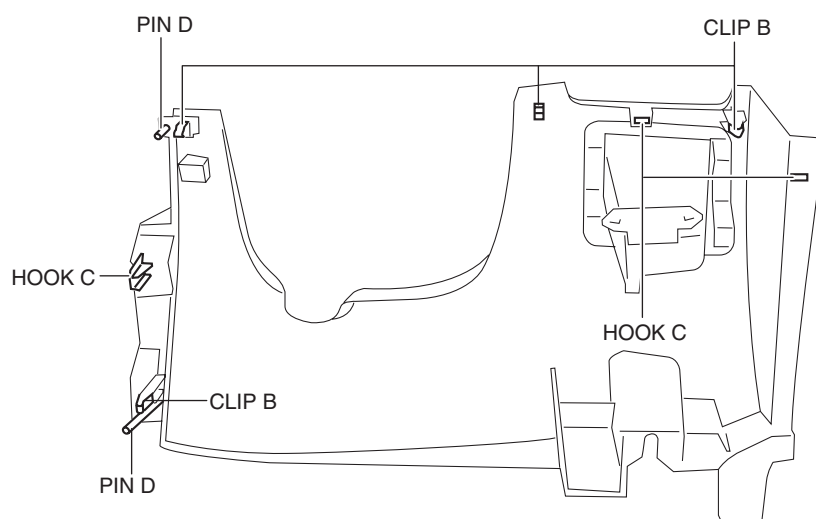


Driver-side

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Driver-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (2) Driver-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Car-navigation unit (with car-navigation system) (See CAR-NAVIGATION UNIT REMOVAL/INSTALLATION.)
 - (4) Switch panel (See SWITCH PANEL REMOVAL/INSTALLATION.)
 - (5) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (6) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
 - (7) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
 - (8) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
 - (9) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
 - (10) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
 - (11) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
 - (12) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
 - (13) Bonnet release lever (See BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION.)
3. Remove the screw A.

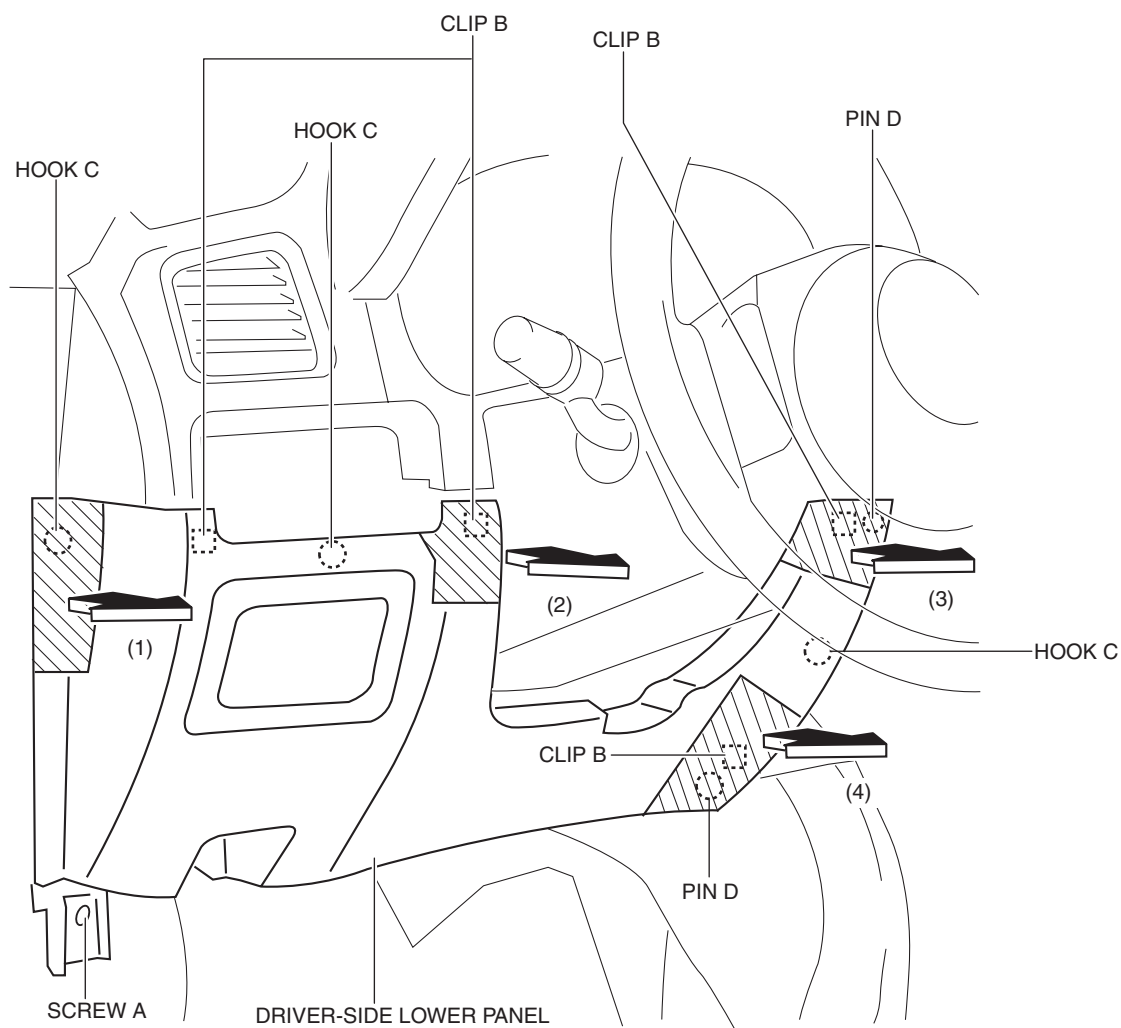


ac5uuw00001758

4. Take the shaded area shown in the figure, and pull the driver-side lower panel in the direction of the arrow in the order of (1), (2), (3),(4) and remove it while detaching clips B, hooks C and pins D.
5. Install in the reverse order of removal.

Passenger-side Removal


1. Disconnect the negative battery cable.
2. Remove the following parts:

- (1) Passenger-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (2) Passenger-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
 - (4) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (5) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
3. Remove bolts A.
 4. Remove screws B.

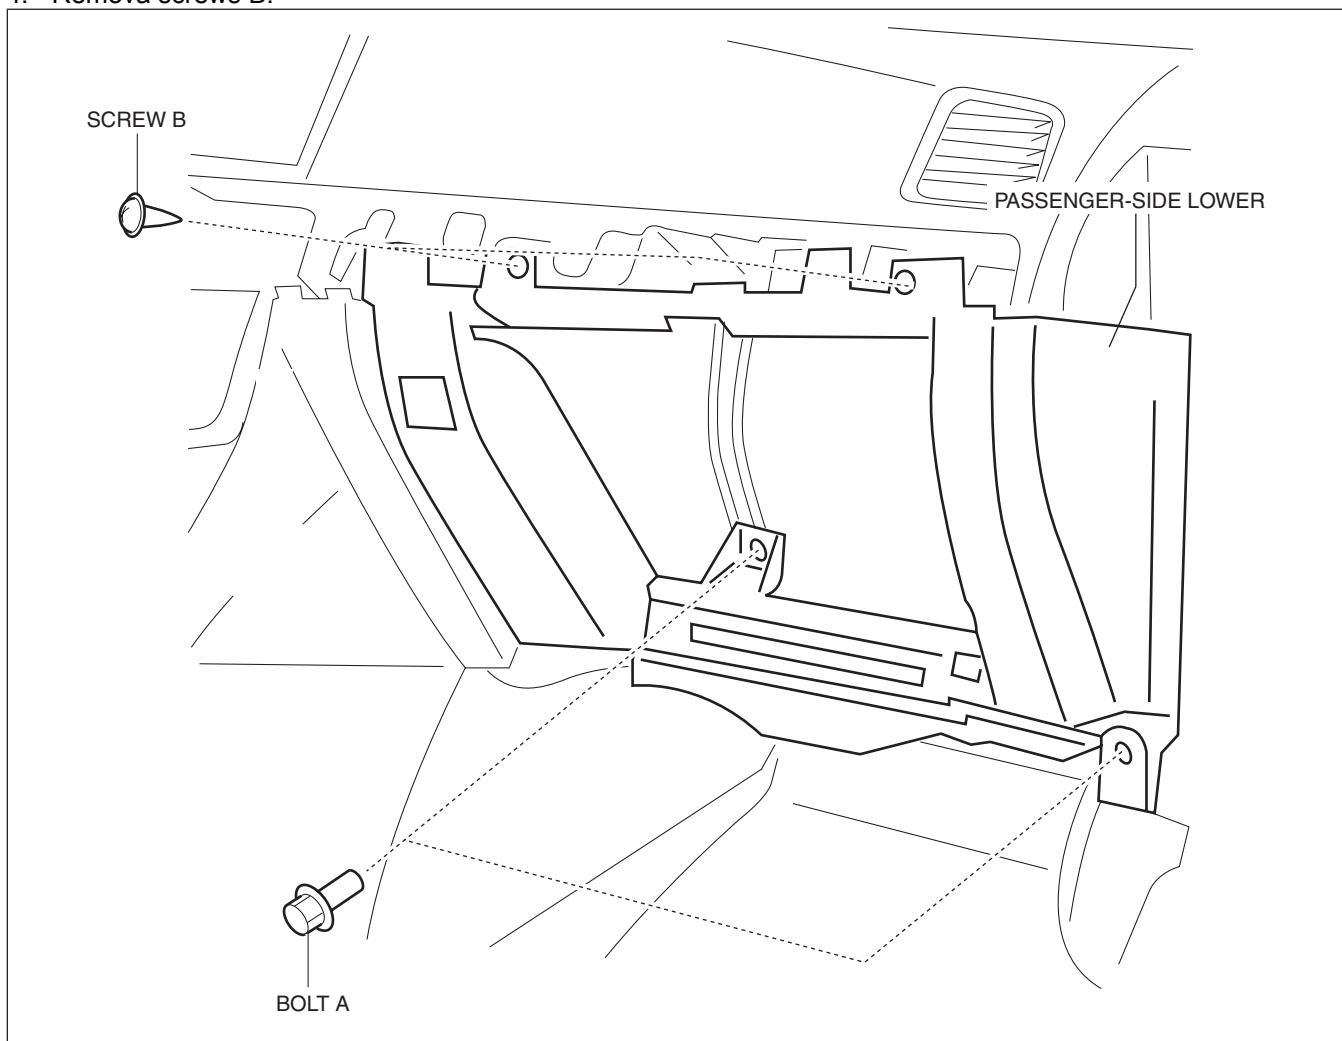

ac5wzw00005559


5. Take the shaded area shown in the figure, and pull the passenger-side lower panel in the direction of the arrow in the order of (1), (2), (3) and remove it while detaching hooks C, clips D and pins E.

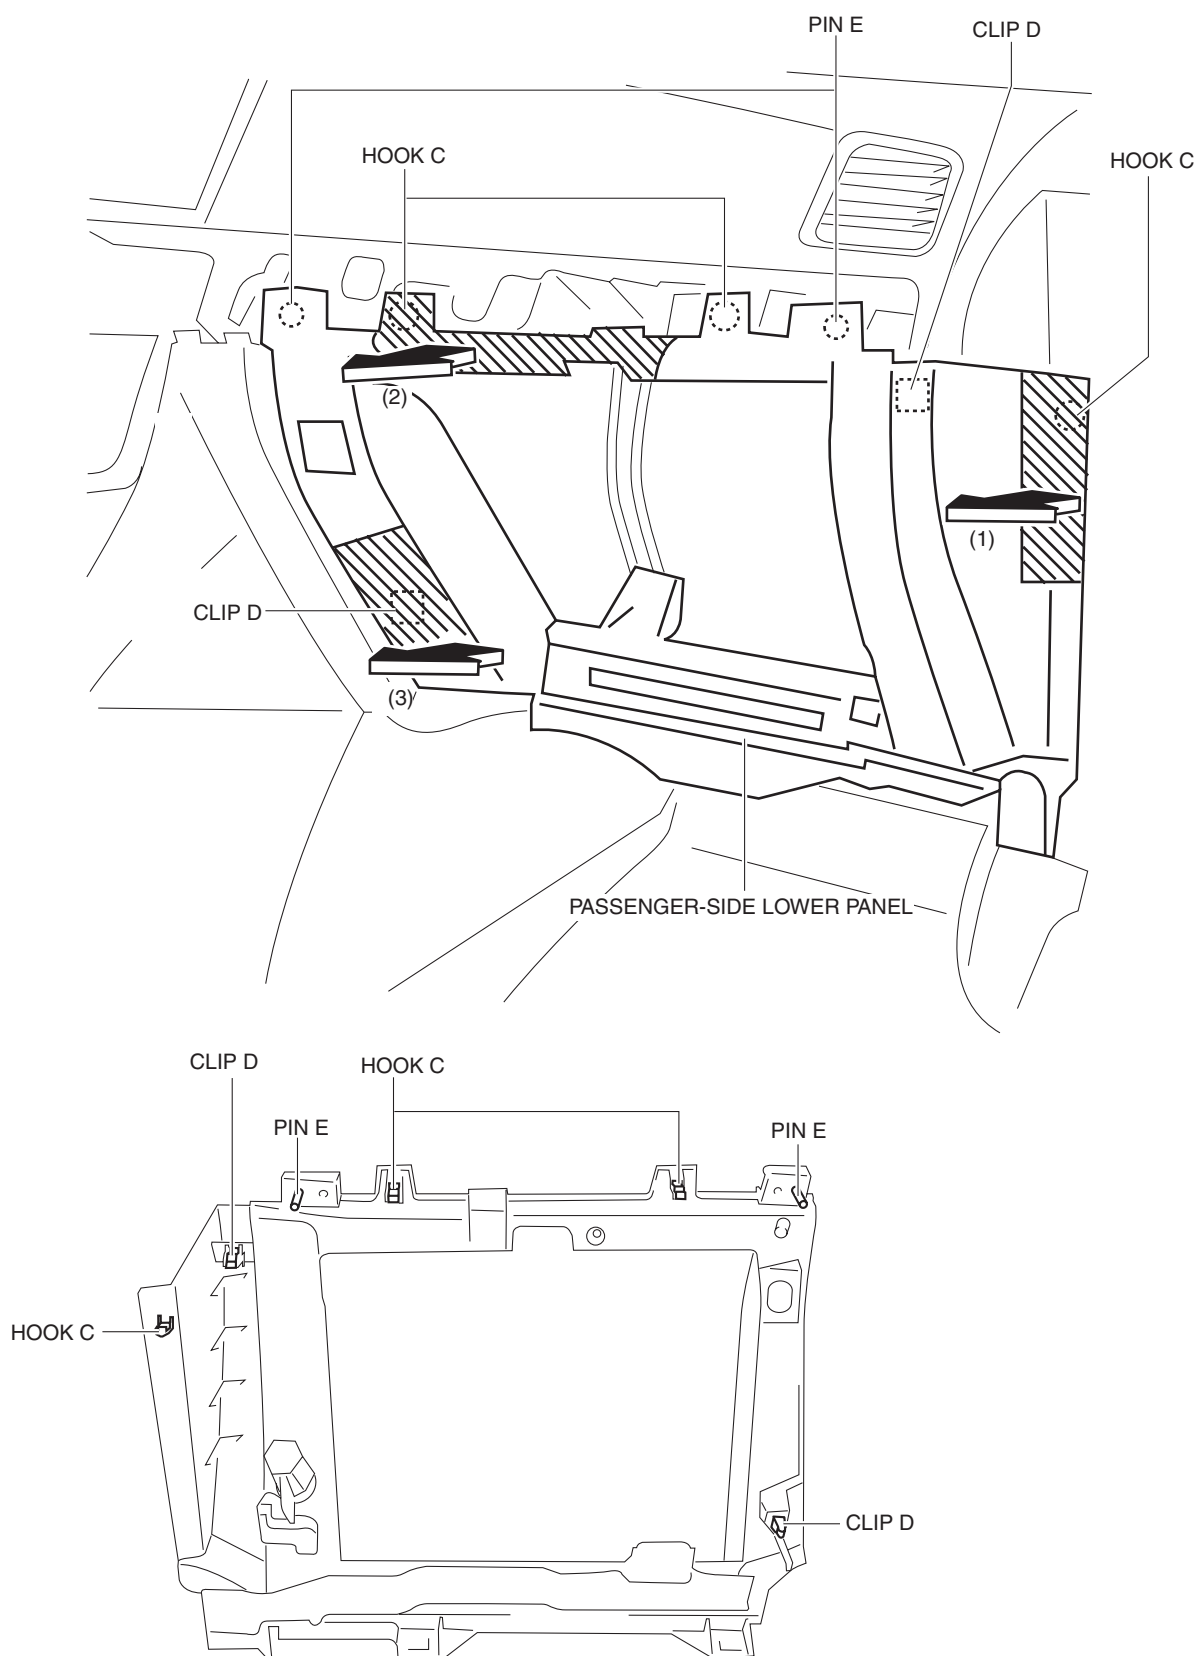

ac5wzw00005553


Installation

1. Install hooks C, clips D, and pins E while pressing the shaded area shown in the figure for the passenger-side lower panel in the direction of the arrow in the order of (1), (2), and (3).

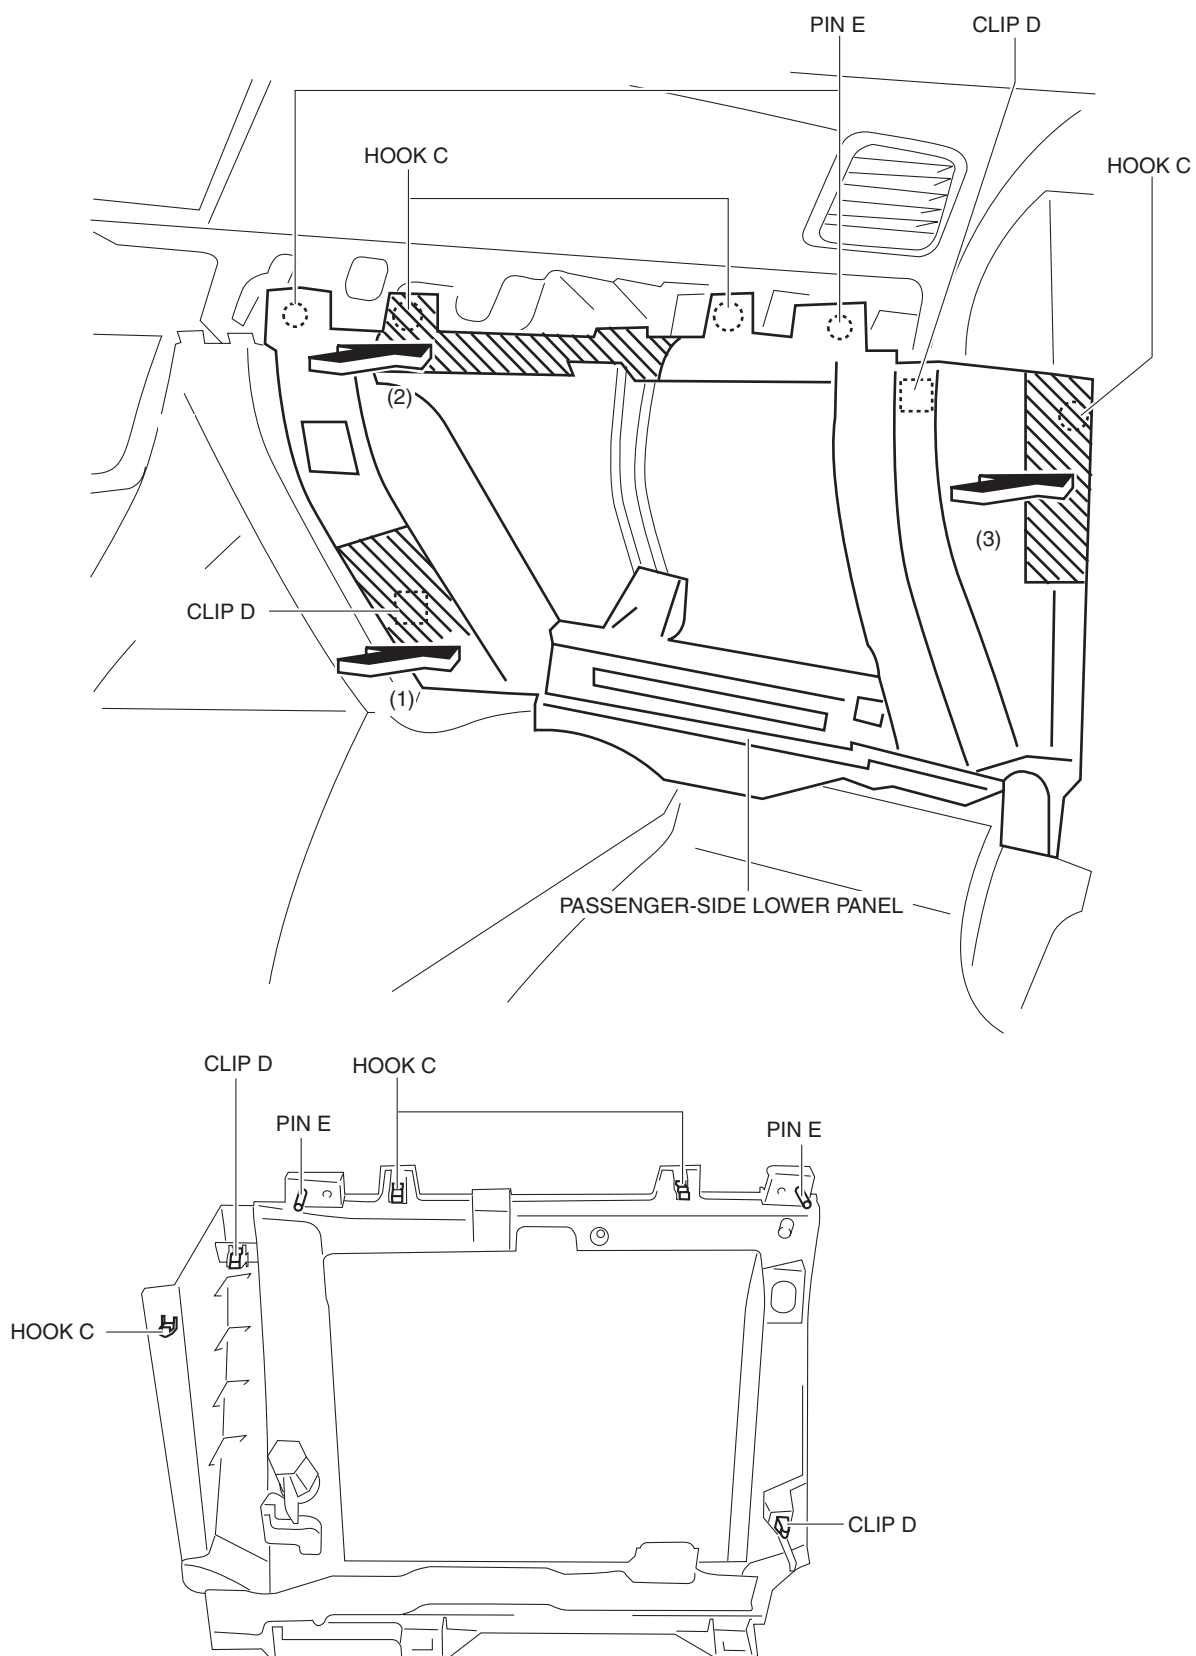


ac5wzw00005554

2. Install screws B.
3. Install bolts A, and then install the passenger-side lower panel.

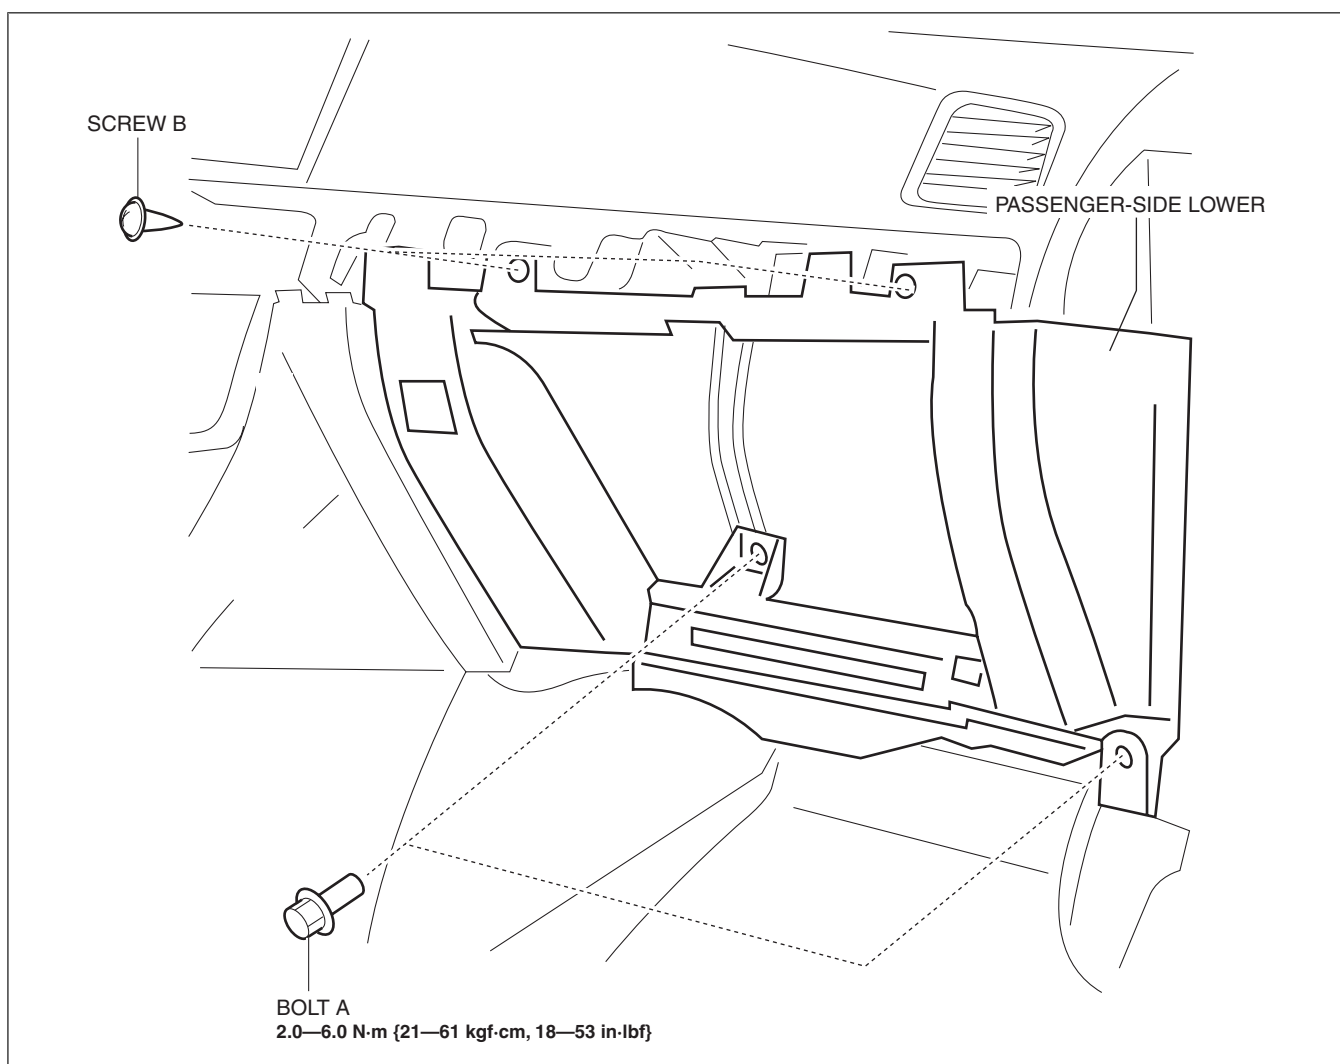

ac5wzw00005552


4. Install the following parts:
 - (1) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
 - (2) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (3) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
 - (4) Passenger-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
 - (5) Passenger-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
5. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
6. After installing the passenger-side lower panel and glove compartment, measure the clearance, and verify that the measurement value is within the specification shown in the figure.
 - If the measurement value is not within the specification after measuring the clearance between the passenger-side lower panel and glove compartment, adjust the passenger-side lower panel to the proper position. (See Passenger-side lower panel adjustment.)

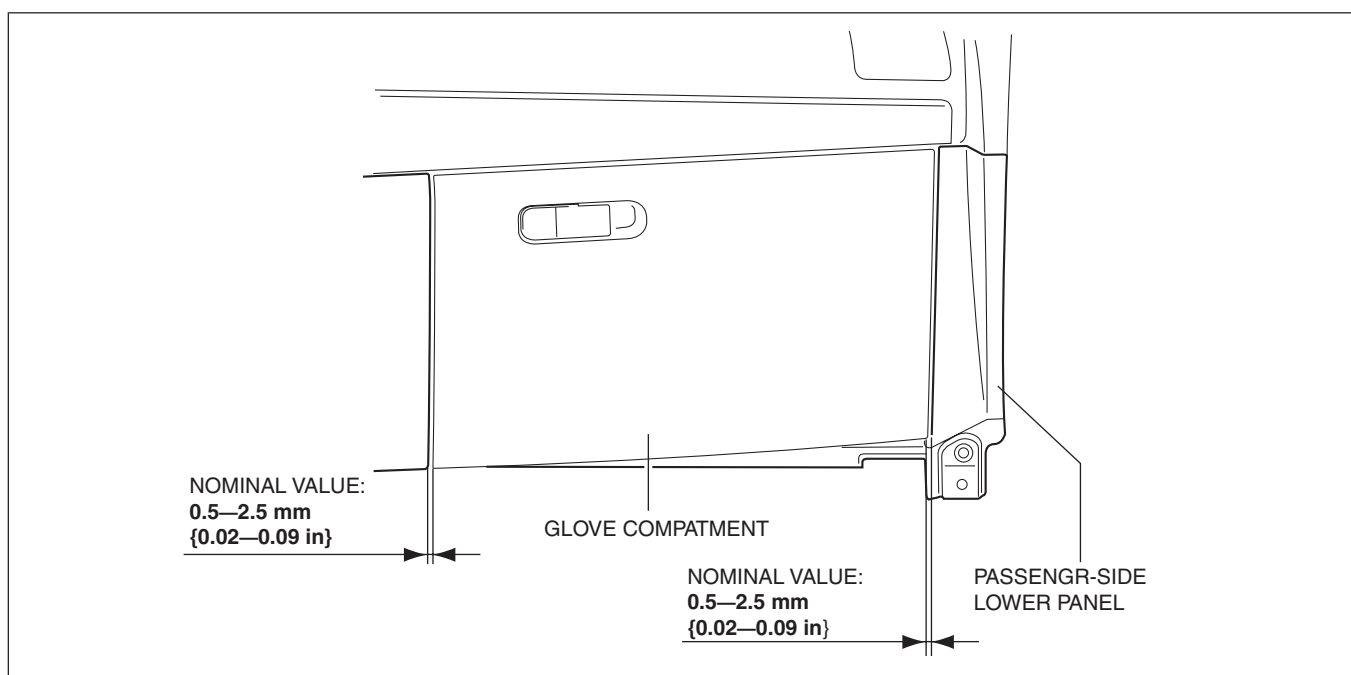

ac5wzw00005555


Passenger-side lower panel adjustment

1. Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION)
2. Loosen bolts A.
 - If the passenger-side lower panel moves in the lateral direction when bolts A are loosened, go to the step 3 and 4.
 - If the passenger-side lower panel does not move in the lateral direction when bolts A are loosened, go to the step 5.

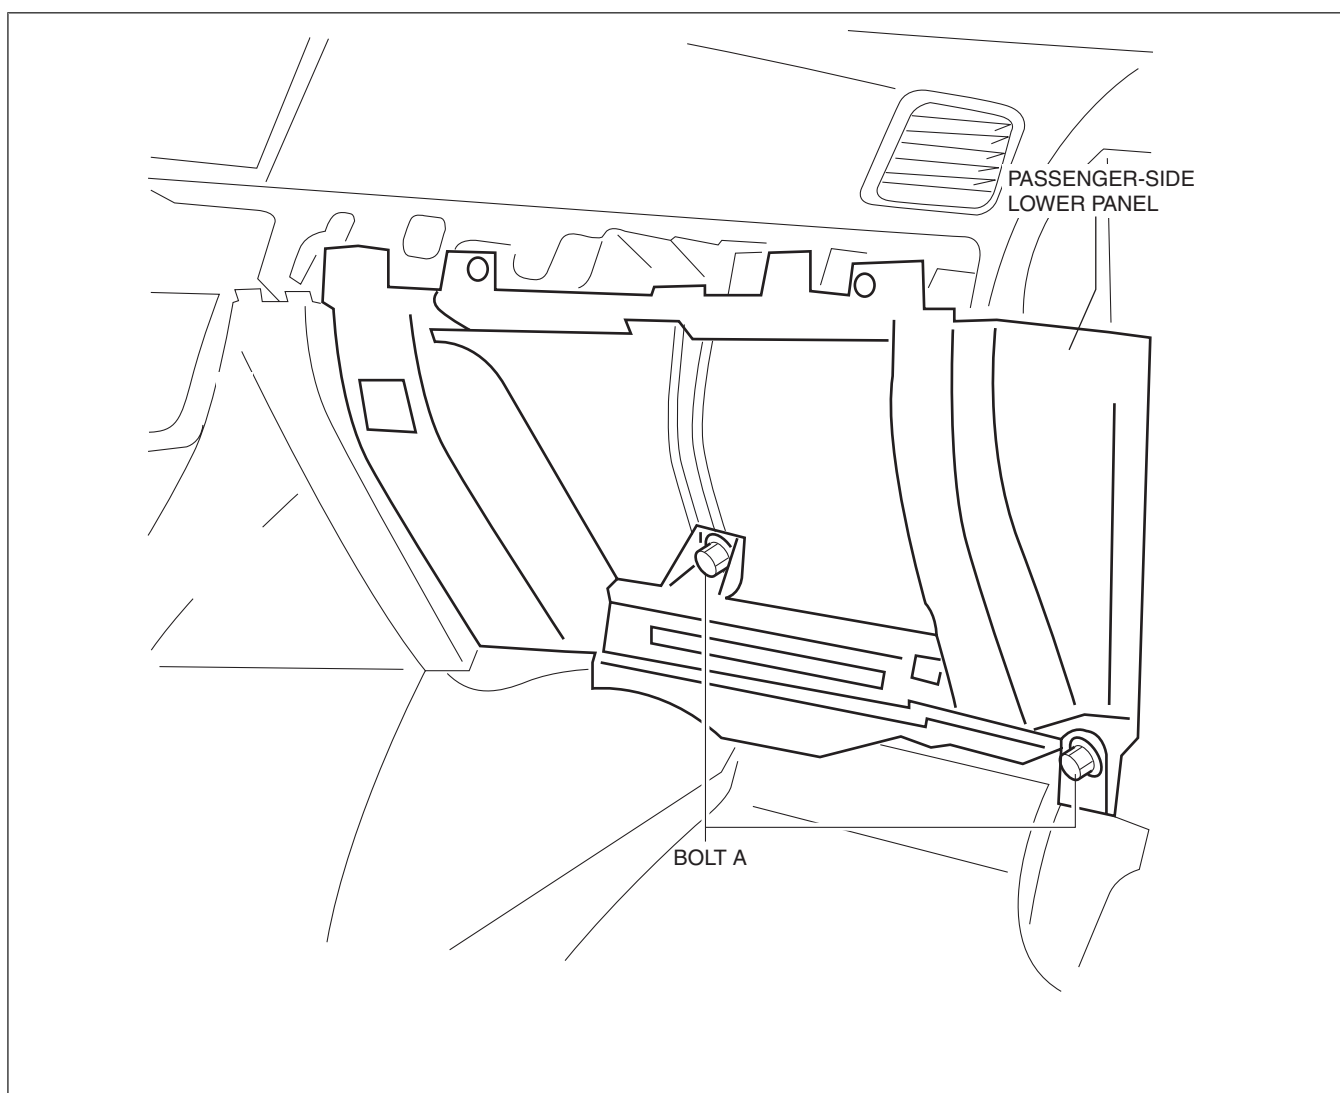


ac5wzw00005556

3. Remove bolts A.
4. Install bolts A in the order of (1), (2) shown in the figure.

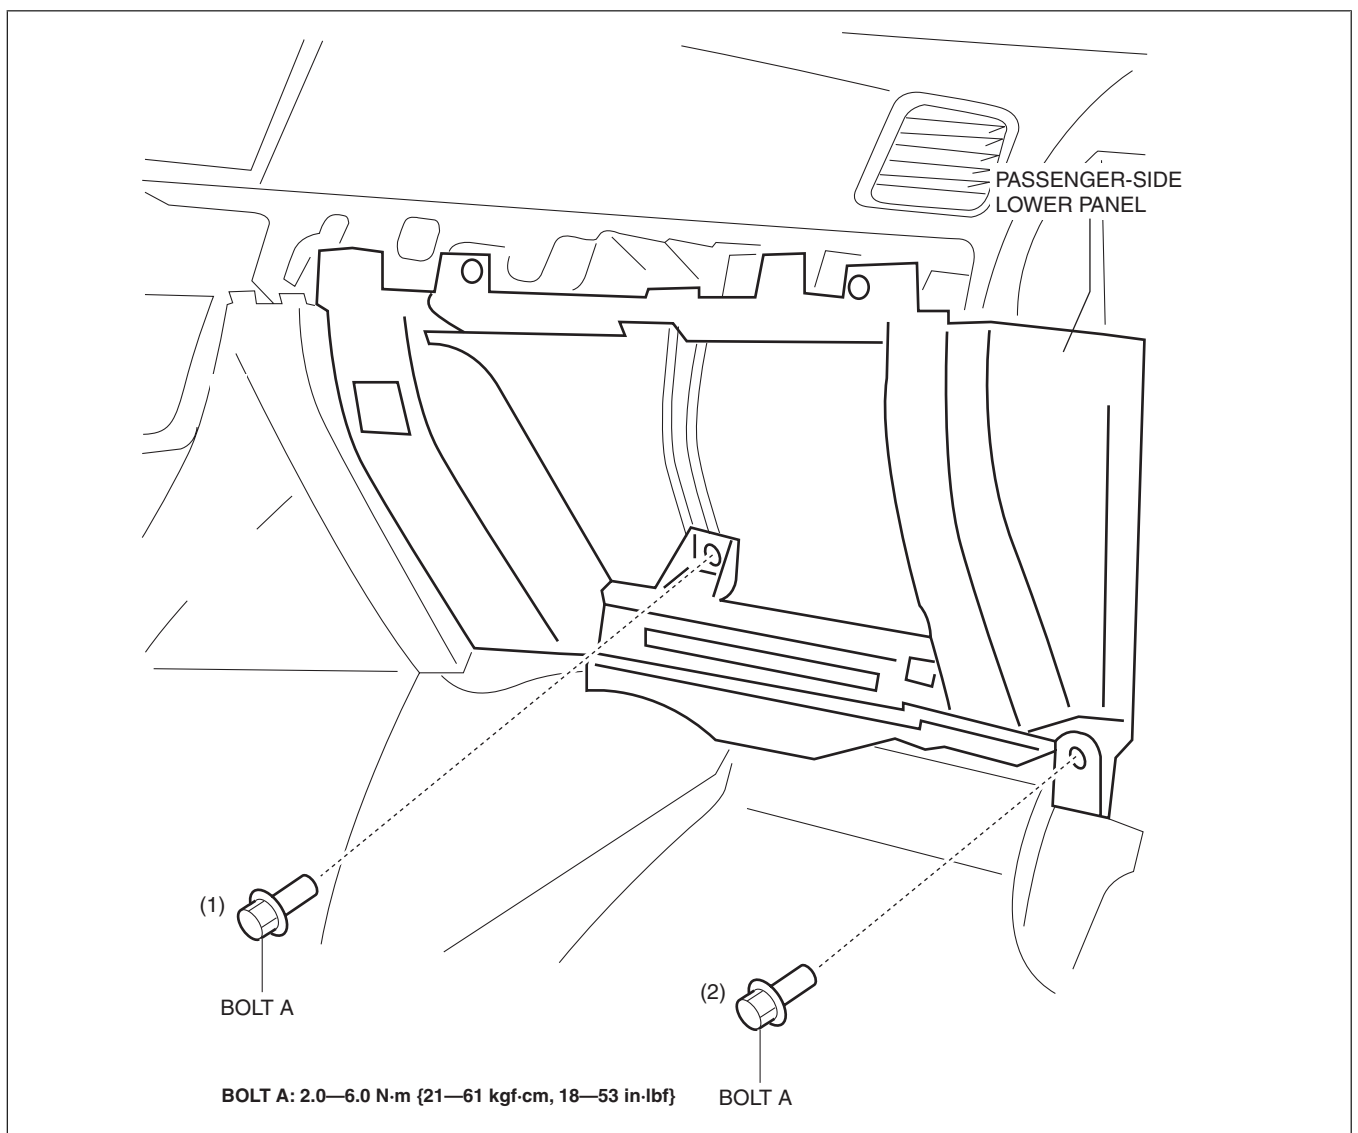

ac5wzw00005557

5. Install bolts A in the order of (1) and (2) while pressing the shaded area shown in the figure for the passenger-side lower panel.

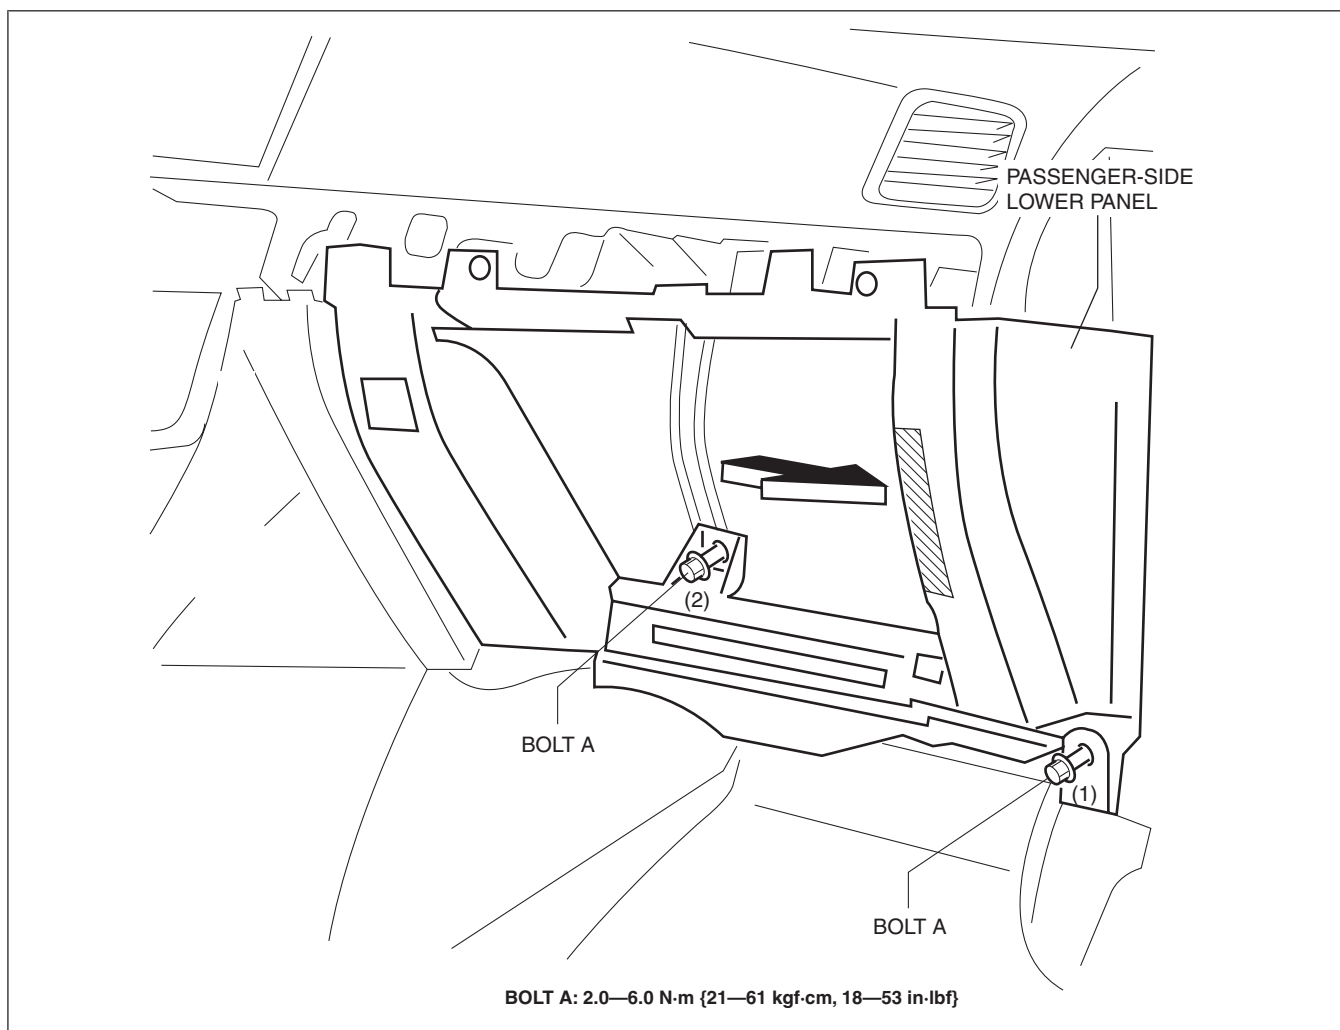

ac5wzw00005558

6. Install the glove compartment, measure the clearance between the glove compartment and passenger-side lower panel again, and verify that it is within the specification.
 - If it is not within the specification after measuring the clearance, repeat the adjustment procedure from Step 1.