


# **AUTOMATIC TRANSAXLE LOCATION INDEX [FW6AX-EL]**

id0517006602h4

## **Automatic Transaxle 1**

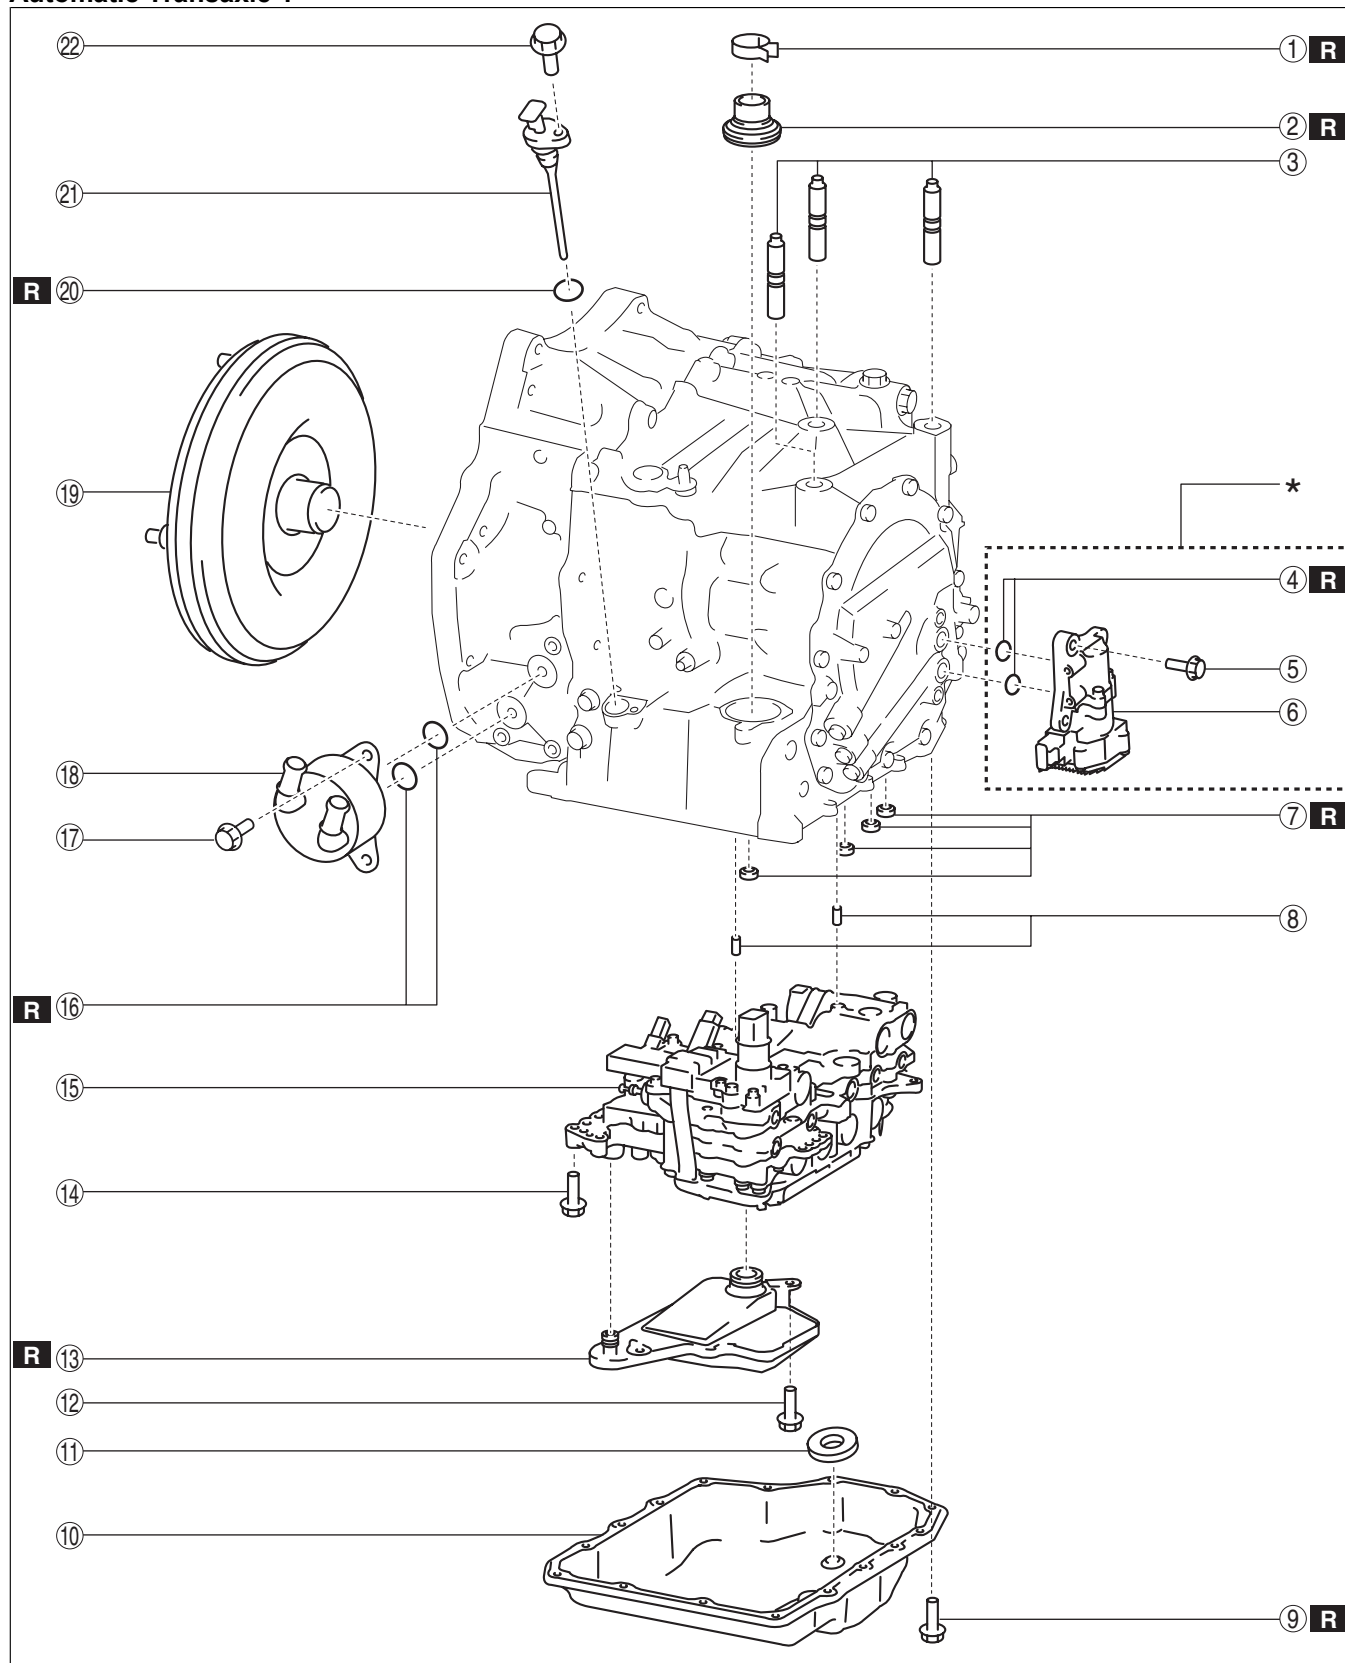

azzjjw00001598

1 Hose clamp  
(See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].)  
(See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)


2 Oil seal  
(See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].)  
(See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)

3	Stud bolt (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
4	O-ring* (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
5	3 bolts* (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
6	Electric AT oil pump* (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
7	Gasket (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
8	Dowel pin (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
9	16 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
10	Oil pan (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
11	Magnet (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
12	2 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
13	Oil strainer (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)

14	11 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
15	Control valve body (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See Control Valve Body.)
16	O-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
17	3 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
18	Oil cooler (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See OIL COOLER CLEANING.) (See OIL COOLER INSPECTION.)
19	Torque converter (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See TORQUE CONVERTER CLEANING.) (See TORQUE CONVERTER INSPECTION.)
20	O-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
21	Dipstick (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
22	Bolt (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)

\* : Only vehicles with i-stop

## Automatic Transaxle 2

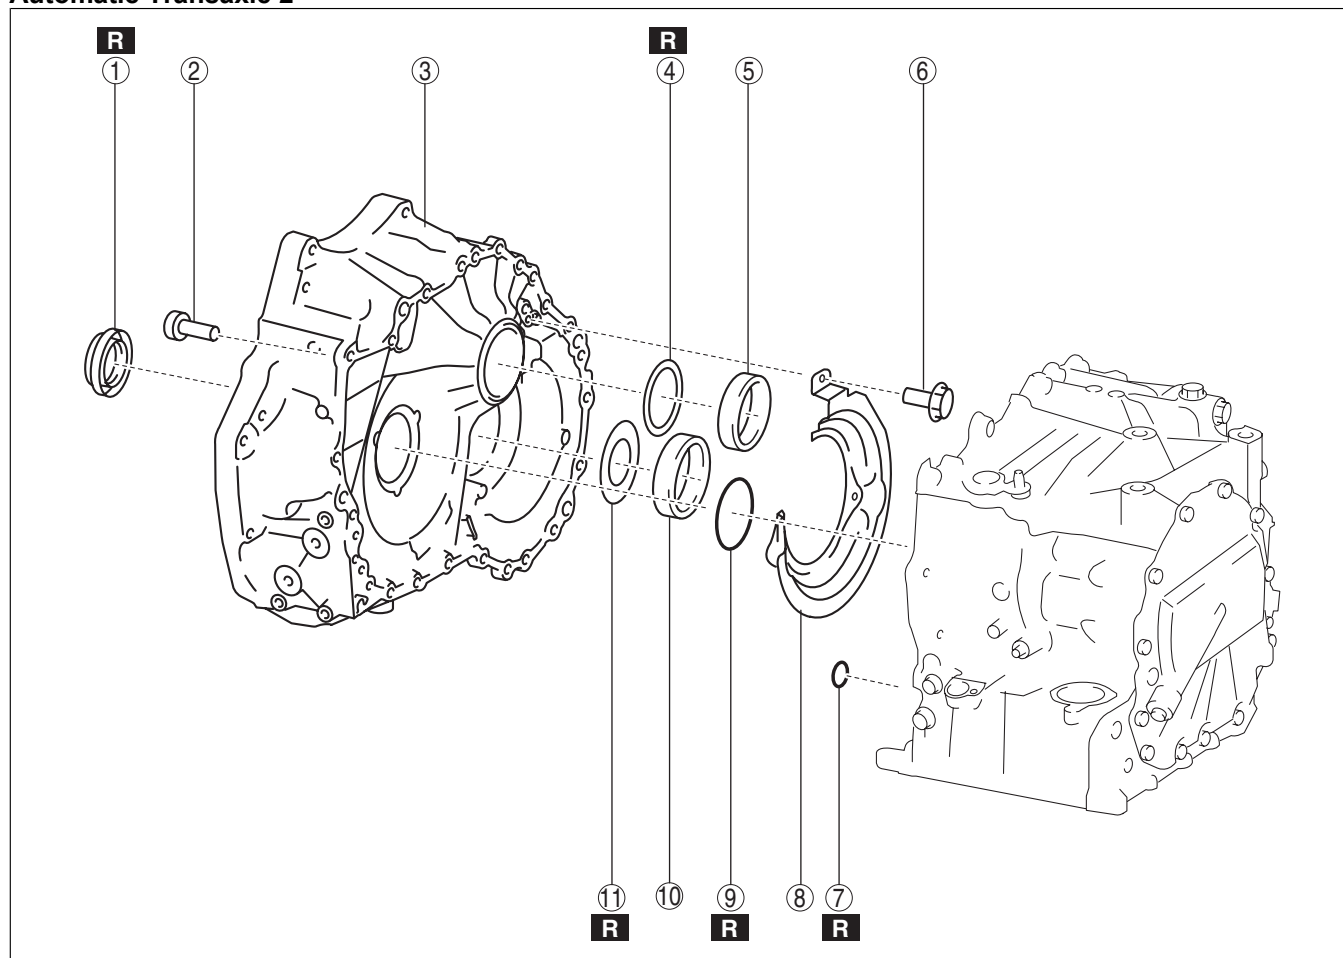


azzjw00000287

1	Oil seal (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
2	24 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
3	Converter housing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
4	Shim (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See SECONDARY GEAR AND OUTPUT GEAR PRELOAD MEASUREMENT/ADJUSTMENT [FW6AX-EL].)
5	Bearing race (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)

6	3 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
7	O-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
8	Baffle plate (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
9	O-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
10	Bearing race (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)

- |    |  |
|----|--|
| 11 | Shim<br>(See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].)<br>(See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)<br>(See RING GEAR AND DIFFERENTIAL PRELOAD MEASUREMENT/ADJUSTMENT [FW6AX-EL].) |
|----|--|


### Automatic Transaxle 3

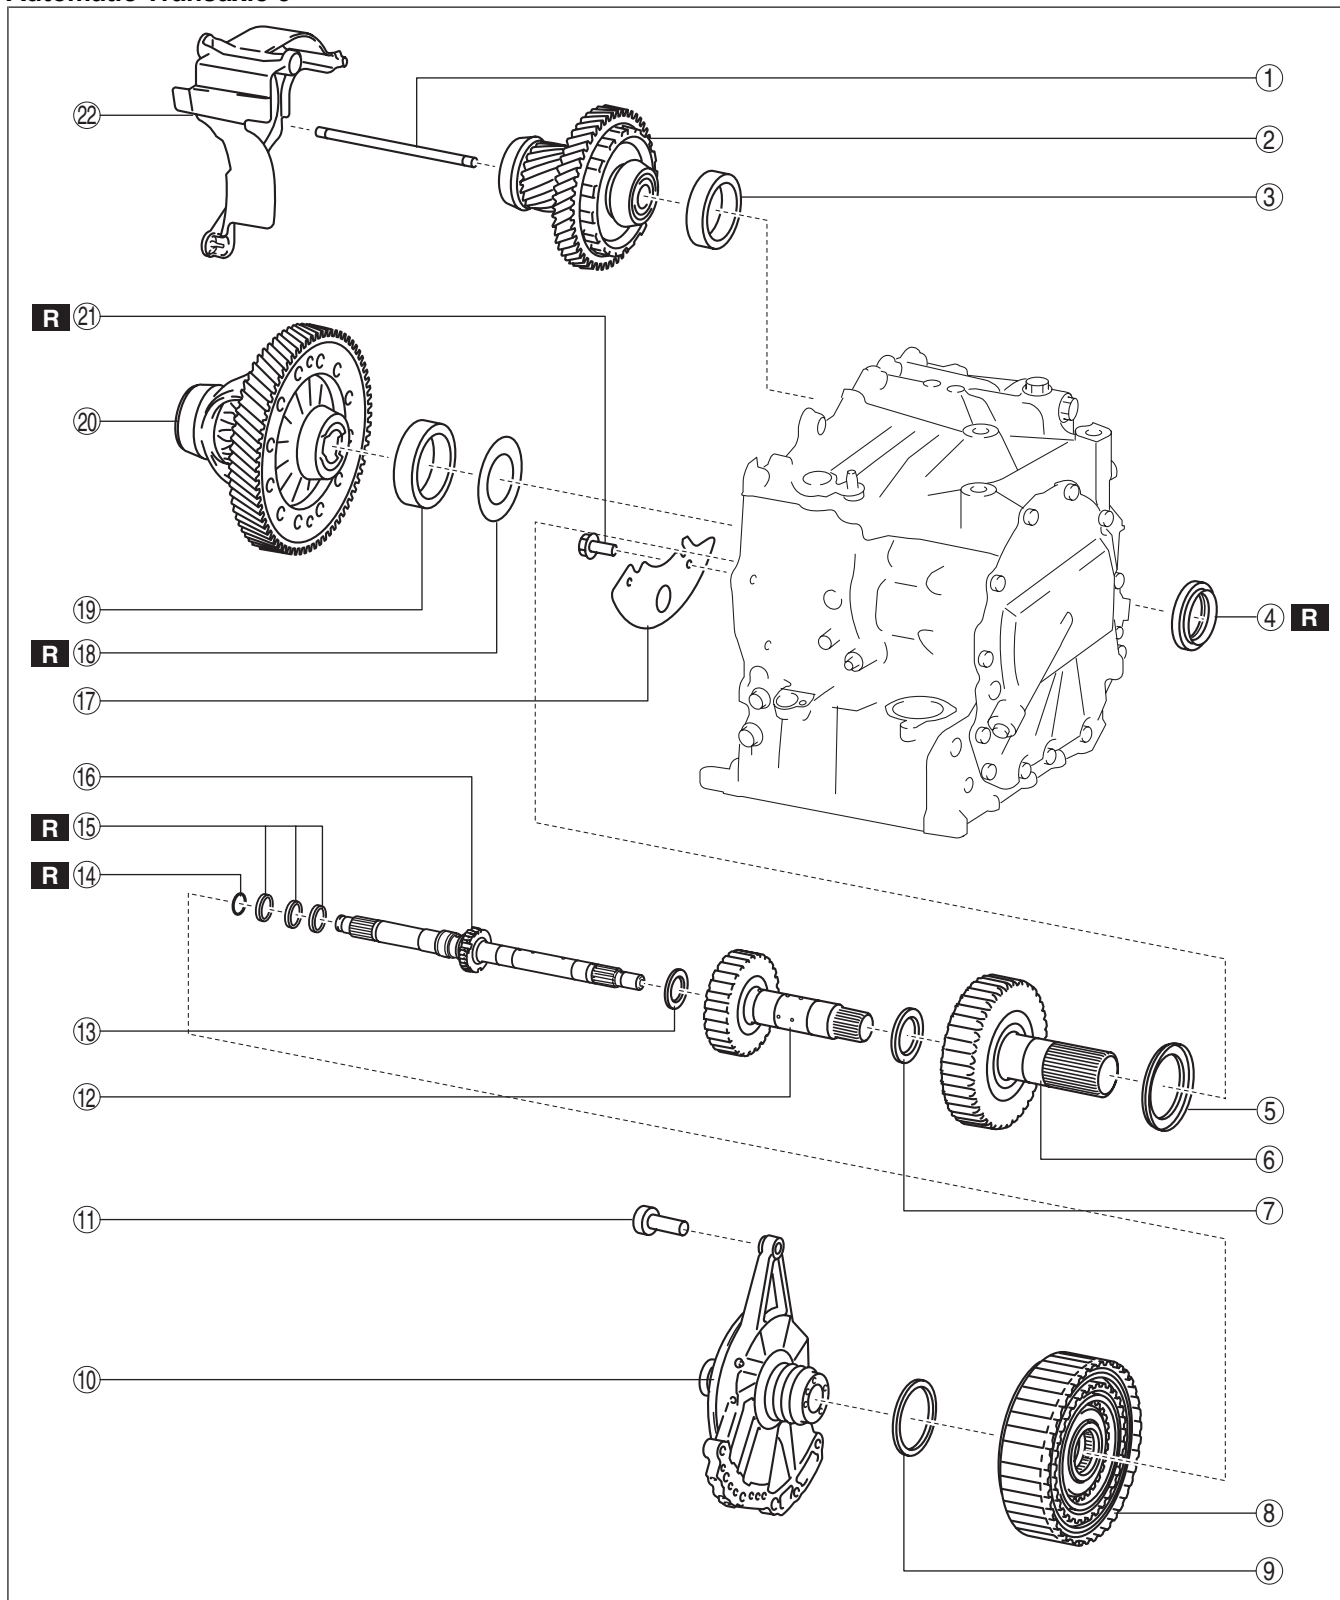

1	Oil pipe (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
2	Secondary gear and output gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See Secondary Gear and Output Gear.)
3	Bearing race (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
4	Oil seal (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
5	Thrust needle bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
6	Low clutch hub (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See LOW CLUTCH HUB INSPECTION.)
7	Thrust needle bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
8	Clutch component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See Clutch Component.)
9	Thrust needle bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
10	Oil pump (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See Oil Pump.)
11	7 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)

12	High clutch hub (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See HIGH CLUTCH HUB INSPECTION.)
13	Thrust needle bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
14	D-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
15	Seal ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
16	Turbine shaft (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
17	Baffle plate (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
18	Shim (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
19	Bearing race (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
20	Ring gear and differential (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See Ring Gear and Differential.)
21	2 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
22	Baffle plate (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)

## Automatic Transaxle 4

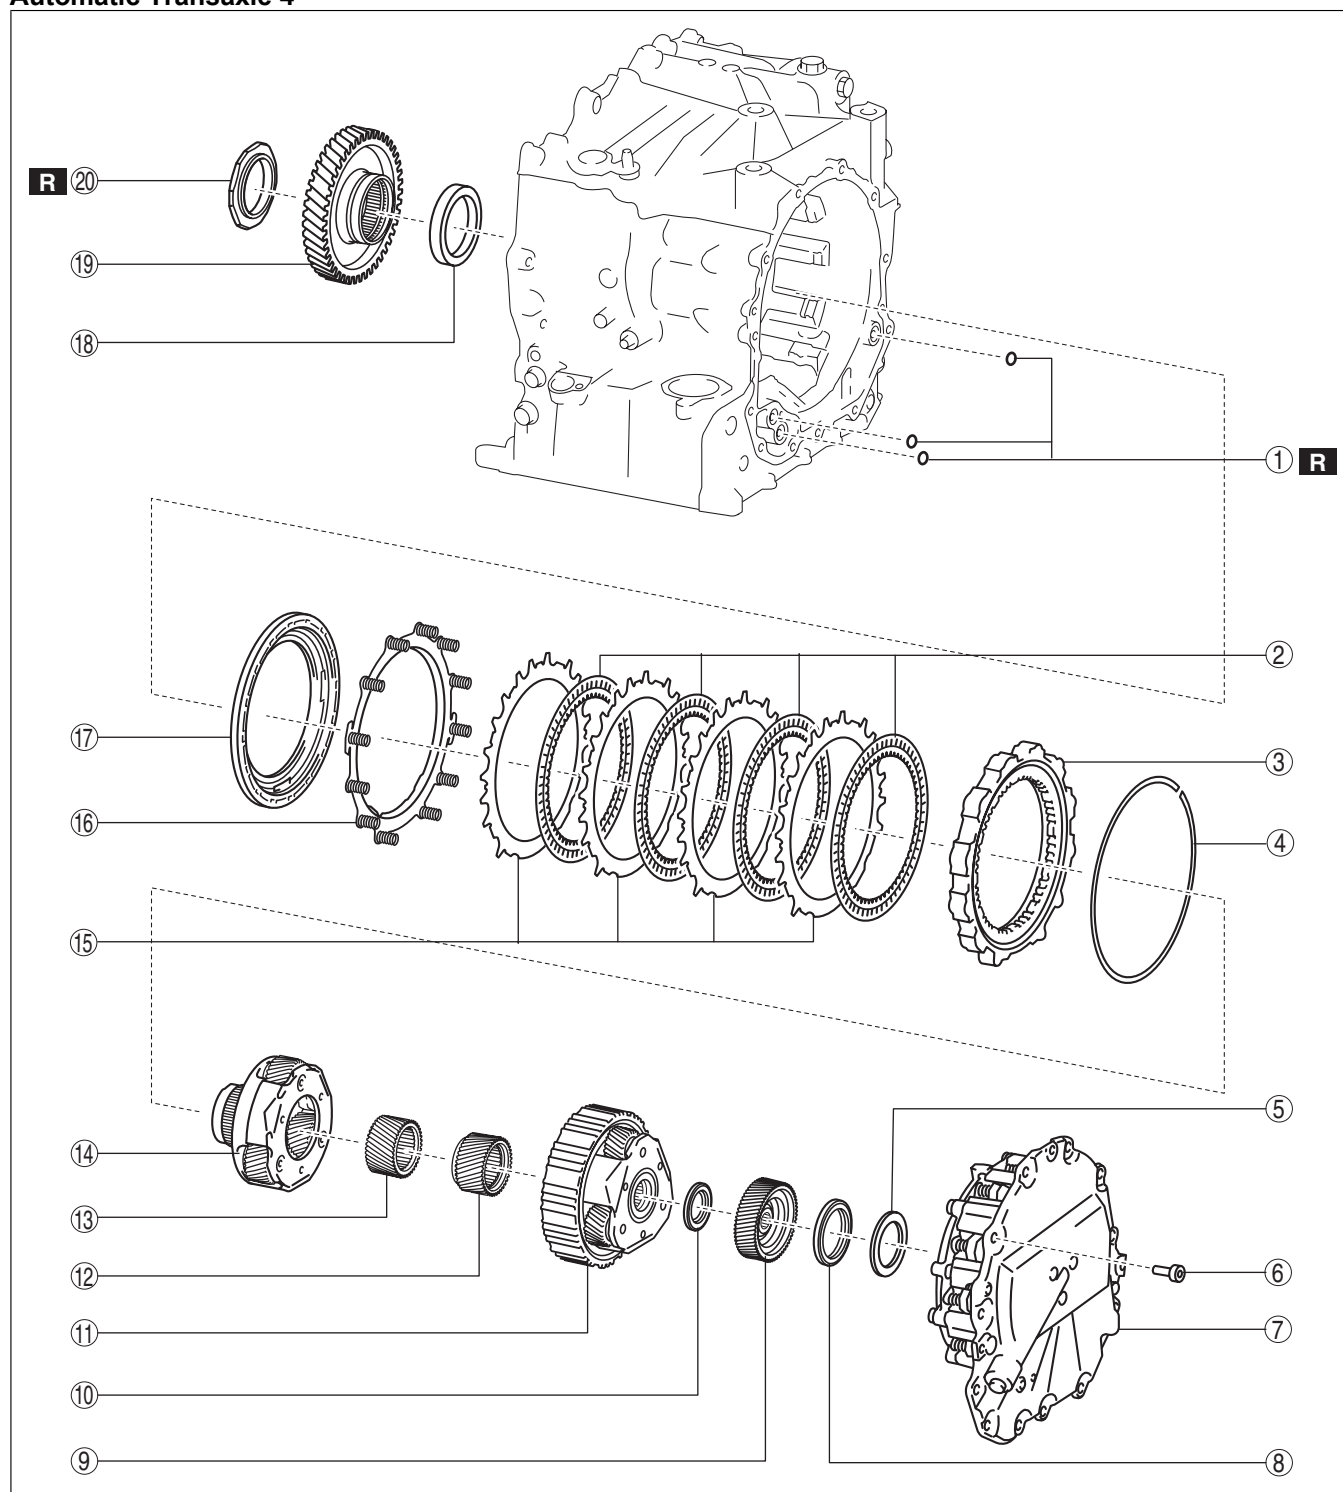

azzjiw00000289


1	O-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
2	Drive plate (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See LOW AND REVERSE BRAKE INSPECTION.)

3	One-way clutch (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See ONE-WAY CLUTCH INSPECTION.)
---	---

4	Snap ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See LOW AND REVERSE BRAKE CLEARANCE MEASUREMENT/ADJUSTMENT.)
5	Shim (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See TOTAL END PLAY MEASUREMENT/ADJUSTMENT.)
6	12 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
7	End cover component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See End Cover Component.)
8	Thrust needle bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
9	Reduction sun gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
10	Thrust needle bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See THRUST NEEDLE BEARING INSPECTION.)
11	Rear planetary gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See Rear Planetary Gear.)

12	Rear sun gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
13	Front sun gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
14	Front planetary gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See FRONT PLANETARY GEAR INSPECTION.)
15	Driven plate (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
16	Springs and retainer component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
17	Low and reverse brake piston (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
18	Angular contact ball bearing (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].)
19	Primary gear (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
20	Locknut (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)

## Automatic Transaxle 5

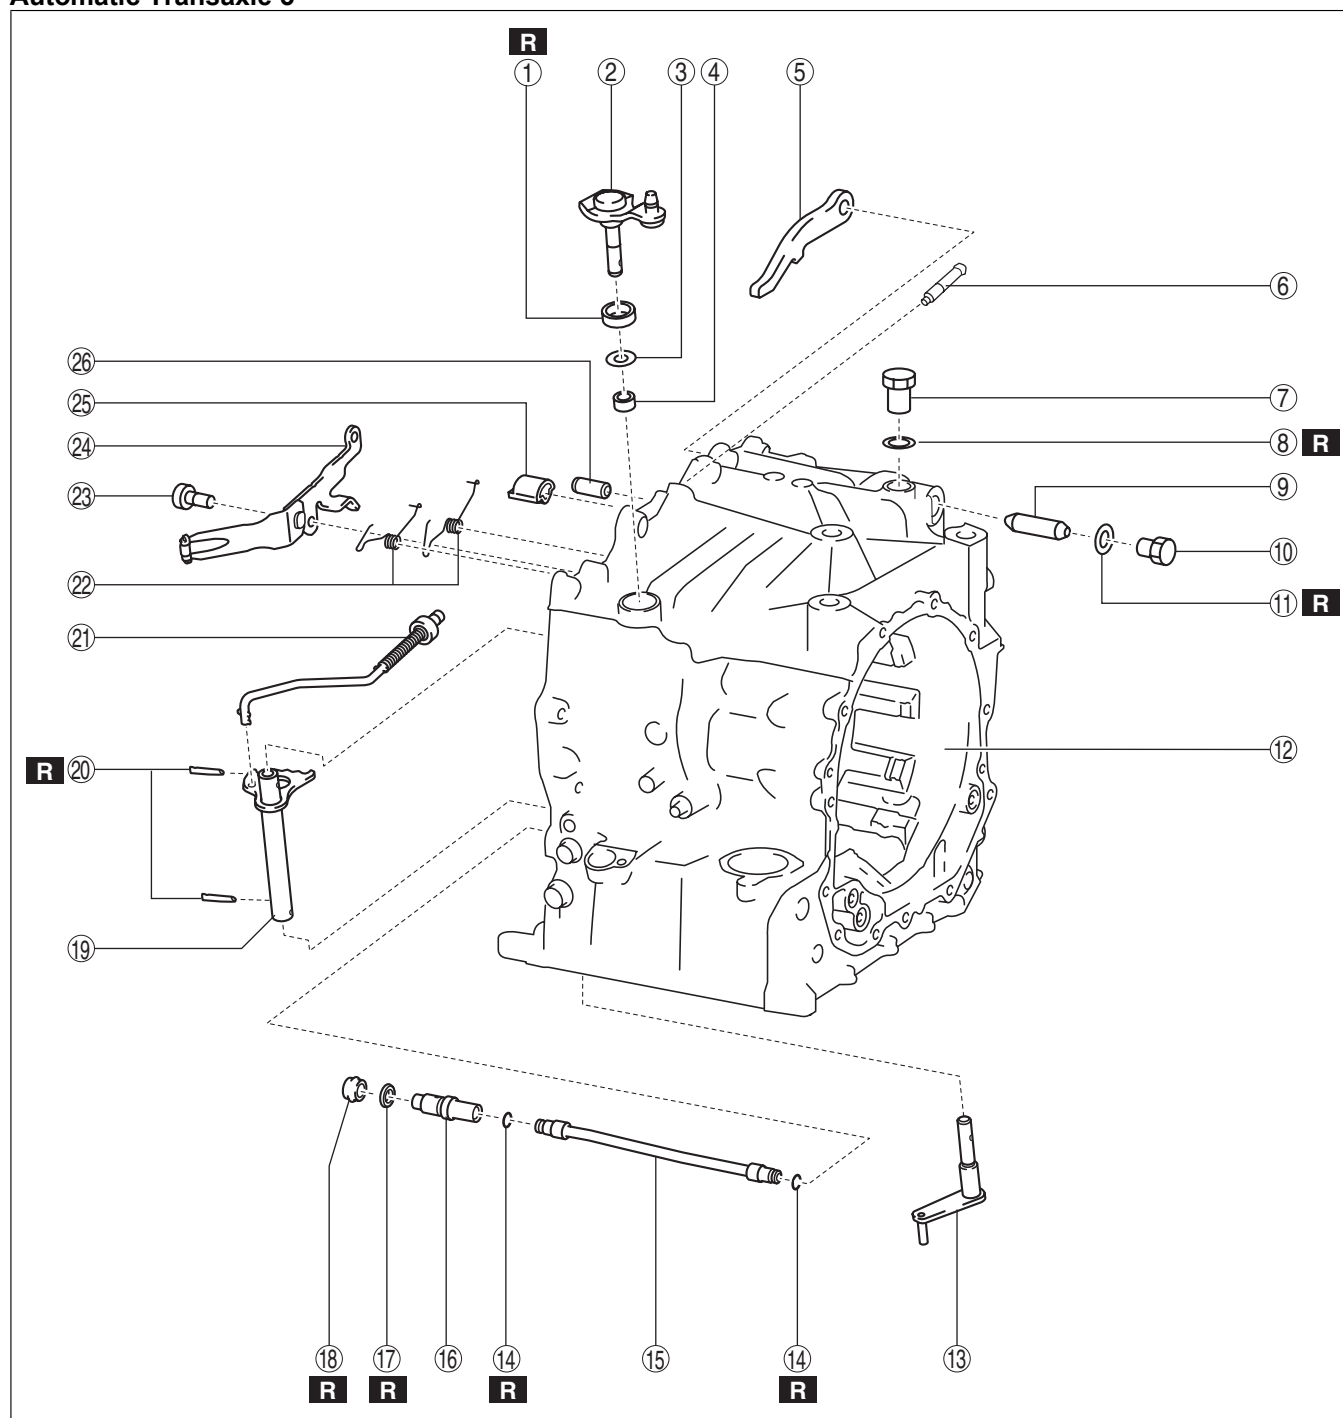

azzjw00000532

1	Oil seal (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].) (See OIL SEAL (PARKING SHIFT LEVER) REPLACEMENT [FW6AX-EL].)
2	Parking shift lever component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)


3	Washer (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
4	Radial needle bearing (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
5	Parking pawl (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)



6	Breather pipe (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
7	Plug (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
8	Gasket (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
9	Parking pawl shaft (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
10	Plug (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
11	Gasket (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
12	Transaxle case (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
13	Parking assist lever component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
14	O-ring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
15	Oil pipe (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
16	Connector (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)

17	Gasket (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
18	Gasket (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
19	Manual plate component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
20	Roll pin (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
21	Parking rod component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
22	Pawl return spring (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
23	2 bolts (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
24	Detent bracket component (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
25	Support actuator (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)
26	Parking pawl pin (See AUTOMATIC TRANSAXLE DISASSEMBLY [FW6AX-EL].) (See AUTOMATIC TRANSAXLE ASSEMBLY [FW6AX-EL].)

## Oil Pump

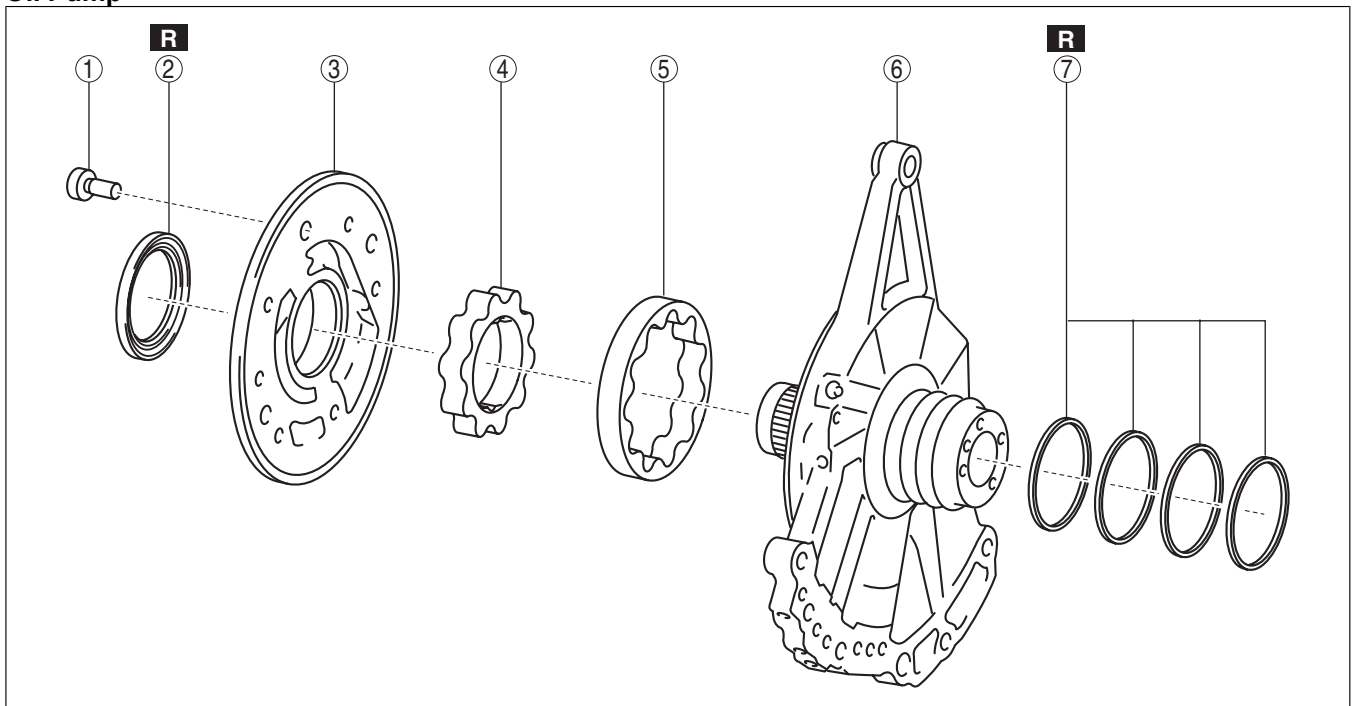


azzjiw00000291

1	7 bolts (See OIL PUMP DISASSEMBLY.) (See OIL PUMP ASSEMBLY.)
2	Oil seal (See OIL PUMP DISASSEMBLY.) (See OIL PUMP ASSEMBLY.) (See OIL SEAL (OIL PUMP) REPLACEMENT [FW6AX-EL].)
3	Oil pump cover (See OIL PUMP DISASSEMBLY.) (See OIL PUMP ASSEMBLY.) (See OIL PUMP INSPECTION.)
4	Inner rotor (See OIL PUMP DISASSEMBLY.) (See OIL PUMP ASSEMBLY.) (See OIL PUMP INSPECTION.)

5	Outer rotor (See OIL PUMP DISASSEMBLY.) (See OIL PUMP ASSEMBLY.) (See OIL PUMP INSPECTION.)
6	Oil pump housing (See OIL PUMP DISASSEMBLY.) (See OIL PUMP ASSEMBLY.) (See OIL PUMP INSPECTION.)
7	Seal ring (See OIL PUMP DISASSEMBLY.) (See OIL PUMP ASSEMBLY.)

## Clutch Component

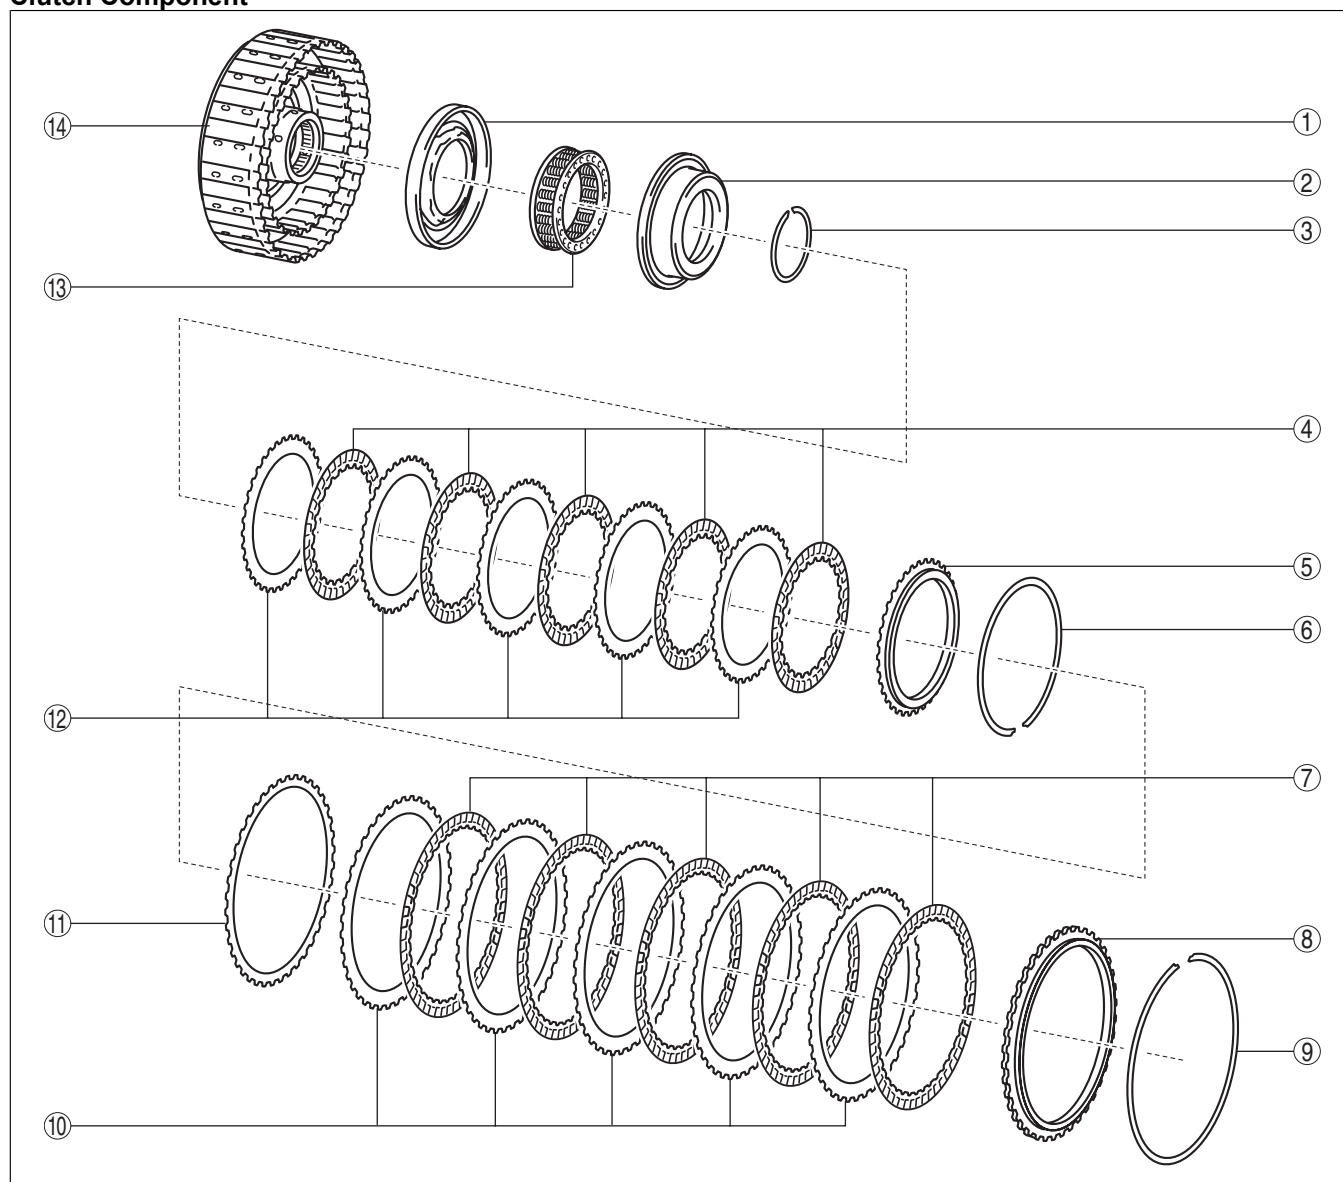


azzjw00000292

1	High clutch piston (See CLUTCH COMPONENT DISASSEMBLY.) (See CLUTCH COMPONENT ASSEMBLY.)
2	Seal plate (See CLUTCH COMPONENT DISASSEMBLY.) (See CLUTCH COMPONENT ASSEMBLY.)
3	Snap ring (See CLUTCH COMPONENT DISASSEMBLY.) (See CLUTCH COMPONENT ASSEMBLY.)
4	Drive plate (See CLUTCH COMPONENT DISASSEMBLY.) (See CLUTCH COMPONENT ASSEMBLY.) (See HIGH CLUTCH INSPECTION.)
5	Retaining plate (See CLUTCH COMPONENT DISASSEMBLY.) (See CLUTCH COMPONENT ASSEMBLY.)
6	Snap ring (See CLUTCH COMPONENT DISASSEMBLY.) (See CLUTCH COMPONENT ASSEMBLY.) (See HIGH CLUTCH CLEARANCE MEASUREMENT/ADJUSTMENT.)

7	Drive plate (See CLUTCH COMPONENT DISASSEMBLY.) (See CLUTCH COMPONENT ASSEMBLY.) (See LOW CLUTCH INSPECTION.)
8	Retaining plate (See CLUTCH COMPONENT DISASSEMBLY.) (See CLUTCH COMPONENT ASSEMBLY.)
9	Snap ring (See CLUTCH COMPONENT DISASSEMBLY.) (See CLUTCH COMPONENT ASSEMBLY.) (See LOW CLUTCH CLEARANCE MEASUREMENT/ADJUSTMENT.)
10	Driven plate (See CLUTCH COMPONENT DISASSEMBLY.) (See CLUTCH COMPONENT ASSEMBLY.)
11	Wave spring (See CLUTCH COMPONENT DISASSEMBLY.) (See CLUTCH COMPONENT ASSEMBLY.)
12	Driven plate (See CLUTCH COMPONENT DISASSEMBLY.) (See CLUTCH COMPONENT ASSEMBLY.)

13	Springs and retainer component (See CLUTCH COMPONENT DISASSEMBLY.) (See CLUTCH COMPONENT ASSEMBLY.) (See HIGH CLUTCH INSPECTION.)	14	High clutch drum component (See CLUTCH COMPONENT DISASSEMBLY.) (See CLUTCH COMPONENT ASSEMBLY.) (See HIGH CLUTCH INSPECTION.)
----	--	----	--


## Rear Planetary Gear

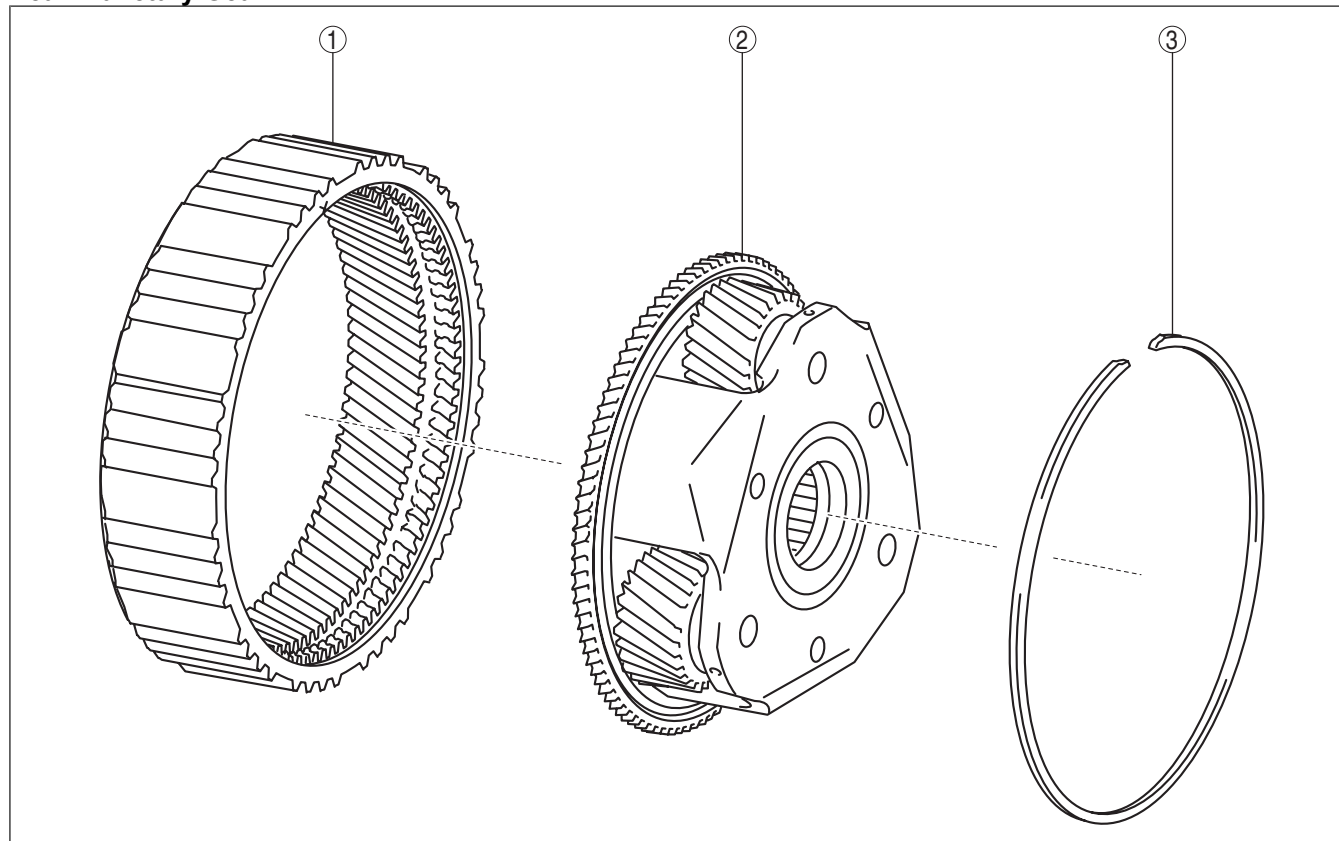

azzjiw00000293

1	Front internal gear (See REAR PLANETARY GEAR DISASSEMBLY.) (See REAR PLANETARY GEAR ASSEMBLY.)	3	Snap ring (See REAR PLANETARY GEAR DISASSEMBLY.) (See REAR PLANETARY GEAR ASSEMBLY.)
2	Rear planetary carrier (See REAR PLANETARY GEAR DISASSEMBLY.) (See REAR PLANETARY GEAR ASSEMBLY.) (See REAR PLANETARY GEAR INSPECTION.)		

## Secondary Gear and Output Gear

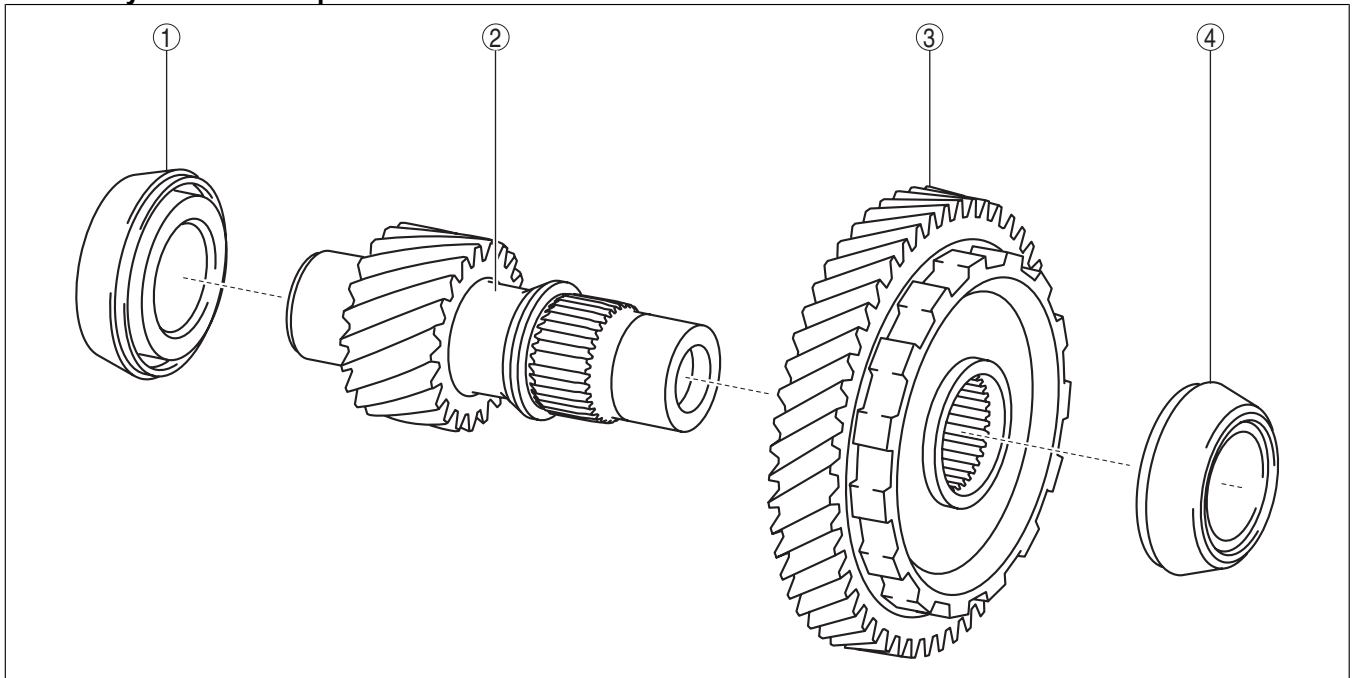


azzjjw00000294

1	Tapered roller bearing (See SECONDARY GEAR AND OUTPUT GEAR DISASSEMBLY.) (See SECONDARY GEAR AND OUTPUT GEAR ASSEMBLY.) (See SECONDARY GEAR AND OUTPUT GEAR INSPECTION.)
2	Output gear (See SECONDARY GEAR AND OUTPUT GEAR DISASSEMBLY.) (See SECONDARY GEAR AND OUTPUT GEAR ASSEMBLY.)
3	Secondary gear (See SECONDARY GEAR AND OUTPUT GEAR DISASSEMBLY.) (See SECONDARY GEAR AND OUTPUT GEAR ASSEMBLY.)

4	Tapered roller bearing (See SECONDARY GEAR AND OUTPUT GEAR DISASSEMBLY.) (See SECONDARY GEAR AND OUTPUT GEAR ASSEMBLY.) (See SECONDARY GEAR AND OUTPUT GEAR INSPECTION.)
---	---

## Ring Gear and Differential

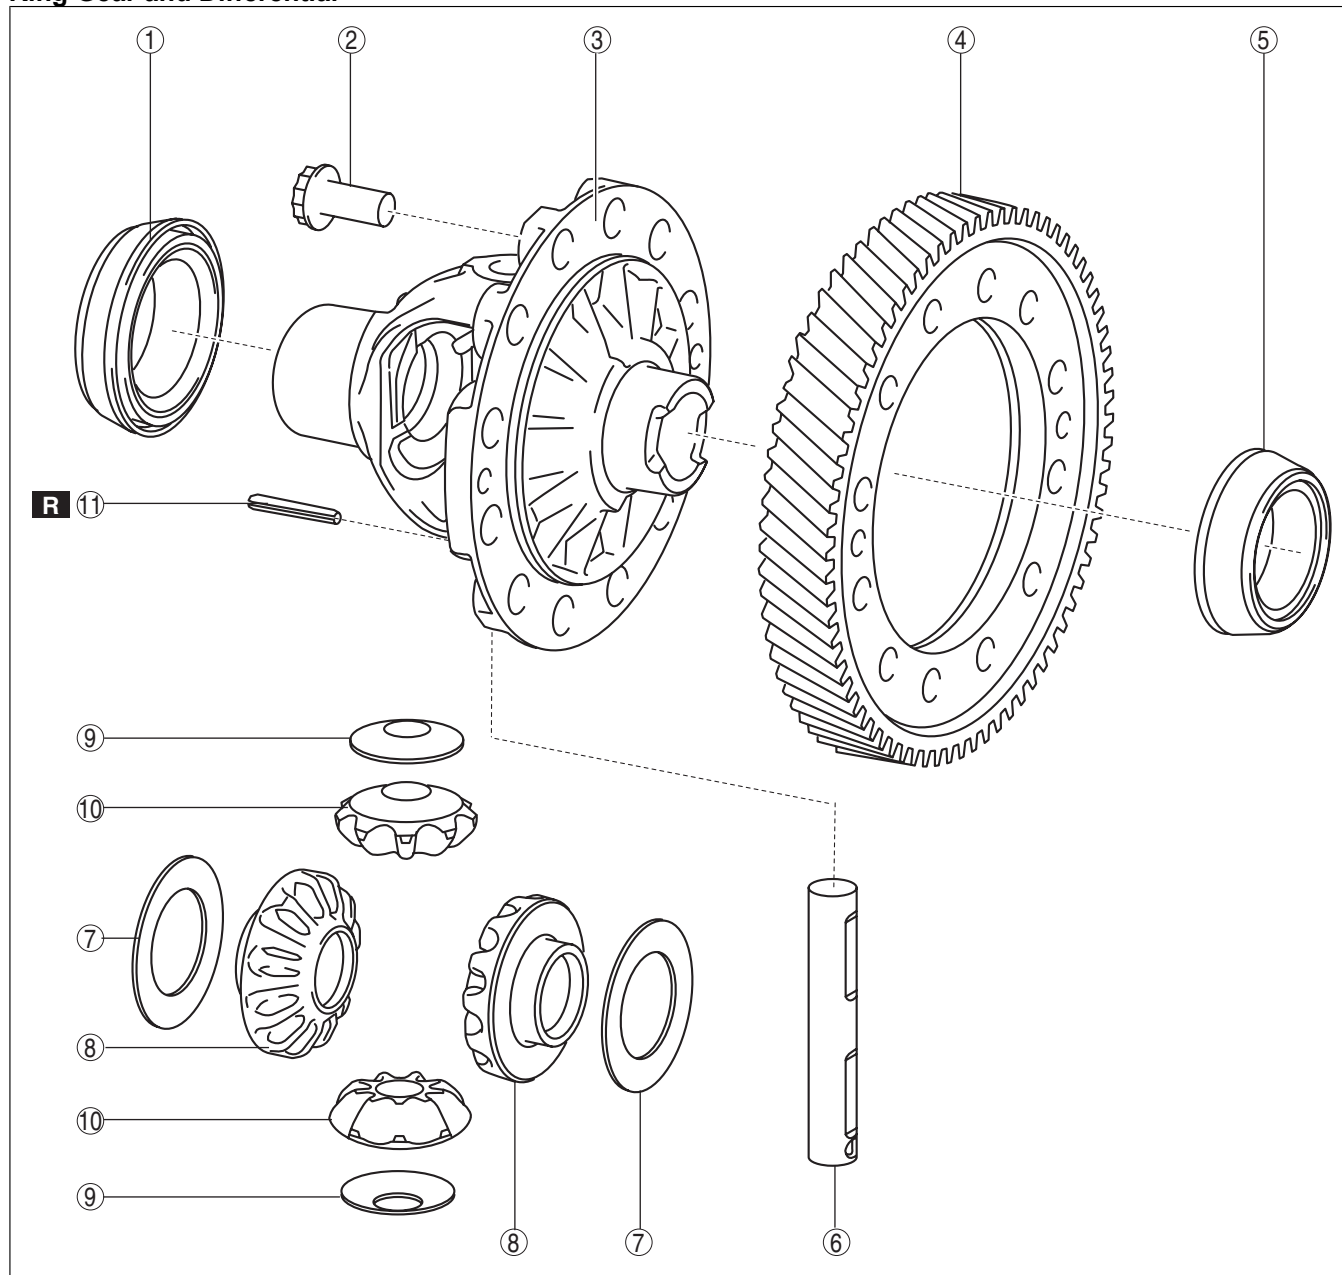


bfw3ja00000005

1	Tapered roller bearing (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL INSPECTION [FW6AX-EL].)
2	12 bolts (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6AX-EL].)

3	Differential gear case (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL INSPECTION [FW6AX-EL].)
4	Ring gear (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6AX-EL].)
5	Tapered roller bearing (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL INSPECTION [FW6AX-EL].)

6	Pinion shaft (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6AX-EL].)	9	Thrust washer (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6AX-EL].)
7	Thrust washer (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6AX-EL].) (See DIFFERENTIAL BACKLASH MEASUREMENT/ADJUSTMENT.)	10	Pinion gear (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6AX-EL].)
8	Side gear (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6AX-EL].)	11	Roll pin (See RING GEAR AND DIFFERENTIAL DISASSEMBLY [FW6AX-EL].) (See RING GEAR AND DIFFERENTIAL ASSEMBLY [FW6AX-EL].)

### End Cover Component

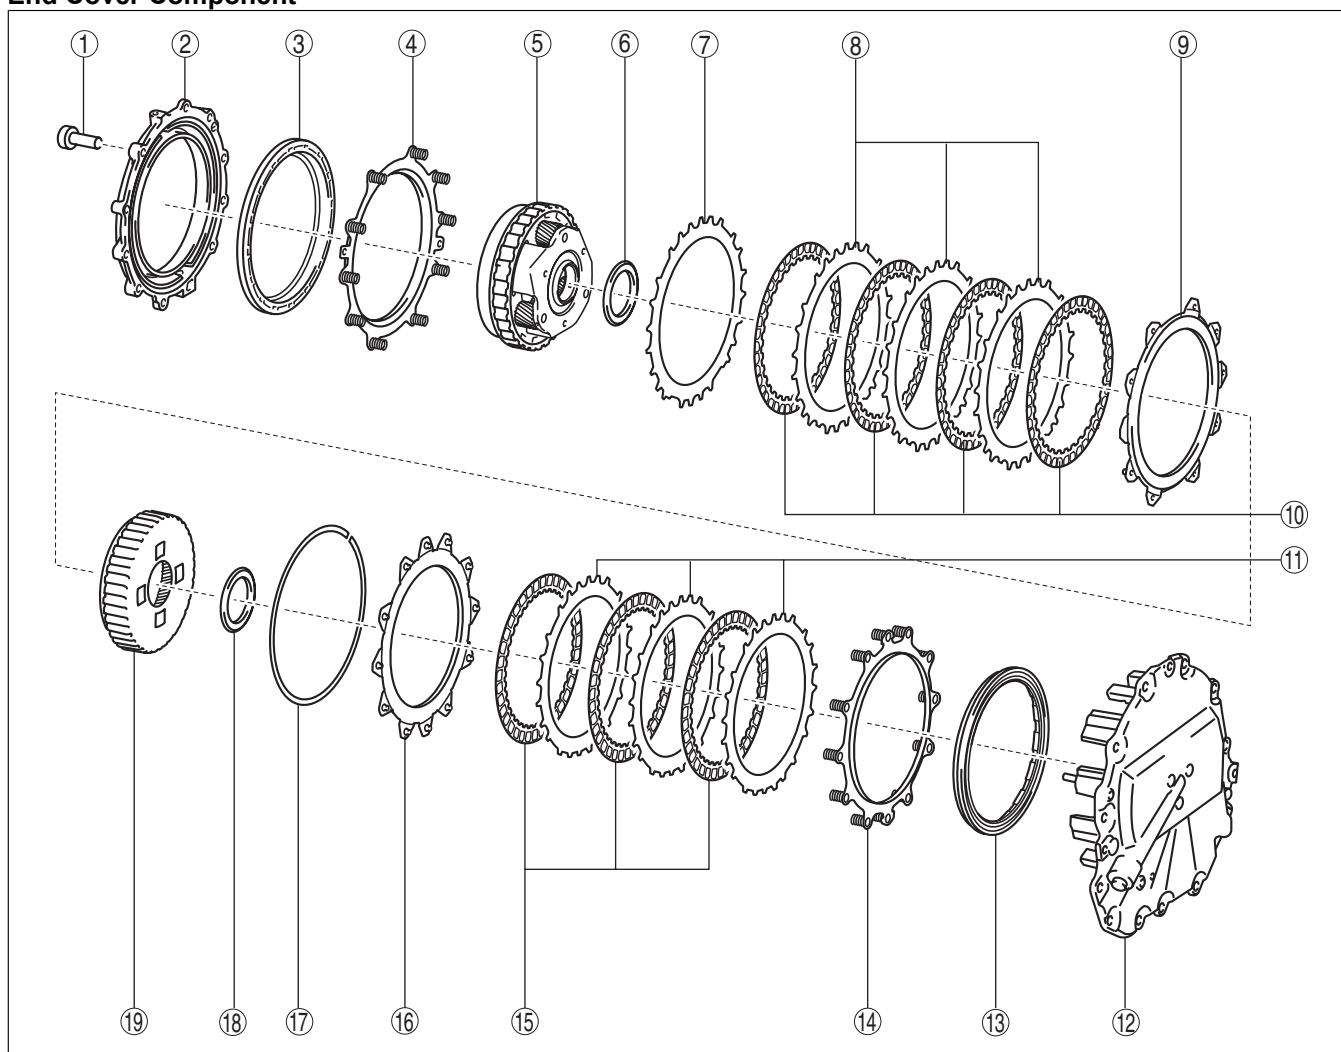

azzjjw00000296


1	8 bolts (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.)	4	Springs and retainer component (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.)
2	Brake housing (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.)	5	Reduction planetary gear (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.) (See Reduction Planetary Gear.)
3	2-6 brake piston (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.)		



6	Thrust needle bearing (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.) (See THRUST NEEDLE BEARING INSPECTION.)
7	Retaining plate (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.) (See 2-6 BRAKE CLEARANCE MEASUREMENT/ ADJUSTMENT.)
8	Driven plate (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.)
9	Retaining plate (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.)
10	Drive plate (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.) (See 2-6 BRAKE INSPECTION.)
11	Driven plate (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.)
12	End cover (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.) (See END COVER INSPECTION.)

13	R-3-5 brake piston (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.)
14	Springs and retainer component (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.)
15	Drive plate (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.) (See R-3-5 BRAKE INSPECTION.)
16	Retaining plate (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.)
17	Snap ring (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.) (See R-3-5 BRAKE CLEARANCE MEASUREMENT/ ADJUSTMENT.)
18	Thrust needle bearing (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.) (See THRUST NEEDLE BEARING INSPECTION.)
19	Reduction internal gear (See END COVER COMPONENT DISASSEMBLY.) (See END COVER COMPONENT ASSEMBLY.)

## Reduction Planetary Gear

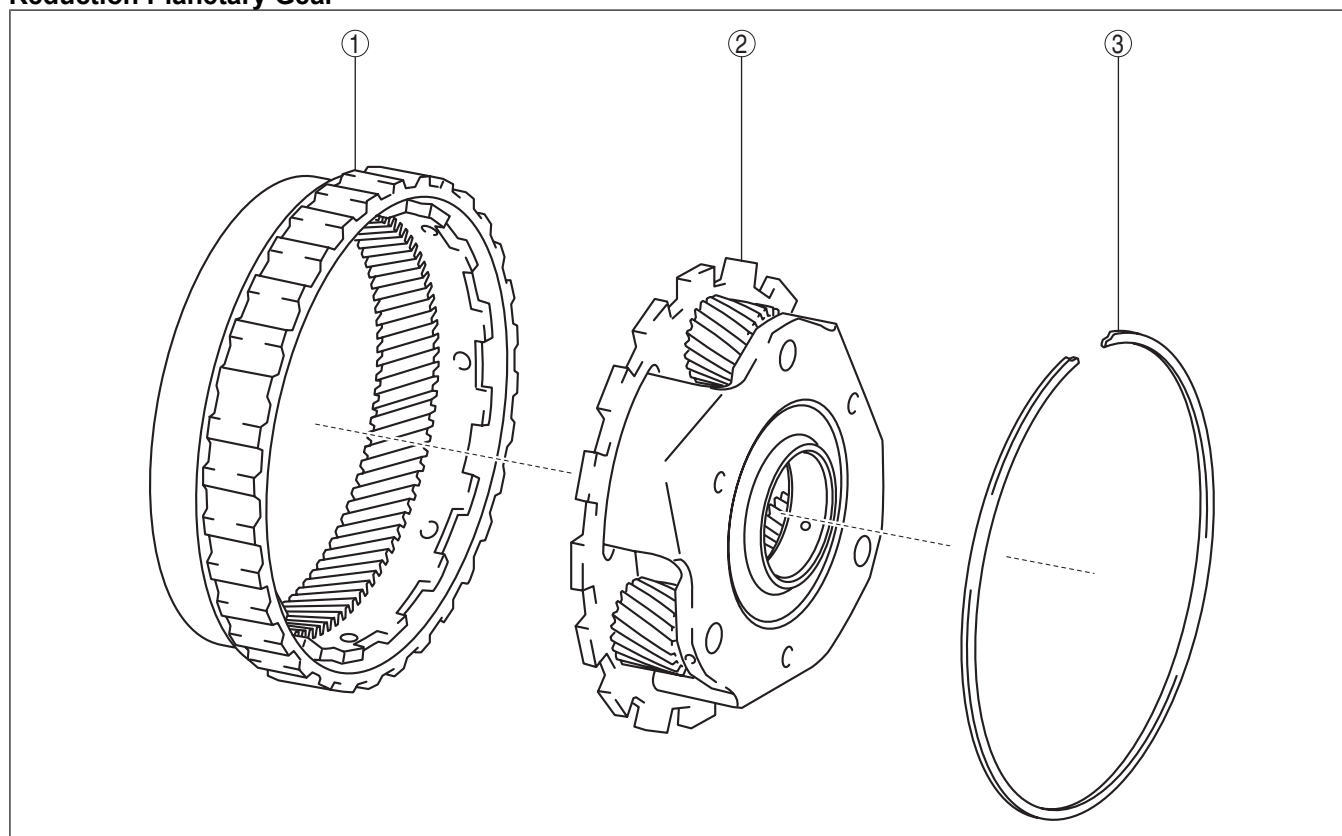

azzjjw00000297


1	Rear internal gear (See REDUCTION PLANETARY GEAR DISASSEMBLY.) (See REDUCTION PLANETARY GEAR ASSEMBLY.)
---	---

2	Reduction planetary carrier (See REDUCTION PLANETARY GEAR DISASSEMBLY.) (See REDUCTION PLANETARY GEAR ASSEMBLY.) (See REDUCTION PLANETARY GEAR INSPECTION.)
---	---



- |   |  |
|---|--|
| 3 | Snap ring<br>(See REDUCTION PLANETARY GEAR<br>DISASSEMBLY.)<br>(See REDUCTION PLANETARY GEAR<br>ASSEMBLY.) |
|---|--|

## Control Valve Body

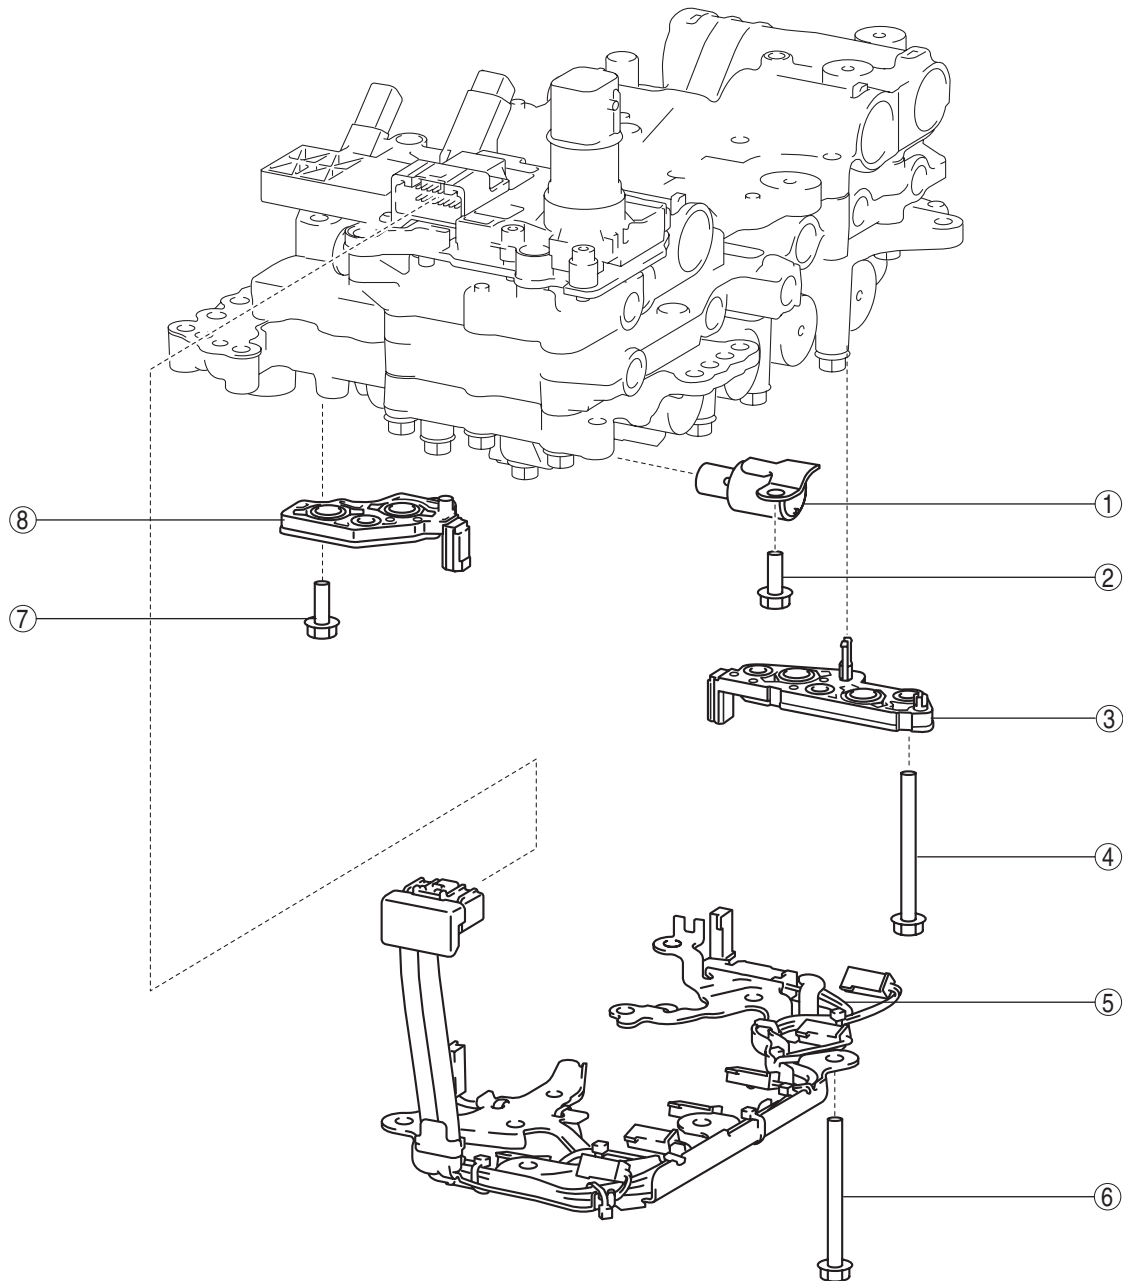

azzjjw00001437

1	ON/OFF solenoid (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)
2	Bolt (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)
3	Oil pressure switch A (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)

4	3 bolts (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)
5	Coupler component (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)
6	8 bolts (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)

---

7	3 bolts (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)
---	--

8	Oil pressure switch B (See CONTROL VALVE BODY DISASSEMBLY.) (See CONTROL VALVE BODY ASSEMBLY.)
---	--