


LF CONTROL UNIT REMOVAL/INSTALLATION


id091400110500

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the service hole cover on the front side trim.

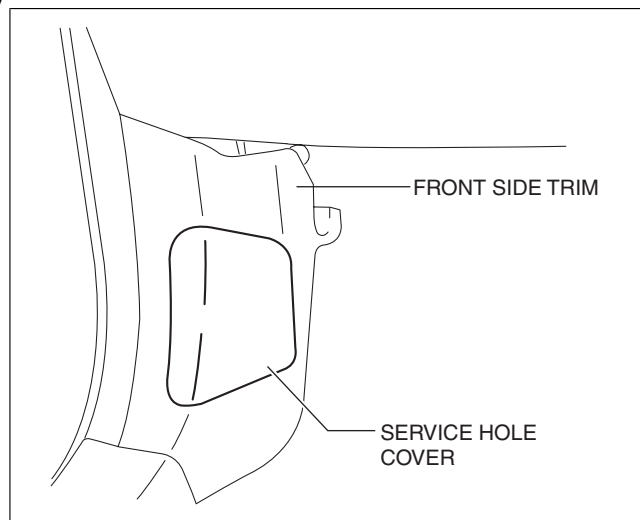


ac5jjw00000230

3. Disconnect the connector.

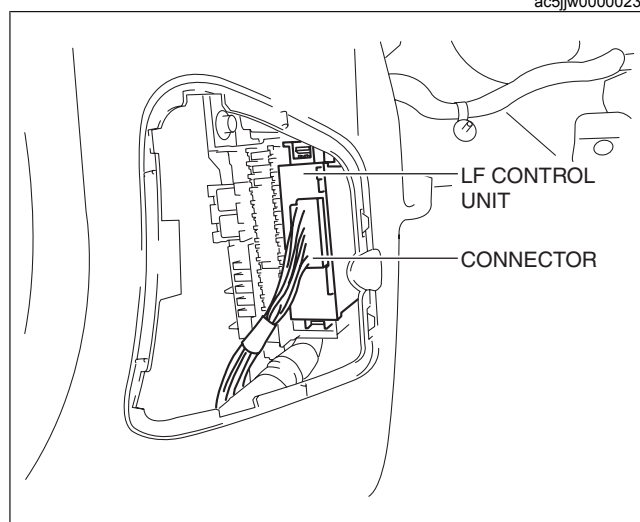

ac5wzw00000941

4. Pull the LF control unit in the direction of the arrow (2) shown in the figure and remove it while pressing the tab in the direction of the arrow (1).

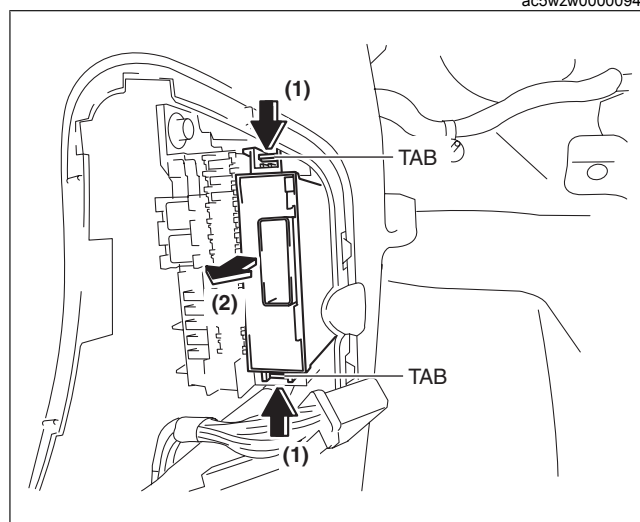

ac5jjw00000232