


## DC-DC CONVERTER REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0117i0004600

### Vehicle With i-stop

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
2. Remove the front under cover No.1. (See FRONT UNDER COVER No.1 REMOVAL/INSTALLATION.)
3. Set the front mud guard (LH) aside as shown in the figure. (See MUDGUARD REMOVAL/INSTALLATION.)
4. Remove in the order indicated in the table.
5. Install in the reverse order of removal.

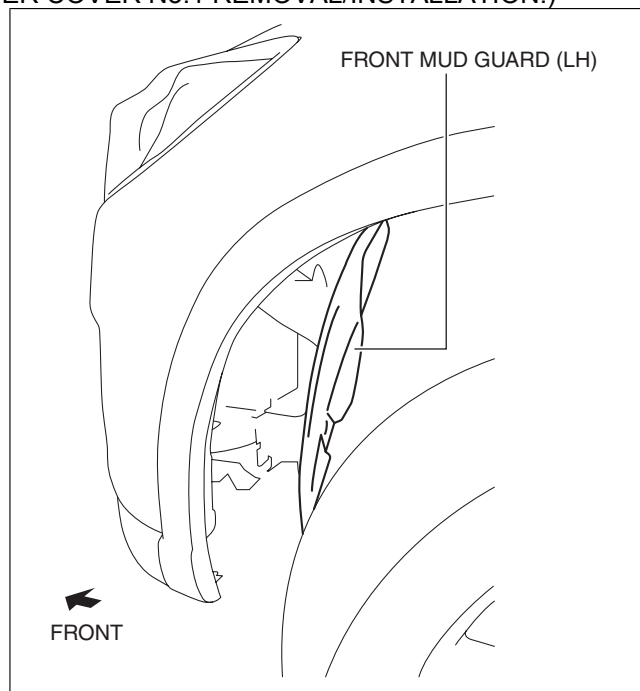

ac5wzw00005111

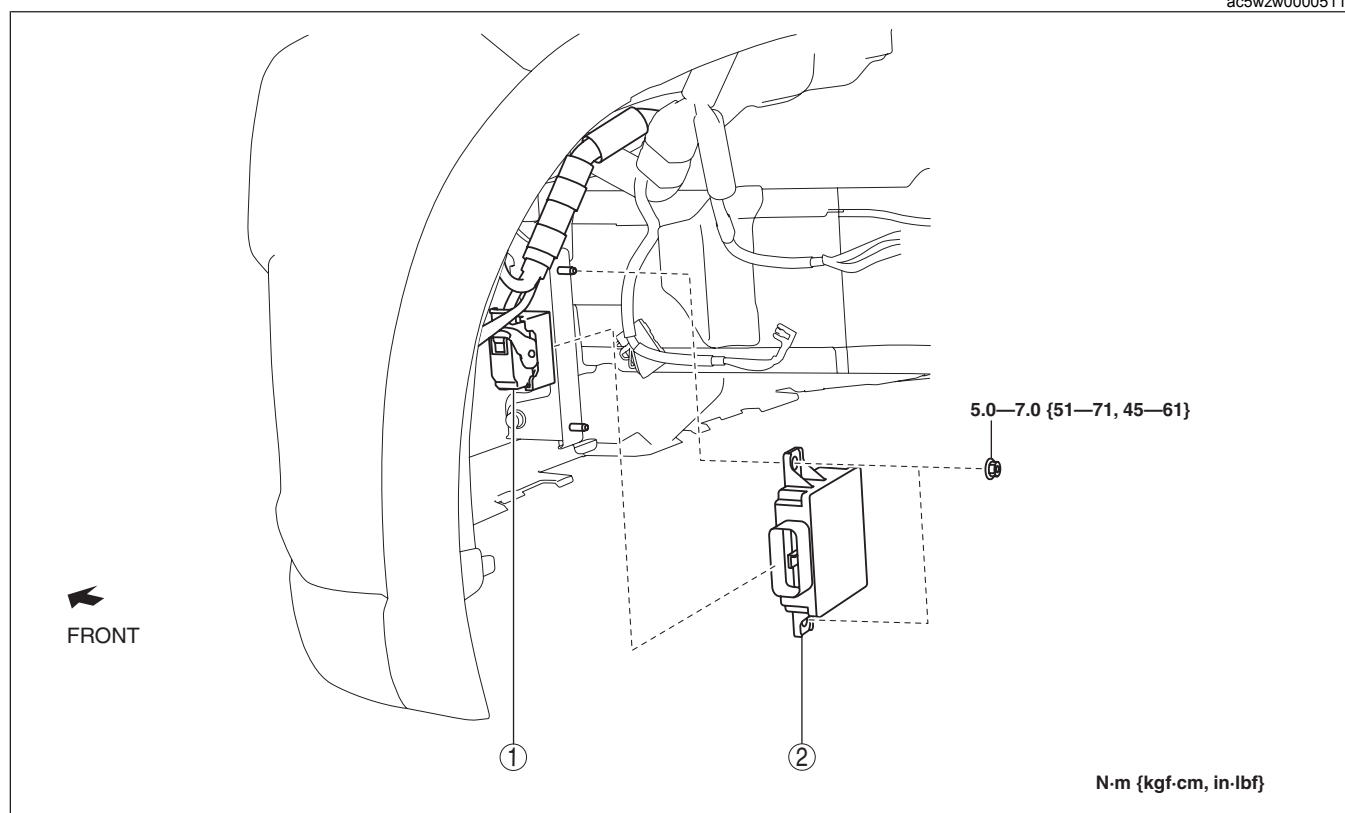


ac5wzw00002643

1	DC-DC converter connector (See DC-DC converter connector installation note.)
---	---

2	DC-DC converter
---	-----------------

### DC-DC converter connector installation note


1. Before installation, verify that the connector lever is unlocked position.

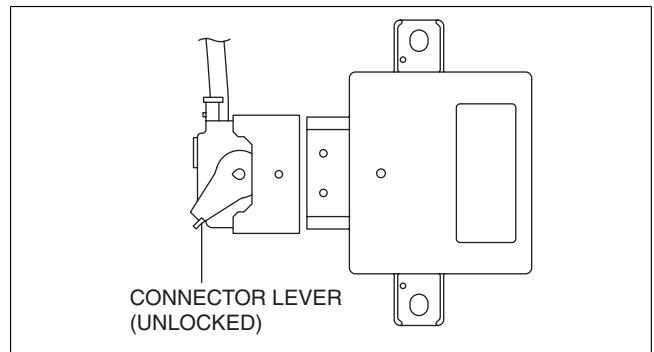

ac5wzw00002644


2. Connect the DC-DC converter connector using the following procedure:

- (1) Insert the DC-DC converter connector straight until it stops.

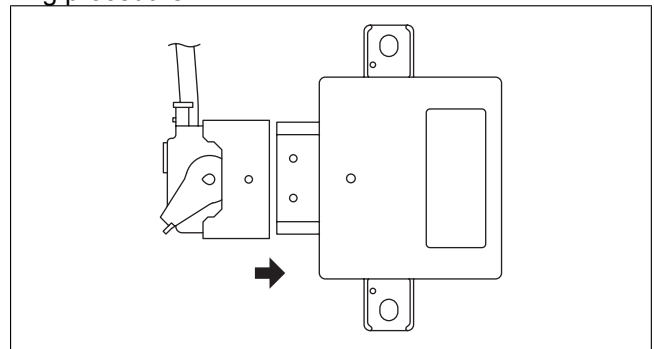

ac5wzw00002645

- (2) Move the connector lever until a click sound is heard.

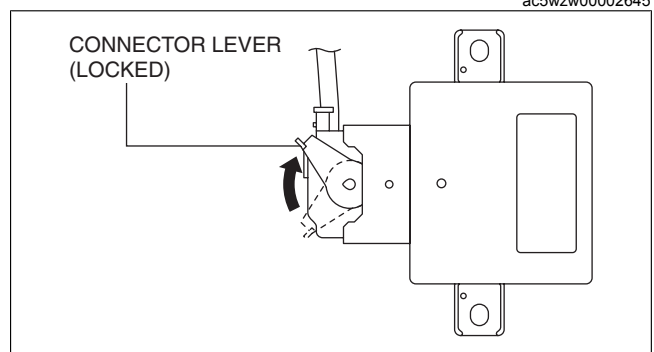

ac5wzw00002646