

REAR SEAT BACK REMOVAL/INSTALLATION

id091300912400

Caution


- When removing or putting in the rear seat, contact with the surrounding areas of the vehicle could cause scratches and damage. When removing or putting in the rear seat, always use two or more persons to perform the work and be careful not to scratch or damage the rear seat and the surrounding area of the vehicle.
- When performing the procedure with a rear seat back removed from the vehicle, perform the procedure on a clean cloth so as not to damage or soil the seat.

Note

- When removing the rear seat back from the vehicle or putting it back in, it can be performed easier by removing the headrest


6:4 Split Type

1. Remove the trunk board. (See TRUNK BOARD REMOVAL/INSTALLATION.)
2. Press the push knob to fold the rear seat back.
3. Remove bolts A.

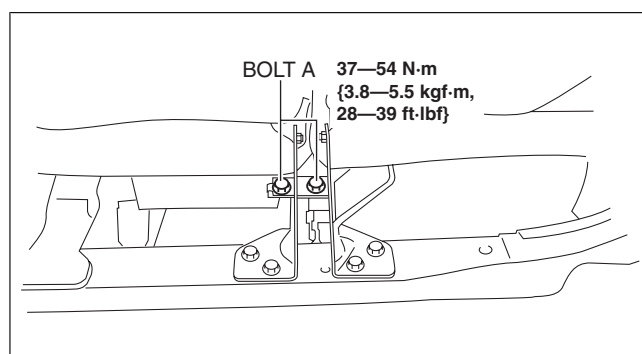


ac5uuw00001904

4. Remove the plate in the direction of the arrow (1) shown in the figure.

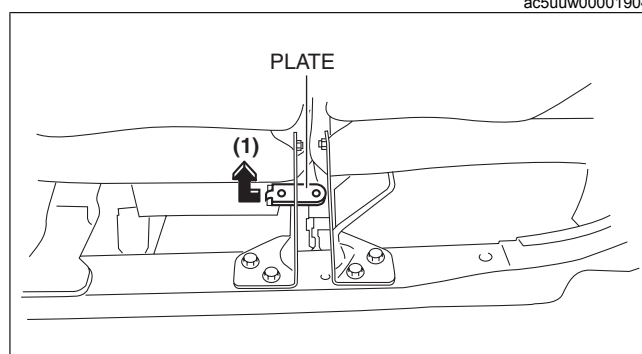


ac5uuw00001905

5. Remove bolts B.

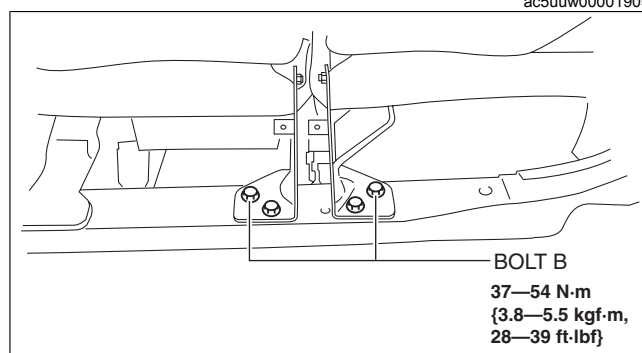


ac5uuw00001906


6. Remove bolts C.

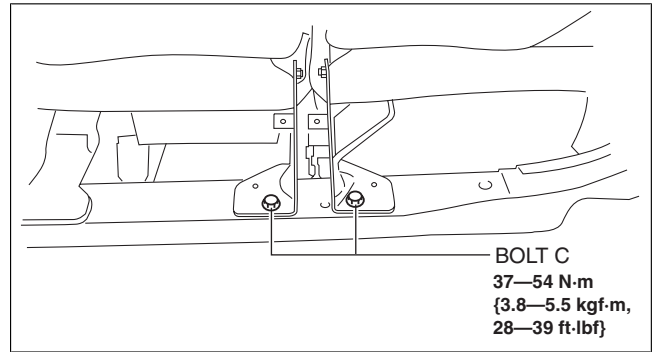


7. Remove bolt D

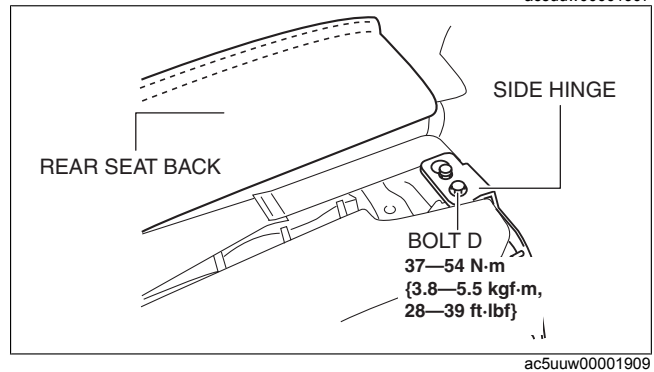

8. After moving the rear seat in the direction of the arrow (2) shown in the figure, remove pin A while moving the side hinge in the direction of the arrow (3).

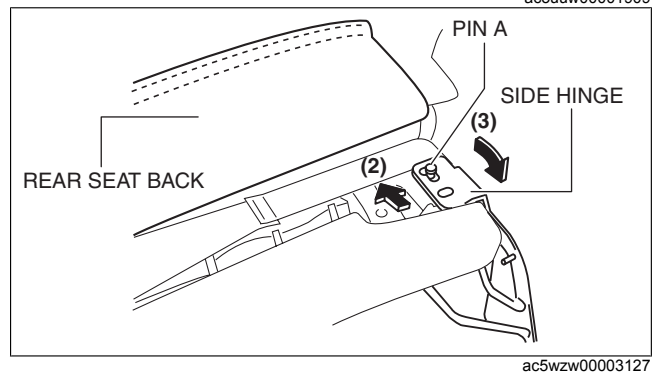


9. Move the rear hinge in the direction of the arrow (4) shown in the figure and set pin B aside.
10. Remove the rear seat back.

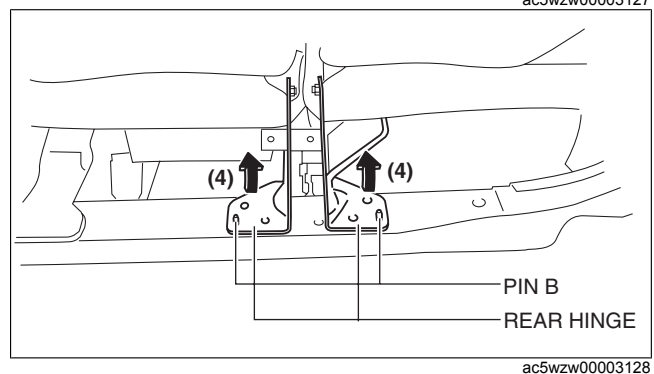

4:2:4 Split Type

1. Remove the trunk board. (See TRUNK BOARD REMOVAL/INSTALLATION.)
2. Remove the rear seat. (See REAR SEAT REMOVAL/INSTALLATION.)
3. Remove bolts.

BOLT :16—27 N·m
{1.7—2.7 kgf·m, 12—19 ft·lbf}

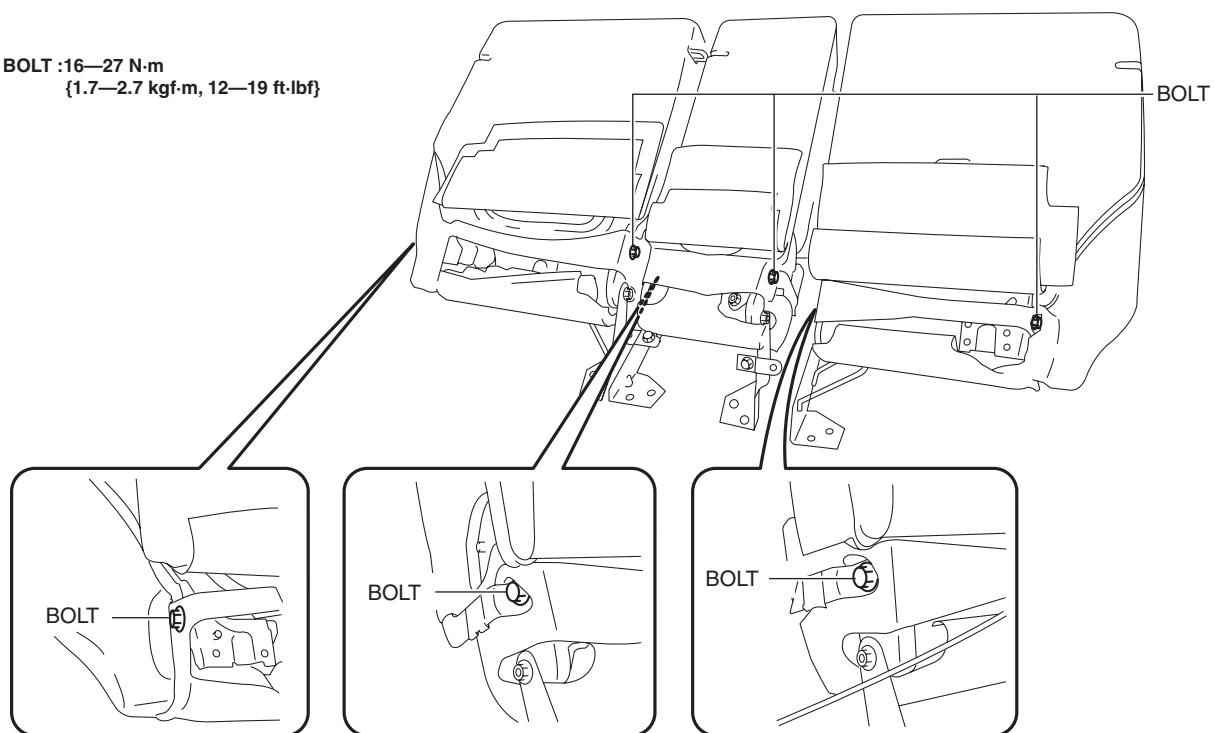

ac5wzw00003129

4. Remove the rear seat back.
5. Install in the reverse order of removal.