


DRIVE PLATE REMOVAL/INSTALLATION [FW6A-EL, FW6AX-EL]

id0517h2117300

1. Remove the transaxle. (See AUTOMATIC TRANSAXLE REMOVAL/INSTALLATION [FW6A-EL].) (See AUTOMATIC TRANSAXLE REMOVAL/INSTALLATION [FW6AX-EL].)
2. Remove in the order indicated in the table.

| | |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Drive plate installation bolts (See Drive Plate Installation Bolts Removal Note.) (See Drive Plate Installation Bolts Installation Note.) |
| 2 | Backing plate |
| 3 | Drive plate |


3. Install in the reverse order of removal.

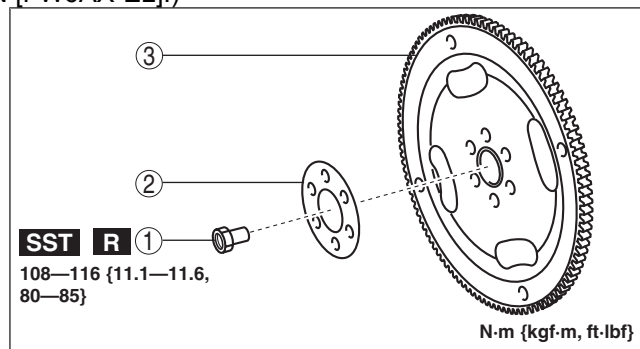

am3uuw00009184

Drive Plate Installation Bolts Removal Note

1. Set the **SST** against the drive plate.
2. Loosen the drive plate installation bolts uniformly in two or three steps in the order shown in the figure, then remove the bolts and the drive plate.

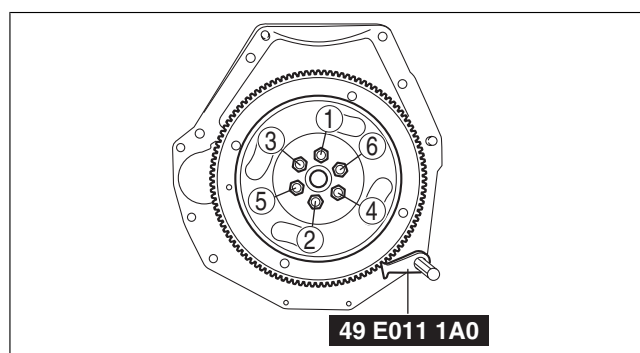


am3uuw00008333

Drive Plate Installation Bolts Installation Note

1. Set the **SST** against the drive plate.
2. Tighten the new drive plate installation bolts uniformly in two or three steps in the order shown in the figure.

Tightening torque

108—116 N·m {11.1—11.8 kgf·m, 80—85 ft·lbf}

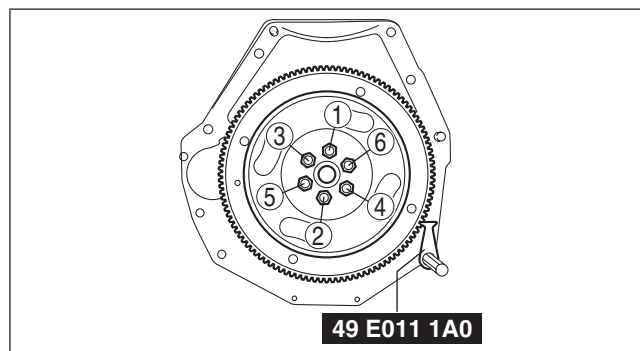

am3uuw00008334