


FAN SWITCH INSPECTION [MANUAL AIR CONDITIONER]

id0740a2801300

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
 - (2) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
 - (3) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
 - (4) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
 - (5) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
 - (6) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
 - (7) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
 - (8) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (9) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
3. Remove the climate control unit. (See CLIMATE CONTROL UNIT REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].)
4. Verify that the continuity between the fan switch terminals as indicated in the table.
 - If there is any malfunction, replace the fan switch.

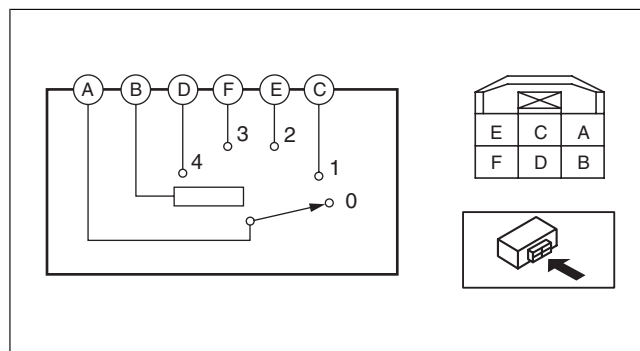

ac5wzw00002943

○—○ : Continuity

Switch position	Terminal					
	A	B	C	D	E	F
0						
1	○		○			
2	○				○	
3	○	○				○
4	○	○		○		

ac5wzw00001905