


REAR PARKING BRAKE CABLE REMOVAL/INSTALLATION

id041200801300

1. Remove the front console box. (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
2. Remove the shift lever knob. (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
3. Remove the shift panel. (See SHIFT PANEL REMOVAL/INSTALLATION.)
4. Remove the upper panel. (See UPPER PANEL REMOVAL/INSTALLATION.)
5. Remove the rear console. (See REAR CONSOLE REMOVAL/INSTALLATION.)
6. Loosen the adjusting nut.
7. Remove the floor under cover No.2. (See FLOOR UNDER COVER REMOVAL/INSTALLATION.)
8. Remove in the order indicated in the table.
9. Install in the reverse order of removal.
10. After installation, inspect the parking brake lever stroke. (See PARKING BRAKE LEVER INSPECTION.)

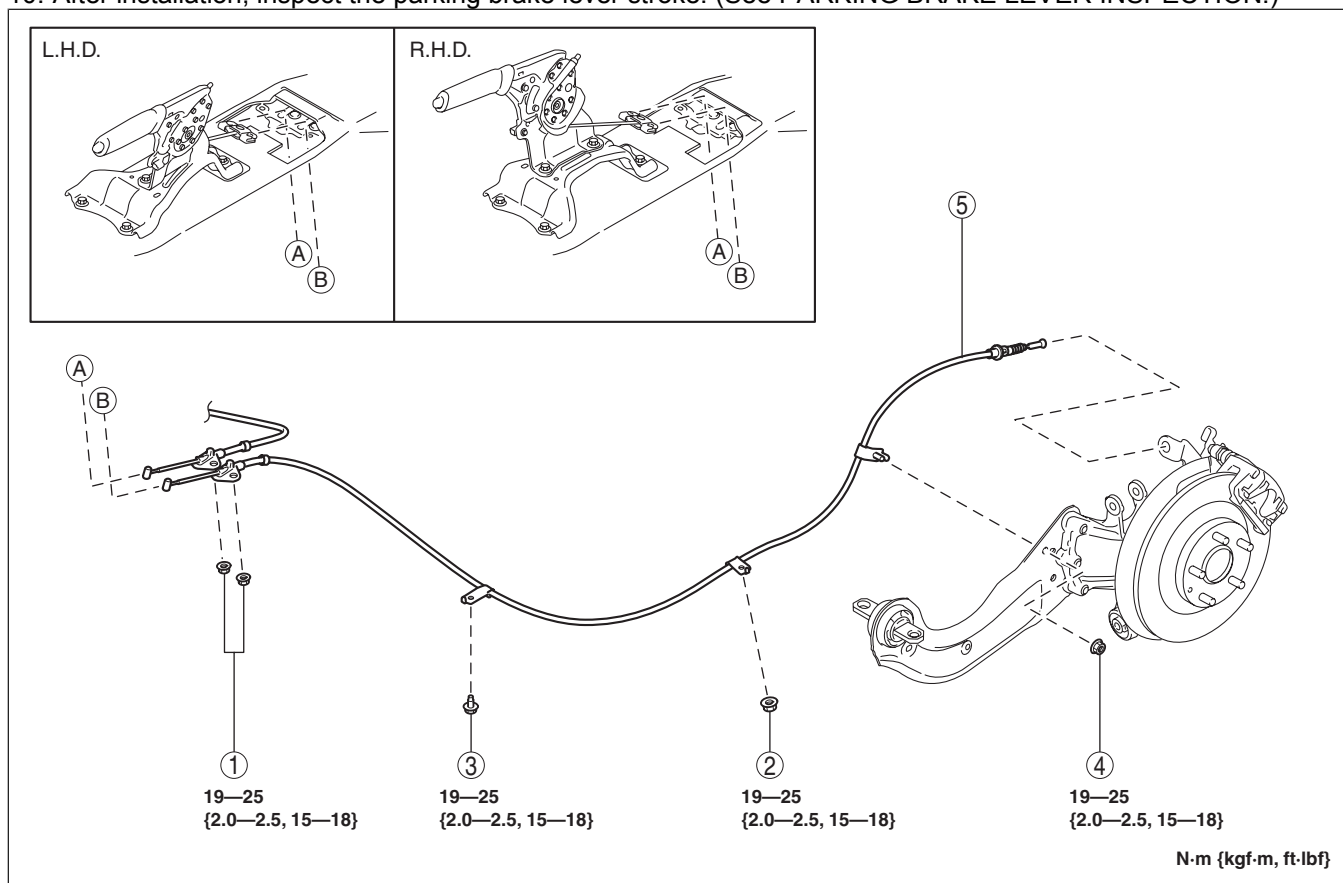

ac5wzw00000238

1	Nut
2	Nut
3	Bolt
4	Nut

5	Rear parking brake cable (See Rear Parking Brake Cable Removal Note.) (See Rear Parking Brake Cable Installation Note.)
---	---


Rear Parking Brake Cable Removal Note

1. Remove the rear parking brake cable from the front parking brake cable. (See FRONT PARKING BRAKE CABLE REMOVAL/INSTALLATION.)
2. Remove the rear parking brake cable from the rear caliper.
3. Remove the rear parking brake cable.

Rear Parking Brake Cable Installation Note

1. Install the rear parking brake cable to the rear caliper.

-
2. Verify that the outer end tabs of the rear parking brake cable is securely engaged with the bracket.

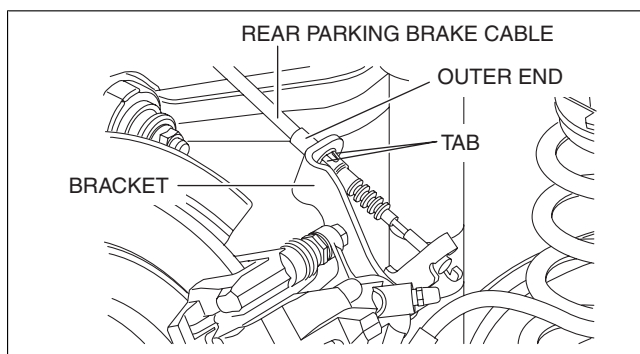

ac5wzw00000251