


TRANSFER LOCATION INDEX [FW6AX-EL, GW6AX-EL]

id0316g6800100

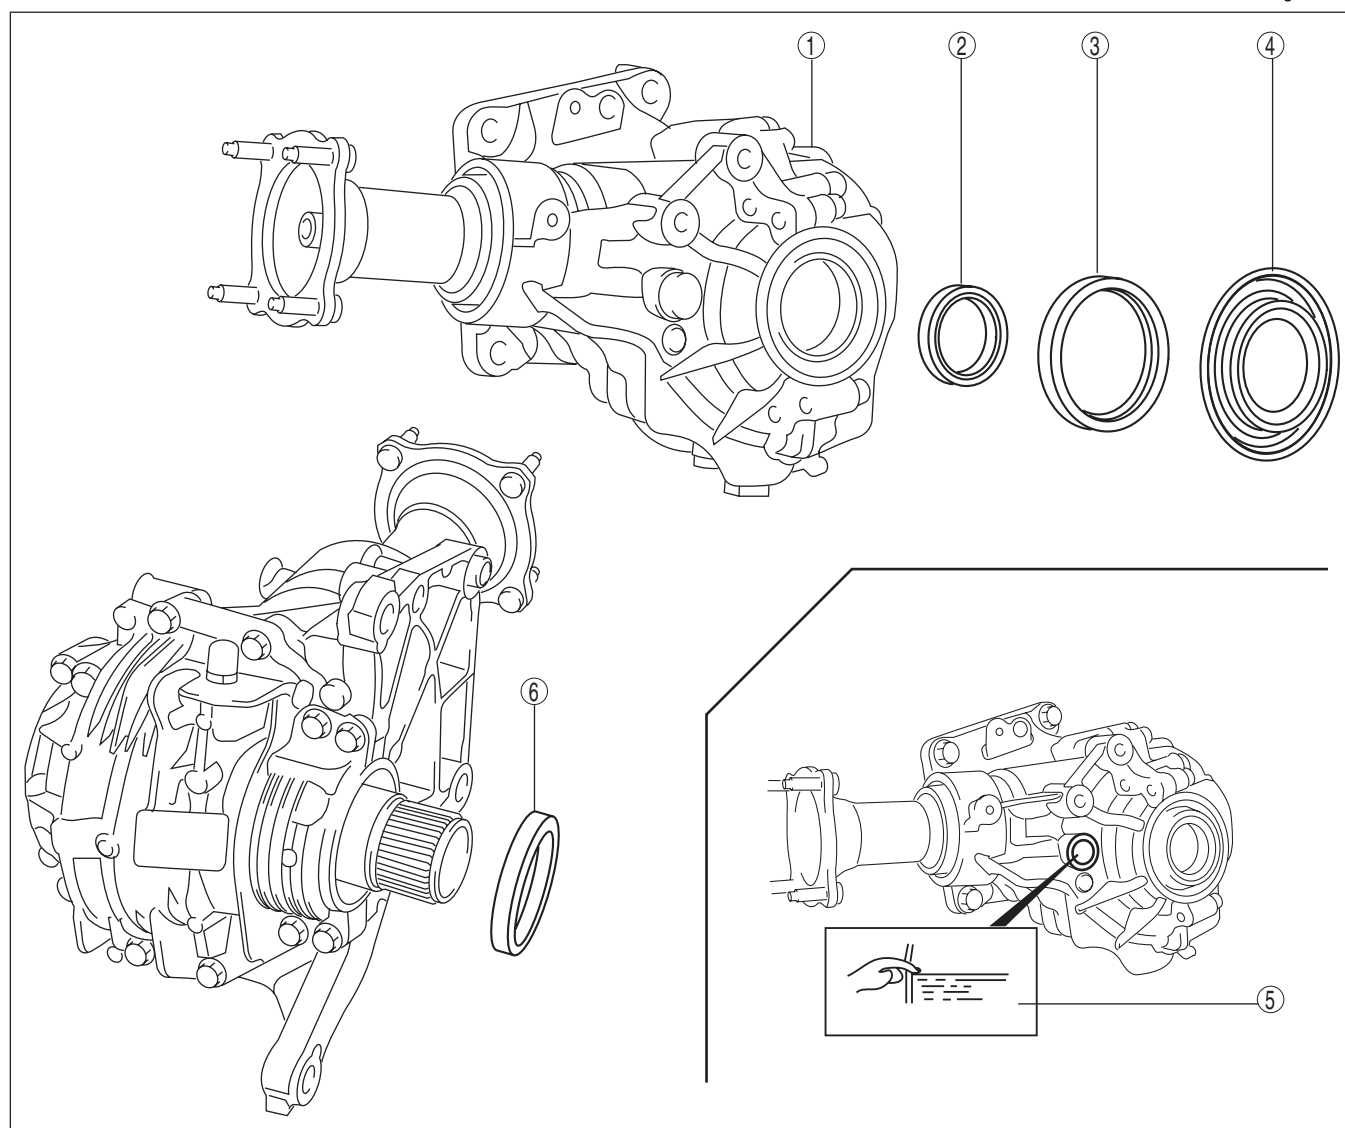

ac5uuw00000088

1	Transfer (See TRANSFER REMOVAL/INSTALLATION [FW6AX-EL].) (See TRANSFER REMOVAL/INSTALLATION [GW6AX-EL].)
2	Transfer oil seal (RH) No.3 (See TRANSFER OIL SEAL REPLACEMENT [FW6AX-EL, GW6AX-EL].)
3	Transfer oil seal (RH) No.2 (See TRANSFER OIL SEAL REPLACEMENT [FW6AX-EL, GW6AX-EL].)
4	Transfer oil seal (RH) No.1 (See TRANSFER OIL SEAL REPLACEMENT [FW6AX-EL, GW6AX-EL].)

5	Transfer oil (See TRANSFER OIL INSPECTION [FW6AX-EL, GW6AX-EL].) (See TRANSFER OIL REPLACEMENT [FW6AX-EL, GW6AX-EL].)
6	Transfer oil seal (LH) (See TRANSFER OIL SEAL REPLACEMENT [FW6AX-EL, GW6AX-EL].)