


## BEEP SOUND ADJUSTMENT

id092200024100

### Note


- The parking buzzer volume change mode is activated by operating the parking sensor switch and ignition using the specified procedure.
- While in the parking buzzer volume change mode, the parking buzzer sounds for approx. 1 s when activating the mode and the parking sensor indicator flashes while activating the mode. If the parking buzzer does not sound or the parking sensor indicator does not flash, the procedure for activating the parking buzzer volume change mode may have been performed incorrectly. Switch the ignition off and repeat the procedure from Step 1.

### Front Parking Sensor Buzzer

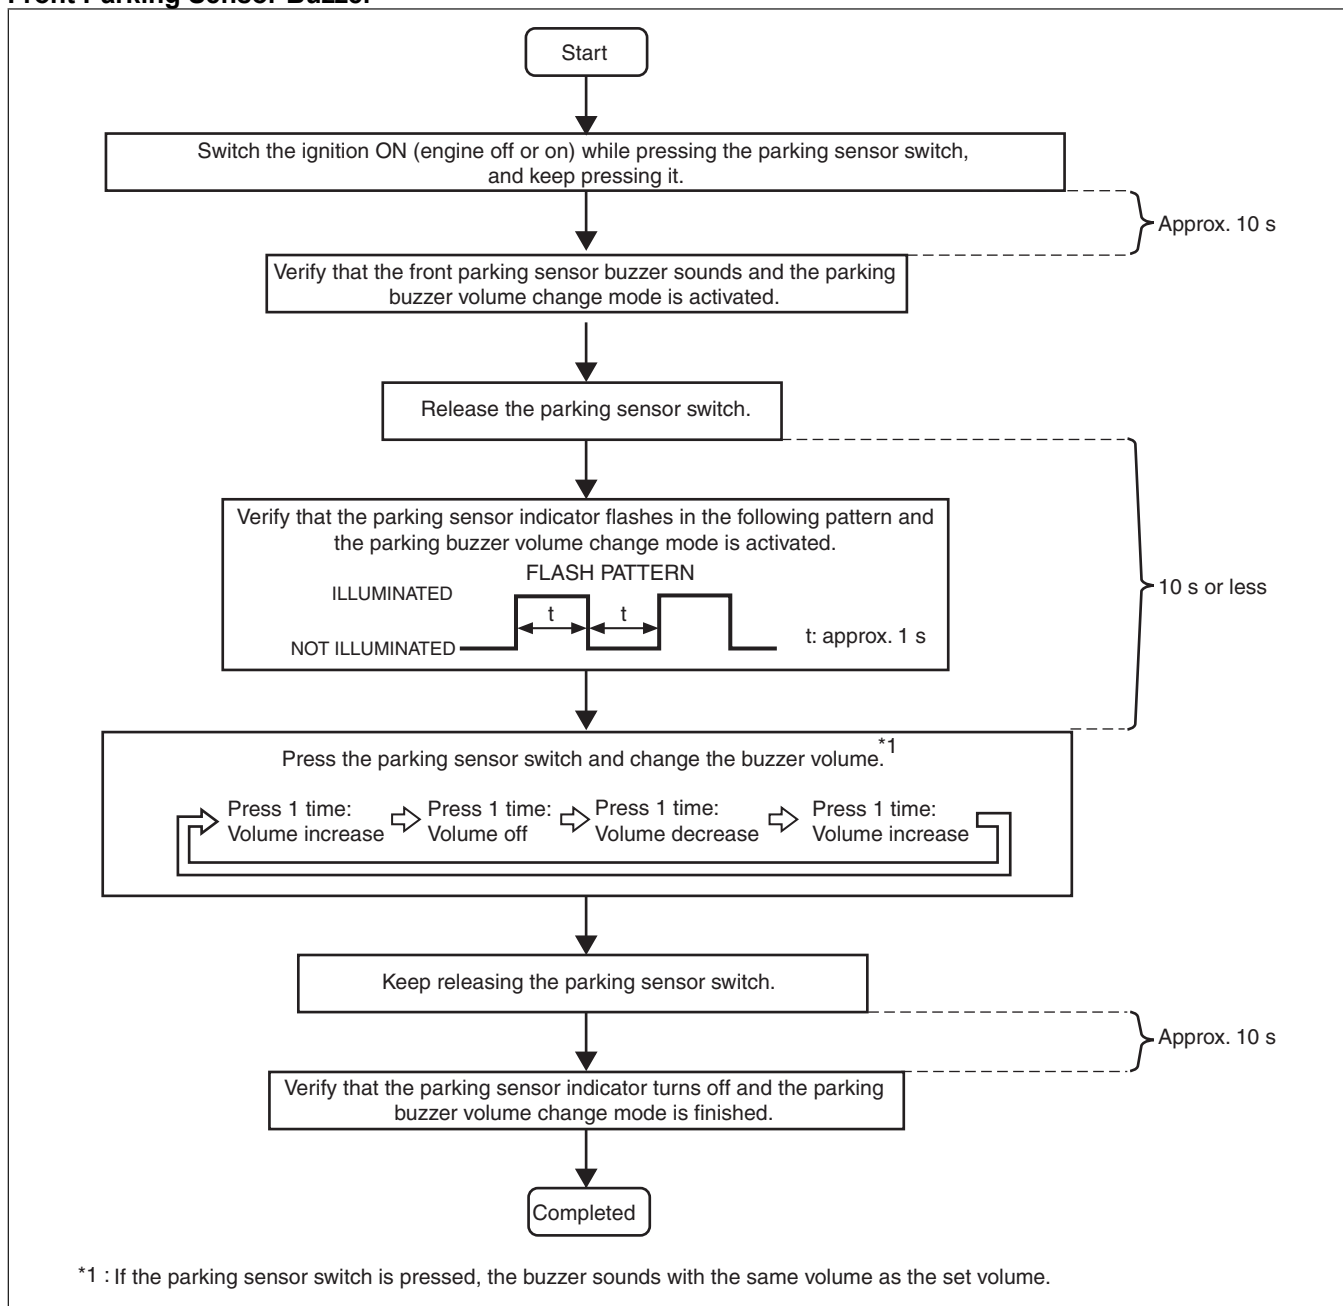

ac5wzw00003788

## Rear Parking Sensor Buzzer

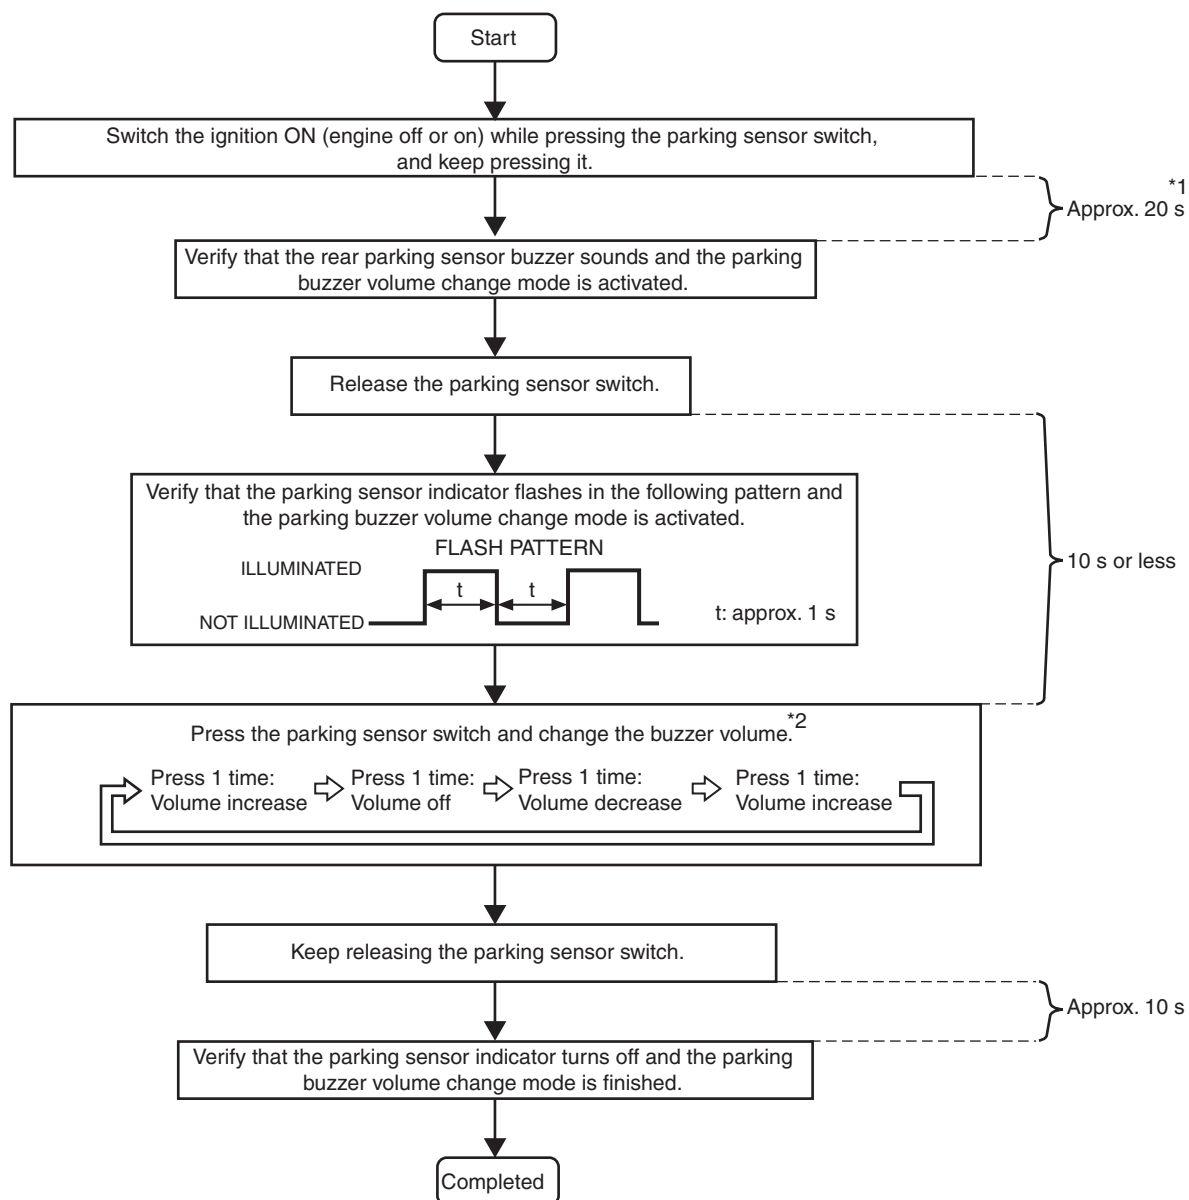

\*1 : Although the front parking buzzer sounds after approx. 10 s, this does not indicate an improper procedure. Continue to press the switch.

\*2 : If the parking sensor switch is pressed, the buzzer sounds with the same volume as the set volume.