


WASHER TANK REMOVAL/INSTALLATION

id091900801700


With Washer Fluid-level Sensor

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Partially peel back the front over fender. (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
3. Set the mudguard (RH) aside. (See MUDGUARD REMOVAL/INSTALLATION.)
4. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
5. Remove the bracket.
6. Disconnect the washer motor connector.
7. Disconnect the headlight cleaner motor connector.
8. Disconnect the washer fluid-level sensor connector.
9. Disconnect the windshield washer hose.
10. Disconnect the rear washer hose.

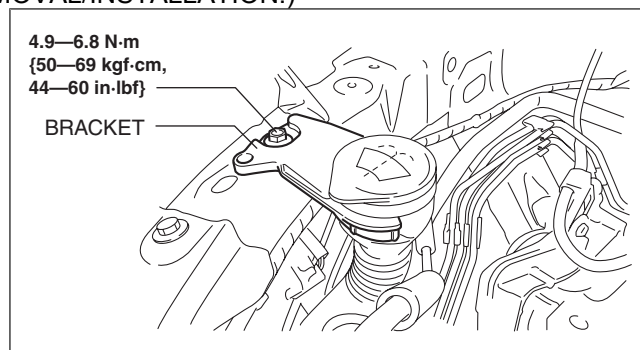


ac5wzw00000229

11. While pressing tabs of clips in the direction of the arrows (1) shown in the figure, remove it in the direction of the arrow (2).

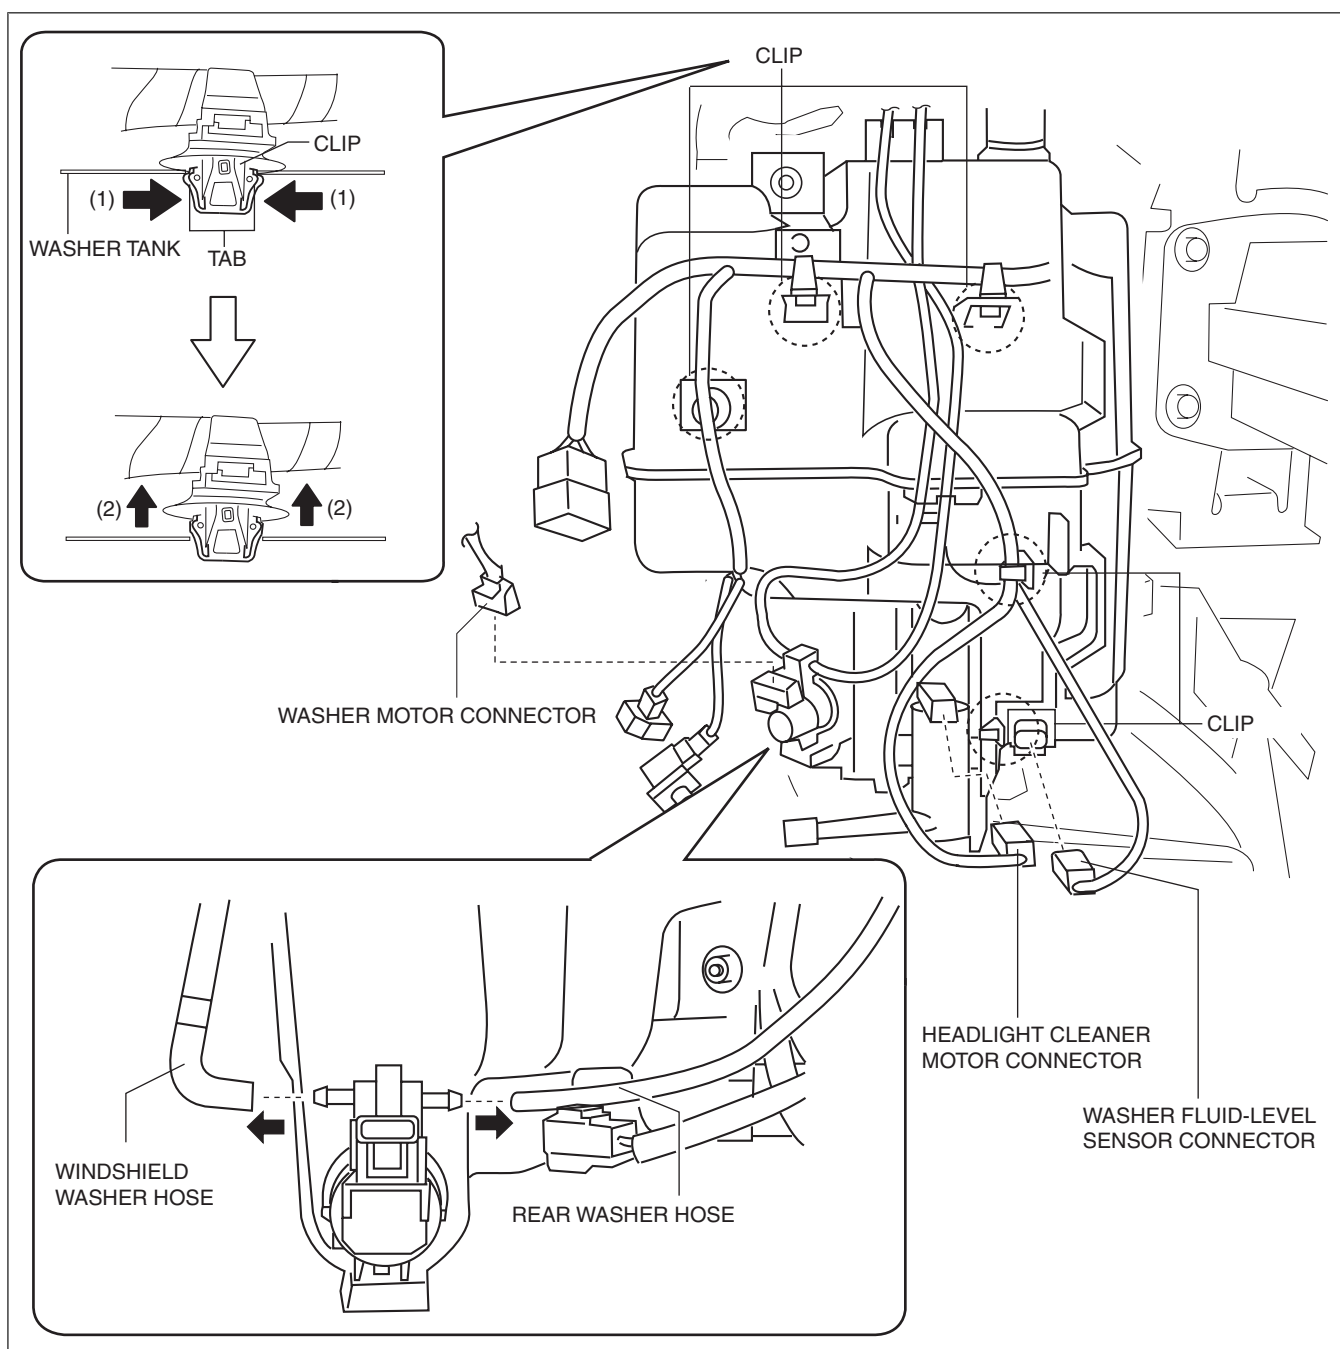


ac5wzw00001633

12. Remove the windshield washer hose from the hooks.
13. Remove the rear washer hose from the hooks.
14. Remove bolts.

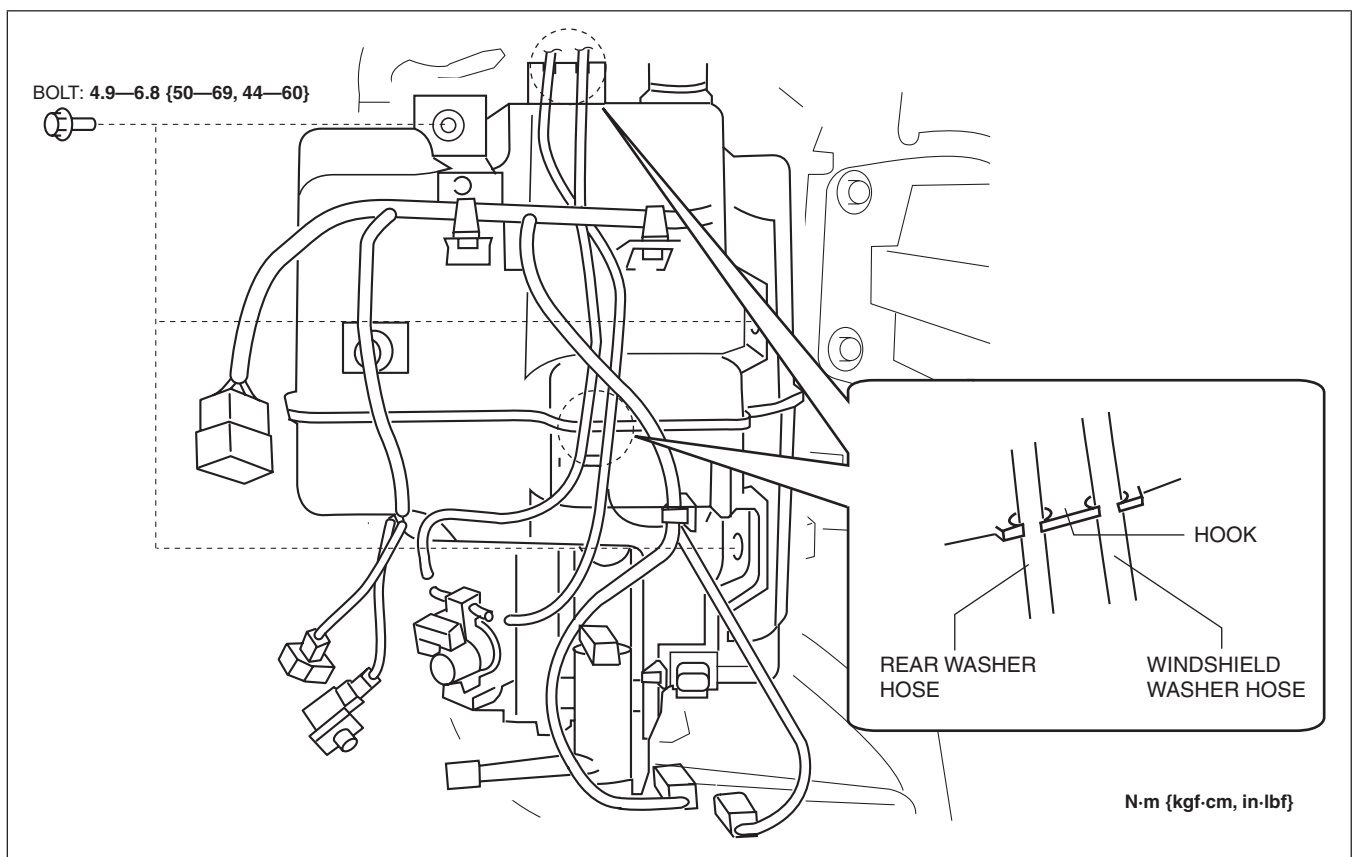

ac5wzw00002196

15. Remove the washer tank positioning hook and notch from the vehicle and remove the washer tank.

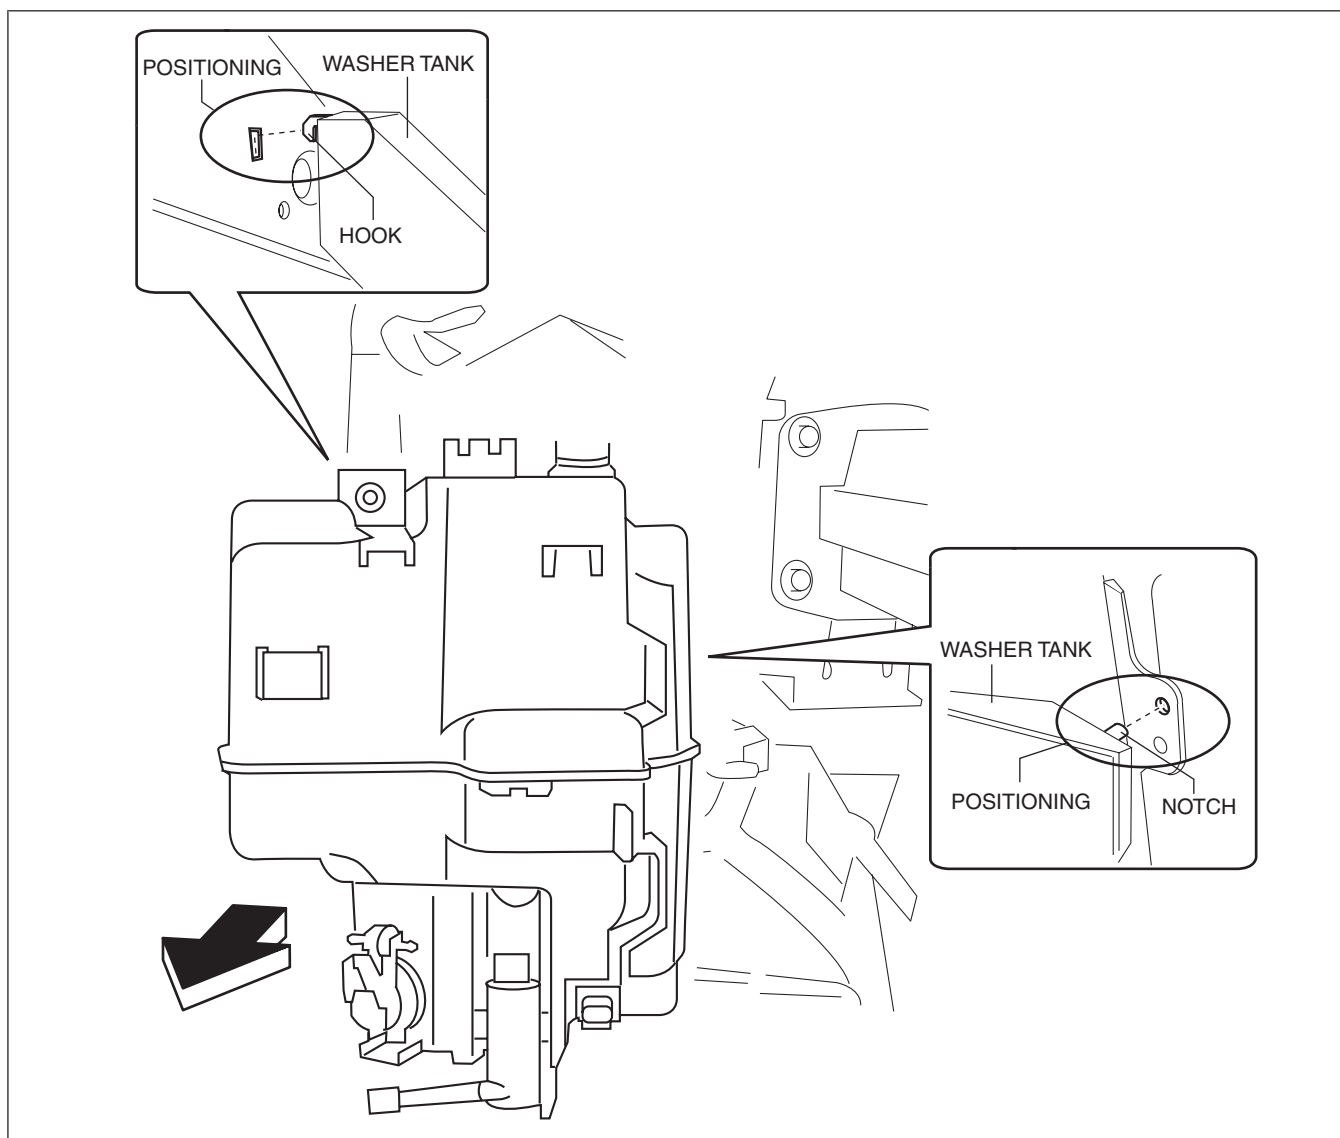


ac5wzw00002197

16. Install in the reverse order of removal.


Without Washer Fluid-level Sensor

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Partially peel back the front over fender. (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
3. Set the mudguard (RH) aside. (See MUDGUARD REMOVAL/INSTALLATION.)
4. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
5. Remove the bracket.
6. Disconnect the washer motor connector.
7. Disconnect the windshield washer hose.
8. Disconnect the rear washer hose.

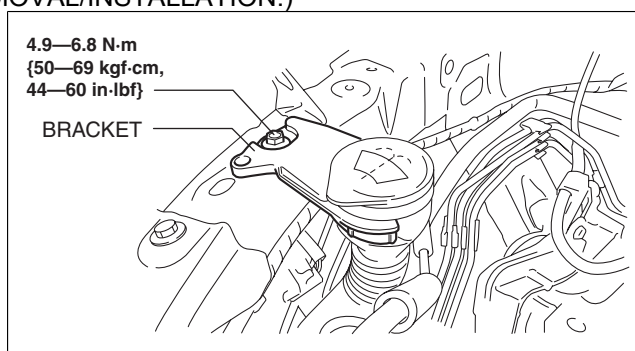

ac5wzw00000229



9. While pressing tabs of clips in the direction of the arrows (1) shown in the figure, remove it in the direction of the arrow (2).

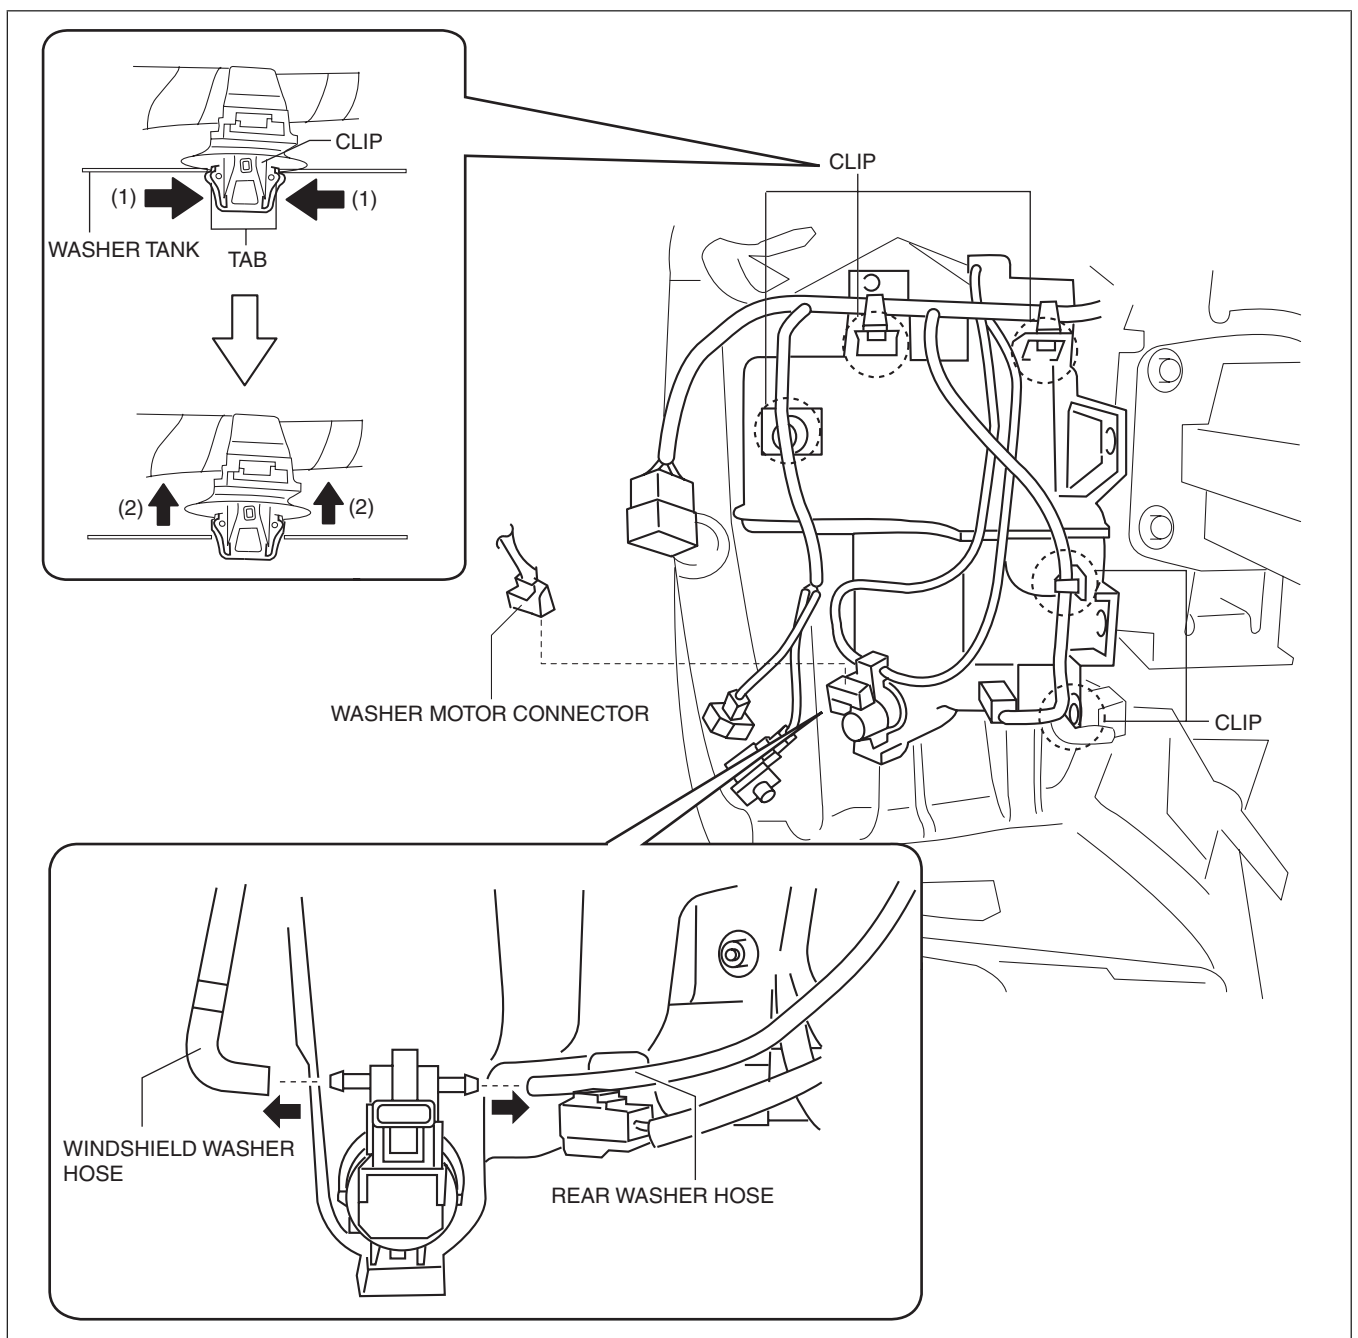

ac5wzw00001637

10. Remove the windshield washer hose from the hooks.
11. Remove the rear washer hose from the hooks.
12. Remove bolts.




BOLT: 4.9—6.8 {50—69, 44—60}

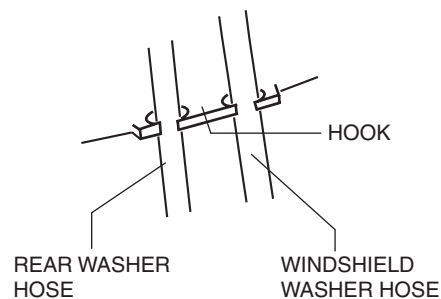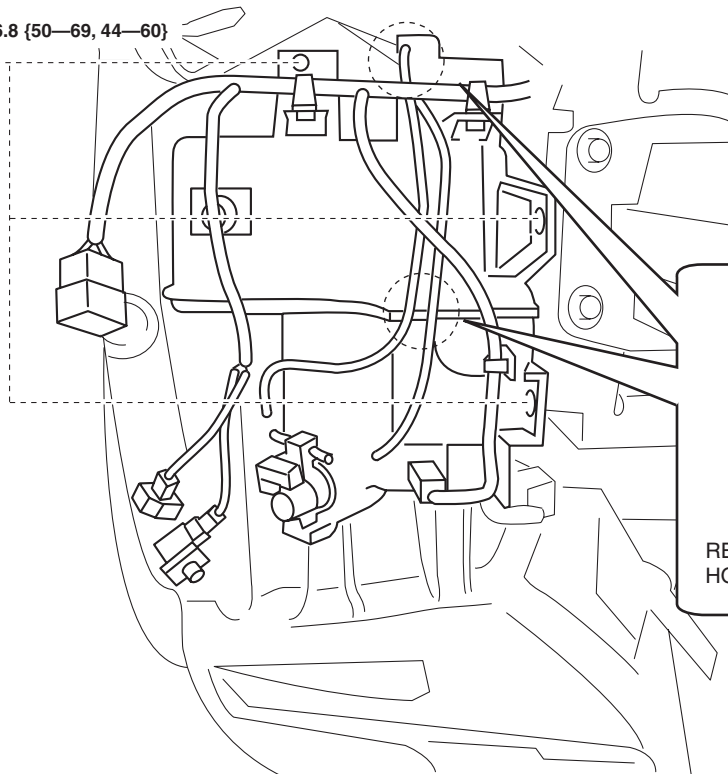

N·m {kgf·cm, in·lbf}

ac5wzw00001638

13. Remove the washer tank positioning hook and notch from the vehicle and remove the washer tank.

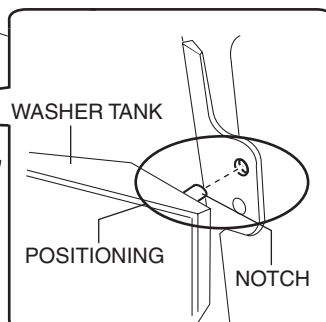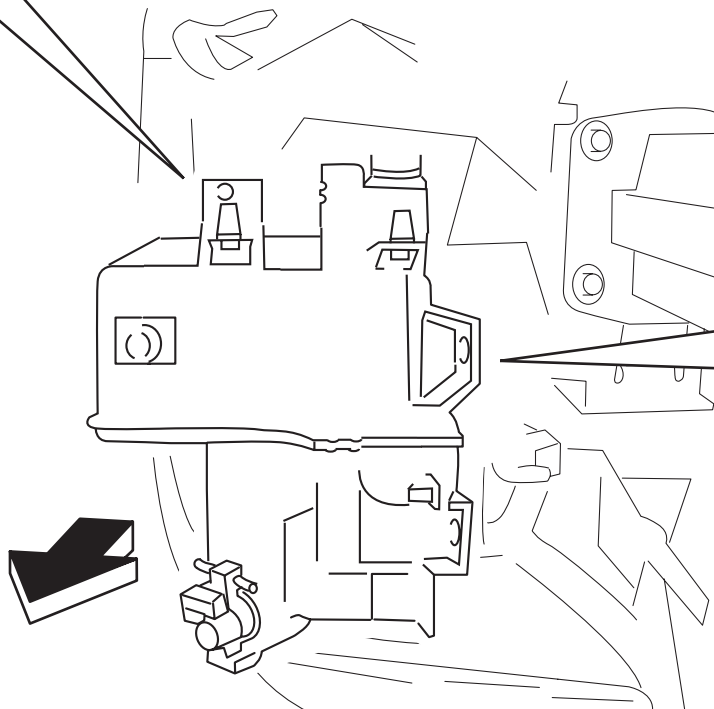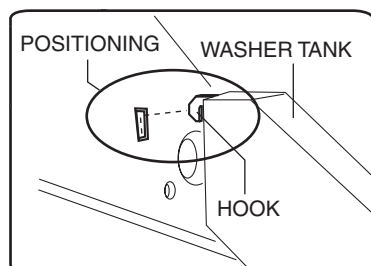

ac5wzw00002978

14. Install in the reverse order of removal.