

## FUEL INJECTOR INSPECTION [SKYACTIV-D 2.2]


id0114z7800700

### Resistance inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the engine cover. (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3. Disconnect the fuel injector connector.
4. Measure the resistance between fuel injector terminals A and B.

### Fuel injector resistance (specification) 0.9—1.1 Megohms [20 °C {68 °F}]

- If not within the specification, replace the fuel injector. (See FUEL INJECTOR REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

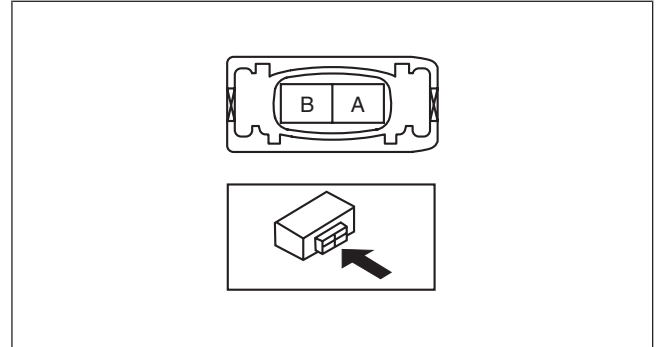

ac5jjw00003524