


VANITY MIRROR ILLUMINATION INSPECTION

id091800808500

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the sunvisor. (See SUNVISOR REMOVAL/INSTALLATION.)
3. Verify that the continuity between the vanity mirror illumination terminals is as indicated in the table.

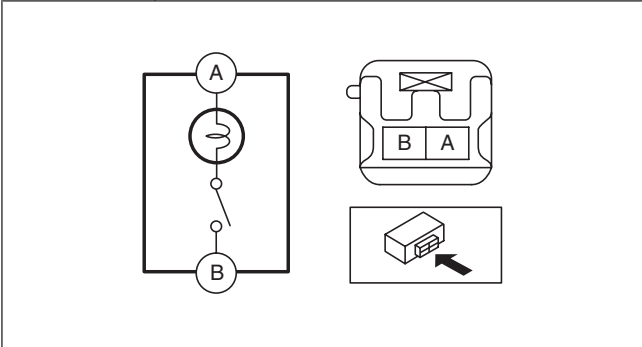

ac5wzw00000044

- If not as indicated in the table, replace the sunvisor. (See SUNVISOR REMOVAL/INSTALLATION.)

○ — (Bulb symbol) — ○ : Bulb

Vanity mirror cover condition	Terminal	
	A	B
Open	○ — (Bulb symbol) — ○	
Close		

ac5wzw000000467