


## FORWARD SENSING CAMERA (FSC) SHORT-CORD REMOVAL/INSTALLATION

id092200030300

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the cover. (See FORWARD SENSING CAMERA (FSC) REMOVAL/INSTALLATION.)
3. Remove the auto-dimming mirror. (See AUTO-DIMMING MIRROR REMOVAL/INSTALLATION.)
4. Disconnect the connector.

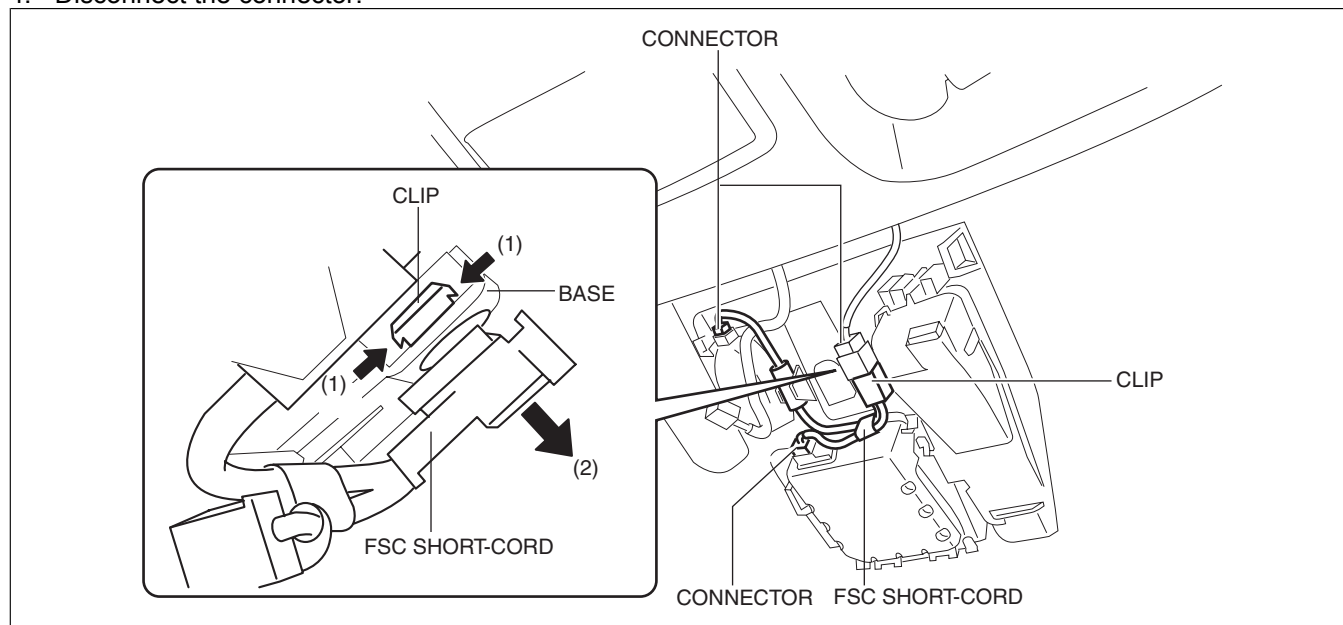

5. Pull out the FSC short-cord in the direction of arrow (2) shown in the figure while pressing the clip in the direction of arrow (1) shown in the figure, detach the clip and base, and remove the FSC short-cord.
6. Install in the reverse order of removal.

ac5wzw00000100