

FUEL FILTER [SKYACTIV-D 2.2]

id0114z7707000


Purpose, Function

- Remove the alien substance and garbage of fuel.

Construction


- The fuel filter is installed in the engine compartment.

L.H.D.

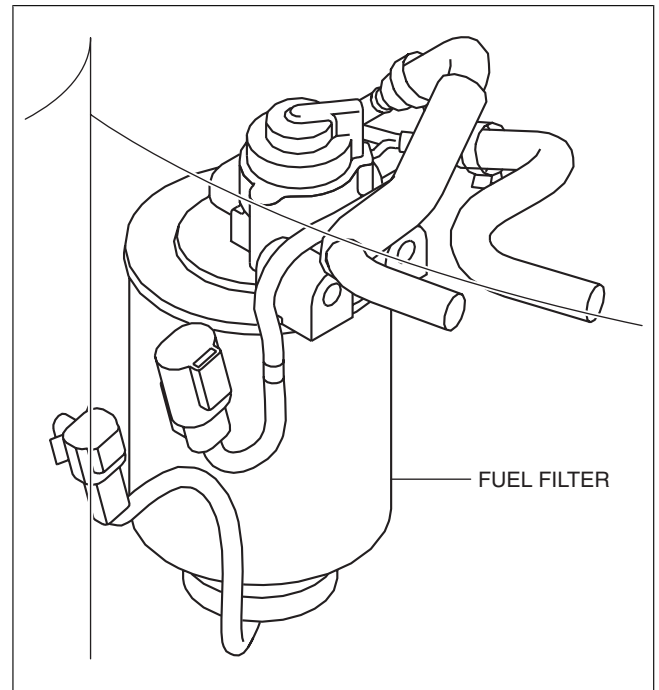

ac5wzn00001922


R.H.D.

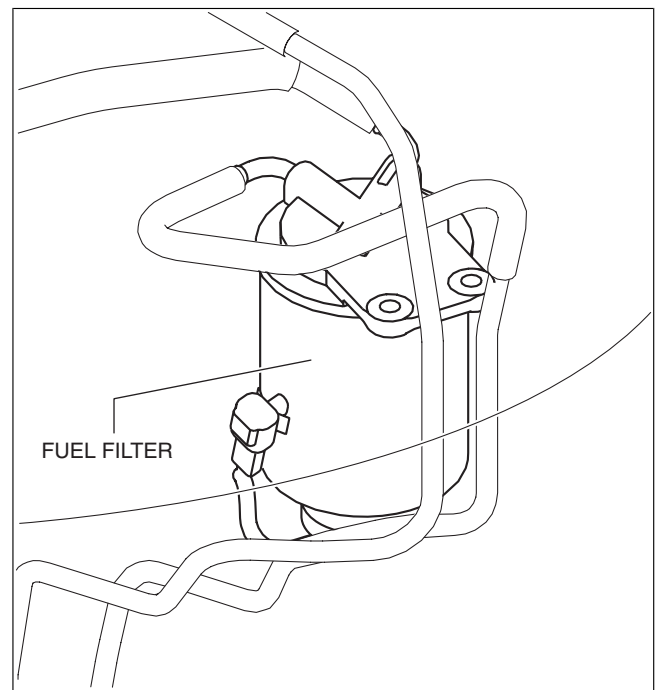

ac5wzn00001923


- Fuel filter is consists of a fuel warmer (with fuel warmer) and sedimentor switch.

L.H.D.

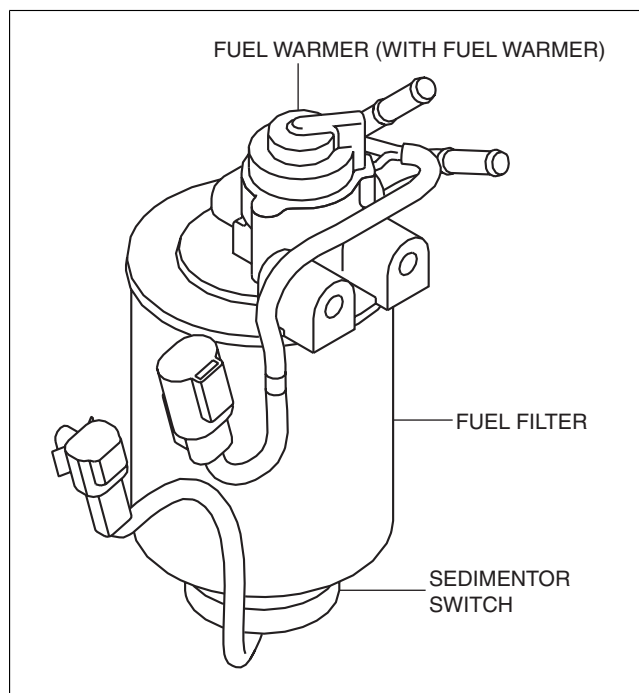

ac5wzn00001924

R.H.D.

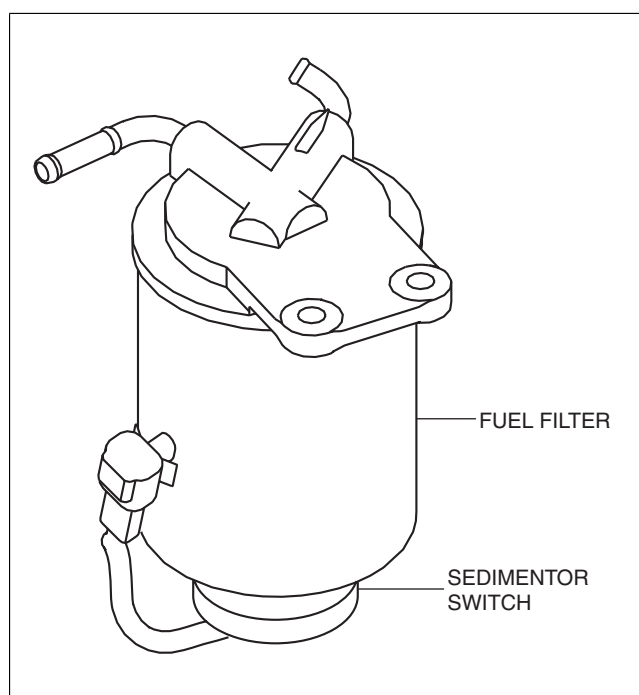

ac5wzn00001925