

REAR SEAT REMOVAL/INSTALLATION

id091300800400


Caution

- When removing or putting in the rear seat, contact with the surrounding areas of the vehicle could cause scratches and damage. When removing or putting in the rear seat, always use two or more persons to perform the work and be careful not to scratch or damage the rear seat and the surrounding area of the vehicle.
- When performing the procedure with a rear seat removed from the vehicle, perform the procedure on a clean cloth so as not to damage or soil the seat.

Note

- When removing the rear seat from the vehicle or putting it back in, it can be performed smoothly by removing the headrest


1. Remove the trunk board. (See TRUNK BOARD REMOVAL/INSTALLATION.)
2. Disconnect the remote cable on the remote handle lever side from the remote cable on the rear seat side. (See REMOTE HANDLE LEVER REMOVAL/INSTALLATION.)
3. Detach tabs A in the direction of the arrow (1) shown in the figure while lifting cover A in the direction of the arrow (2), detach hook B, and then remove cover A.

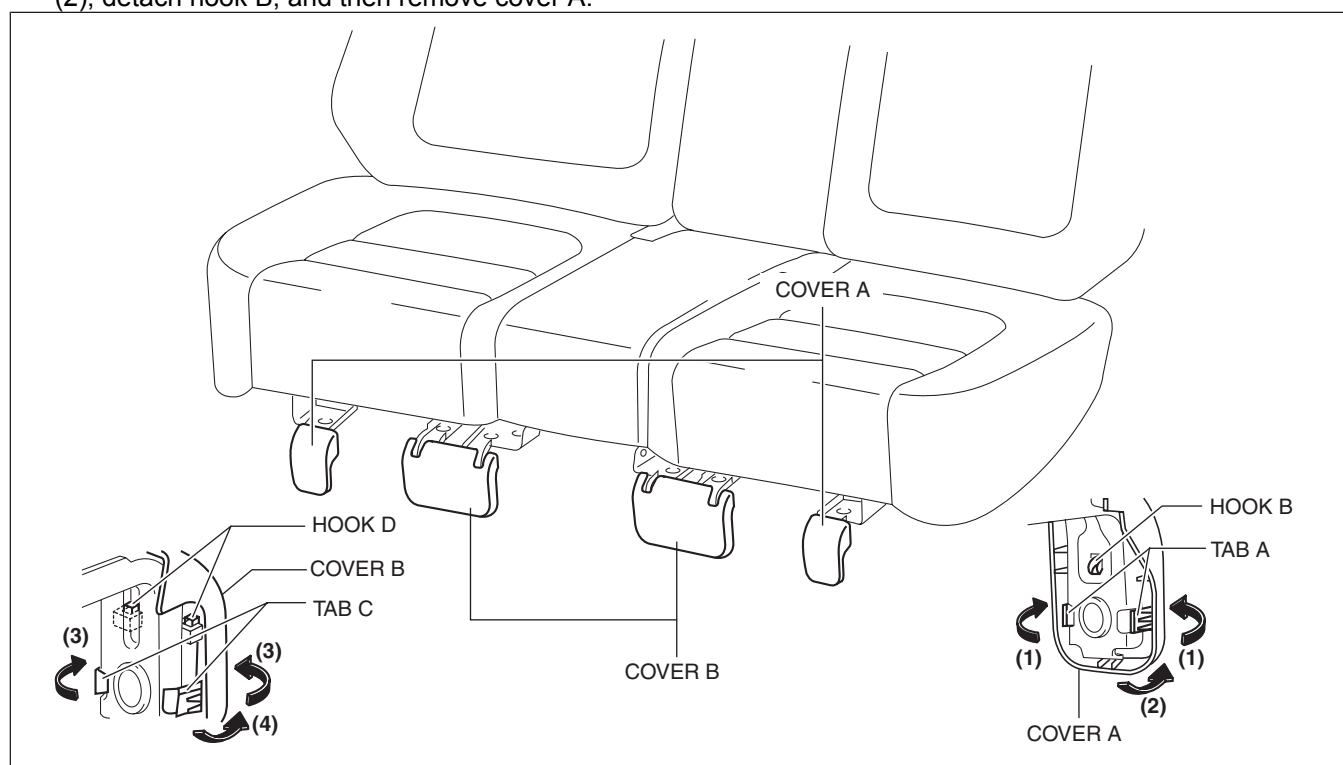

4. Detach tabs C in the direction of the arrow (3) shown in the figure while lifting cover B in the direction of the arrow (4), detach hook D, and then remove cover B.


ac5uuw00001894

5. Remove bolts A.
6. Press the push knob to fold the rear seat back.

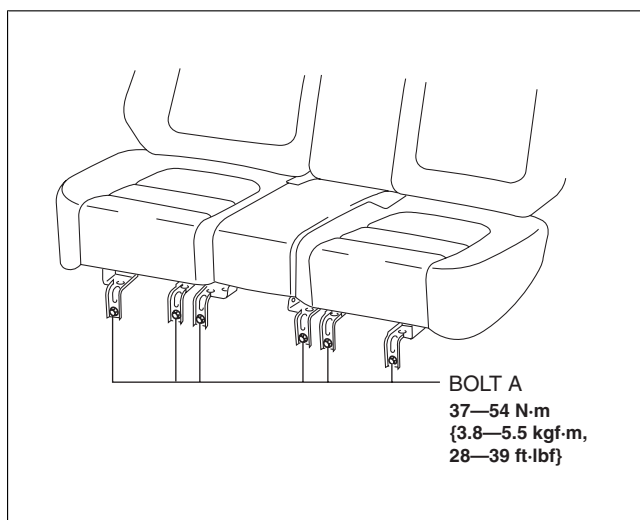


ac5uuw00001895

7. Remove bolts B.

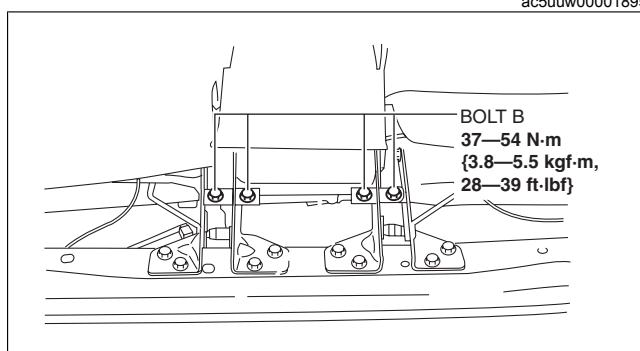


ac5uuw00001896

8. Remove the plate in the direction of the arrow (5) shown in the figure.

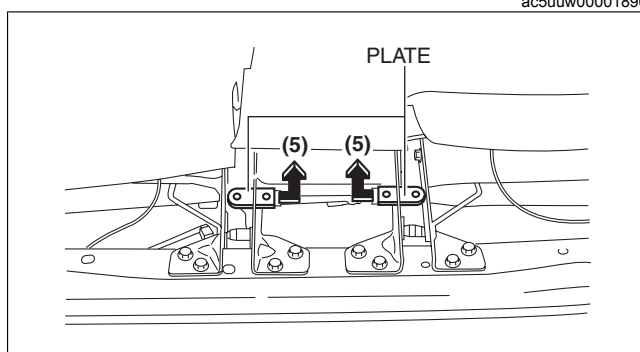


ac5uuw00001897

9. Remove bolts C.
10. Hold up the rear seat back.

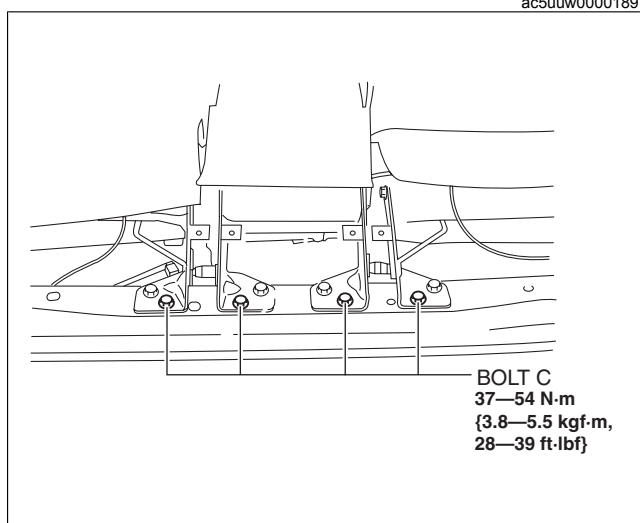


ac5uuw00001898

11. Remove bolts D. (See Rear Hinge Removal Note.)

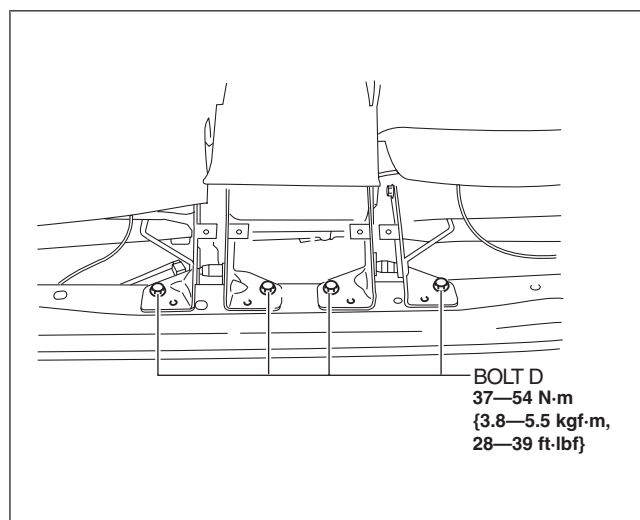


ac5uuw00001899

12. Move the rear hinge in the direction of the arrow (6) shown in the figure and disconnect pins E. (See Rear Hinge Installation Note.)

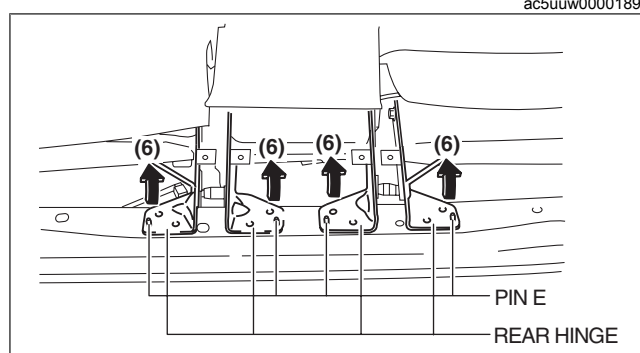


ac5uuw00001900

13. Remove bolt E.

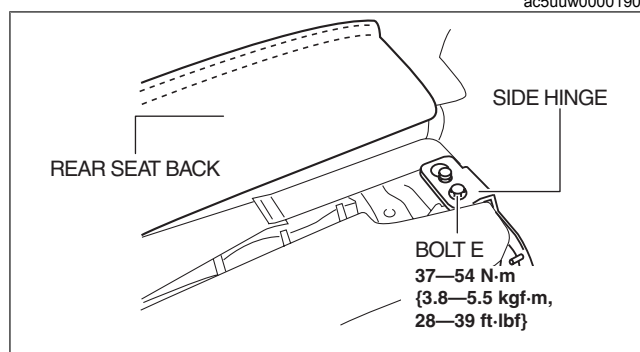


ac5uuw00001901

14. After moving the rear seat in the direction of the arrow (7) shown in the figure, remove pin F while moving the side hinge in the direction of the arrow (8).

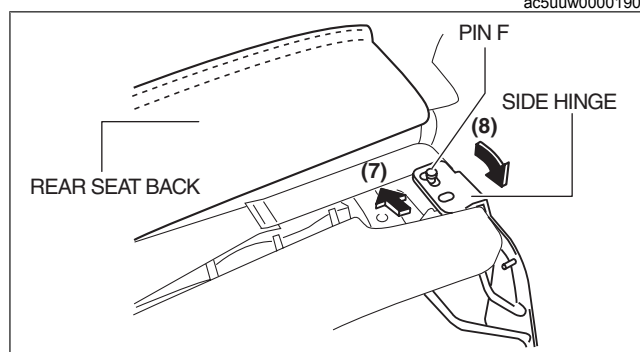

ac5uuw00001902


15. Lift up the rear seat cushion in the direction of the arrow (9) shown in the figure and set pins G aside from the front hinge.
16. Remove the rear seat. (See Rear Seat Carry Into Vehicle Note.)
17. Install in the reverse order of removal. (See Rear Seat Installation Note.)
18. Pull the remote handle levers and verify that the rear seat backs are unlocked.
 - If any of the rear seat backs does not unlock, or it is hard to unlock or lock, adjust the remote cable. (See Remote Cable Adjustment Procedure.)

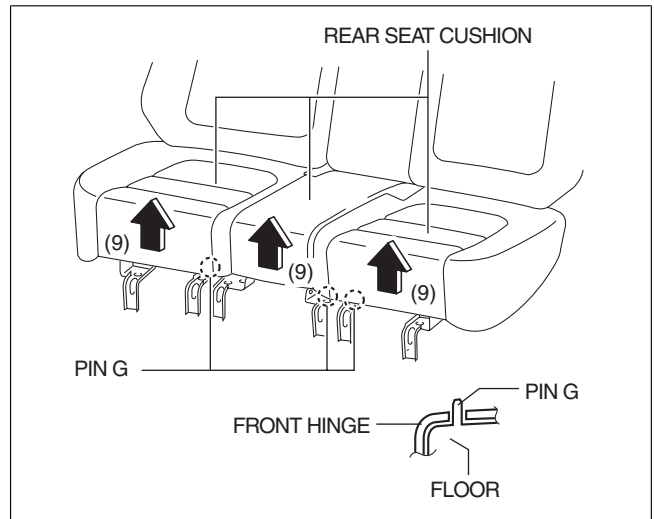

ac5wzw00003193


Rear Seat Carry Into Vehicle Note

1. Before carrying the rear seat into the vehicle, shift the rear buckle in the direction of the arrow (1).

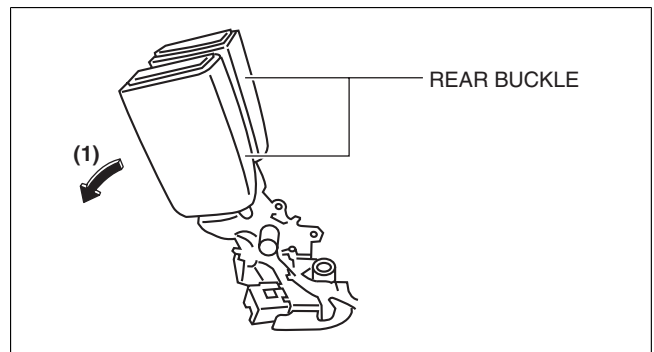


ac5uuw00002040

2. Insert a needle into area A shown in the figure and fix the rear buckle in the down condition
3. Carry the rear seat into the vehicle.

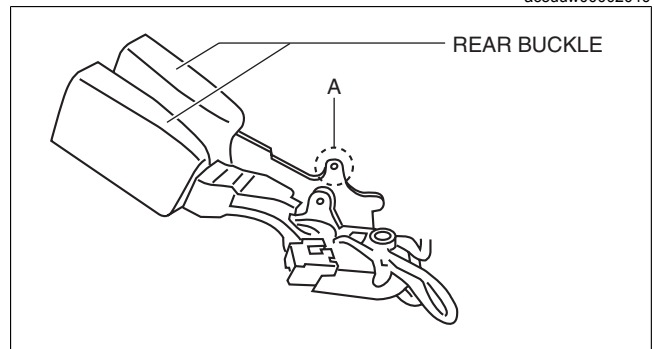


ac5uuw00002041

4. Remove the needle fixing the rear buckle tilted frontward, and fold the rear buckle to area B shown in the figure.

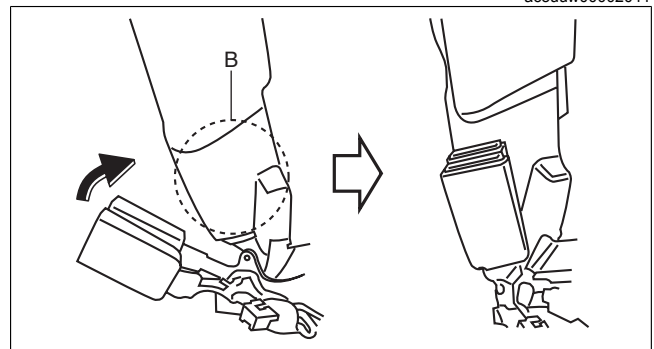

ac5jiw00002379


5. Fold the rear seat cushion, and verify that the rear buckle is folded into the rear seat cushion.

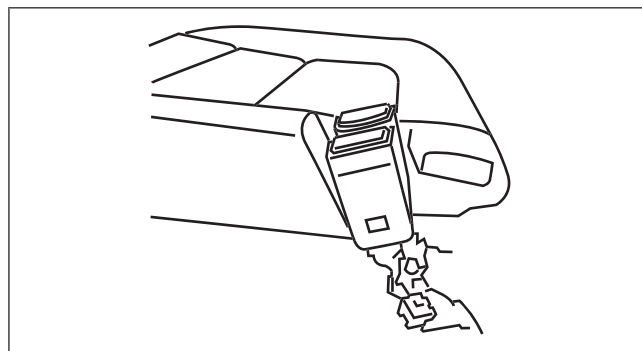

ac5jjw00002380

Rear Hinge Removal Note


1. While moving the rear seat back in the direction of arrow shown in the figure, remove the rear hinge to pin E.

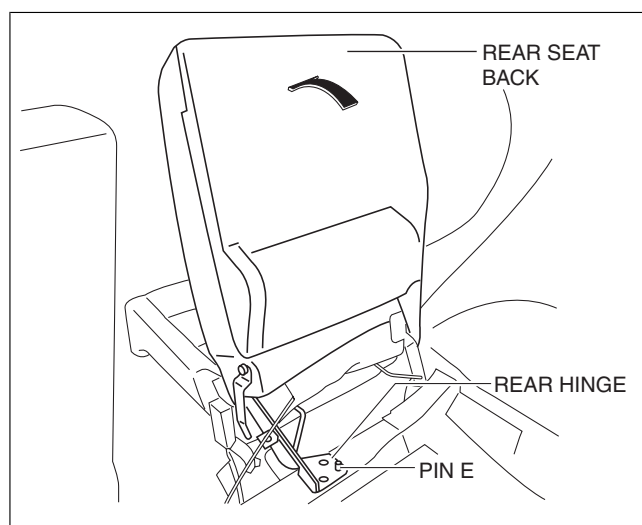

ac5wzw00003123

Rear Hinge Installation Note

1. While moving the rear seat back in the direction of arrow shown in the figure, install the rear hinge to pin E.

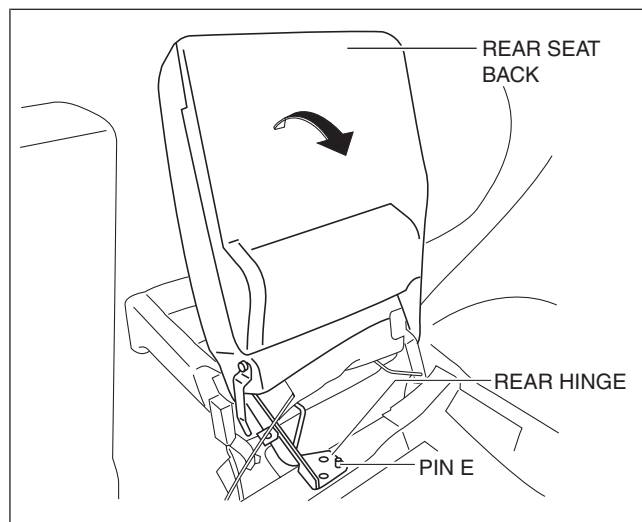

ac5jjw00002381

Rear Seat Installation Note

1. When installing the rear seat, temporarily tighten all of the tightening bolts.
2. After temporarily tightening all of the tightening bolts, shake the entire rear seat forward and back/left and right with the rear seat back folded to improve the installation fit of the entire seat.
3. Completely tighten the bolts in the reverse order of removal.


Remote Cable Adjustment Procedure

Note

- Adjust the remote cable of a seat which has the following malfunctions. The adjustment procedure is available for all the seats.


- Does not unlock
- Hard to unlock
- Hard to lock

1. Press the push knob and fold the rear seat back.
2. Remove the trunk mat. (See TRUNK COVERING REMOVAL/INSTALLATION.)
3. Press the tab in the direction of the arrow (1) shown in the figure to disengage it, and open the upper part of the case in the direction of the arrow (2).

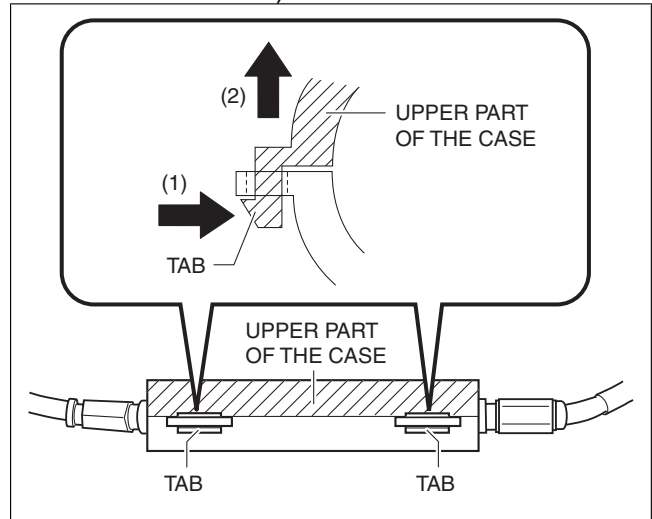

ac5wzw00005621

4. Move the position of the remote cable adjustment groove on the rear seat back side one step in the direction of the arrow shown in the figure.

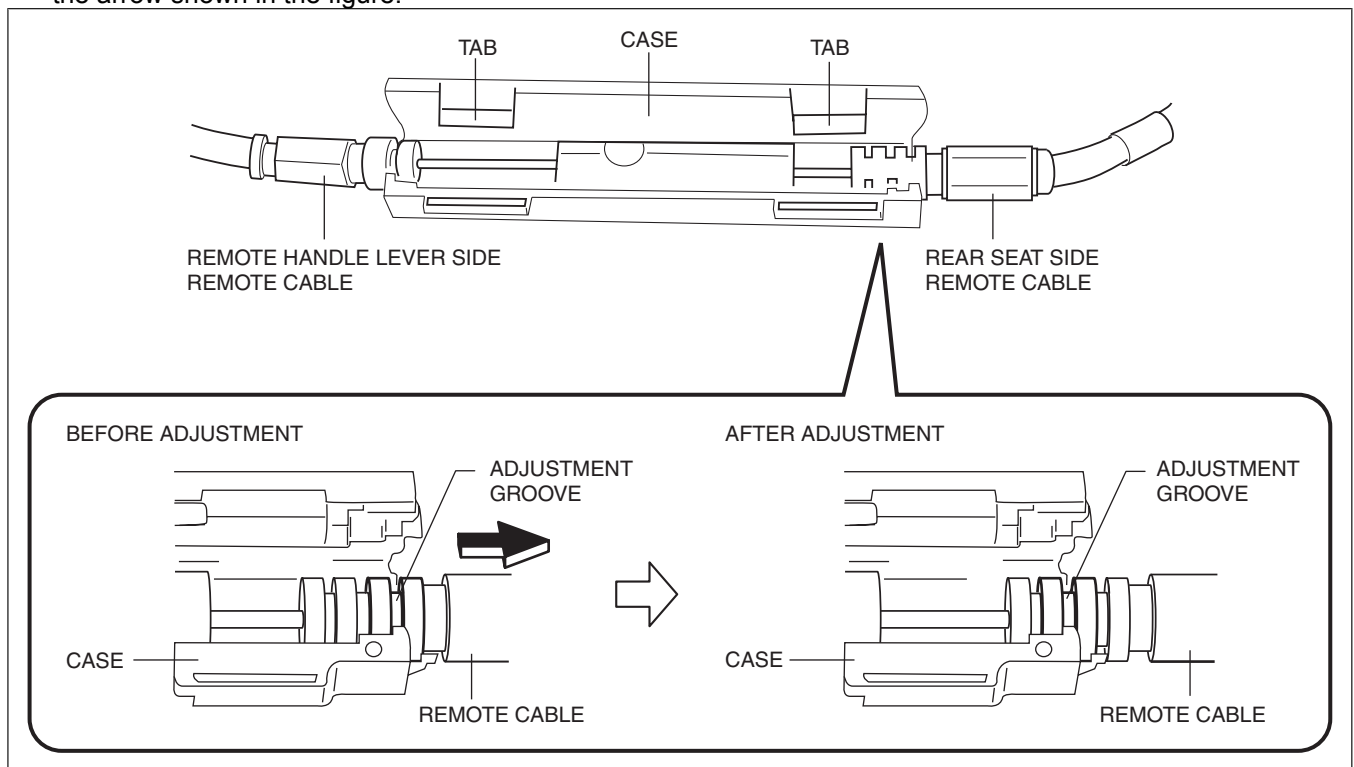

ac5wzw00005619

Caution

- If the remote cable adjustment groove is moved excessively, the remote cable is pulled in the unlock direction and the rear seat back may not be able to lock. When adjusting the remote cable, move the position of the adjustment groove one step at a time while verifying the lock condition of the rear seat back.

5. Close the case to engage the tab.

6. Move the rear seat back to its upright position and verify that the red indication cannot be seen on the push knob.

Note

- If red indication can be seen on the push knob, it indicates that the seat back is not locked securely or unlocked.
7. Pull the remote handle lever and verify that the rear seat back is unlocked.
 - If the rear seat back does not unlock, or it is hard to unlock or lock, move the remote cable adjustment groove one step more.
 8. Install the remote cable. (See REMOTE HANDLE LEVER REMOVAL/INSTALLATION.)
 9. Install the trunk mat. (See TRUNK COVERING REMOVAL/INSTALLATION.)

