


LIFTGATE LIGHT REMOVAL/INSTALLATION

id091800812600

Note


- Fogging or condensation on the inside of the liftgate light may occur, however, it is a natural phenomenon occurring as a result of a temperature difference between the interior and exterior of the liftgate lights and has no effect on the light performance. Fogging or condensation will dissipate when the temperature inside the liftgate lights rises after illuminating the back-up lights and a period of time has elapsed.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Insert a tape-wrapped flathead screwdriver into the service hole in the position shown in the figure.

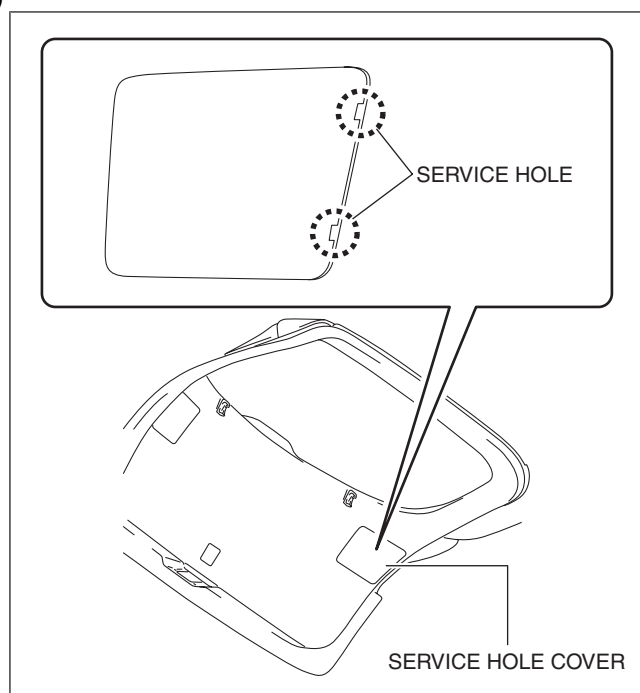


3. Move the flathead screwdriver in the direction of the arrow (1) shown in the figure, pull out the service hole cover from the liftgate, and detach the service hole cover tab A, B and liftgate.

ac5wzw00000482

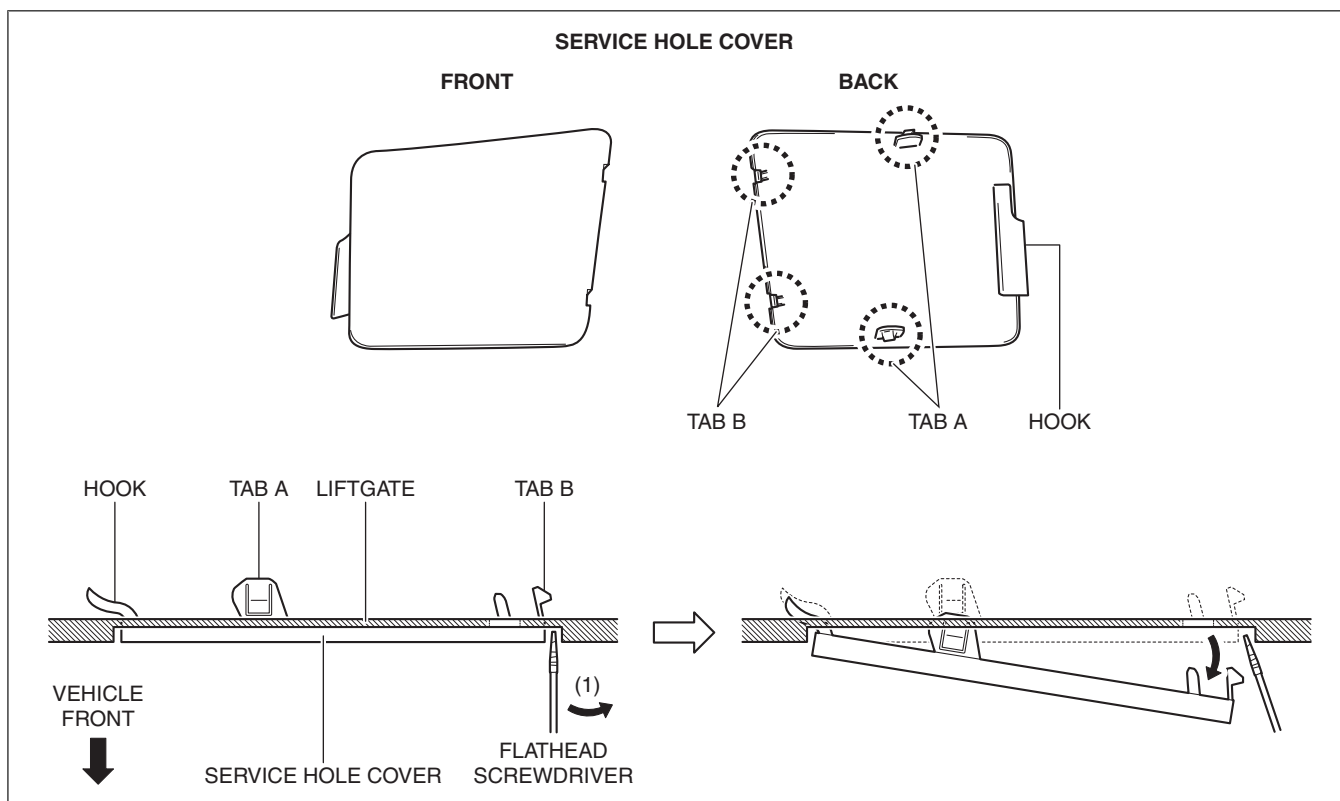


ac5wzw00000483

4. Pull out the service hole cover in the direction of the arrow (2) shown in the figure and pull out the service hole cover hook C from the liftgate.
5. Remove the service hole cover.

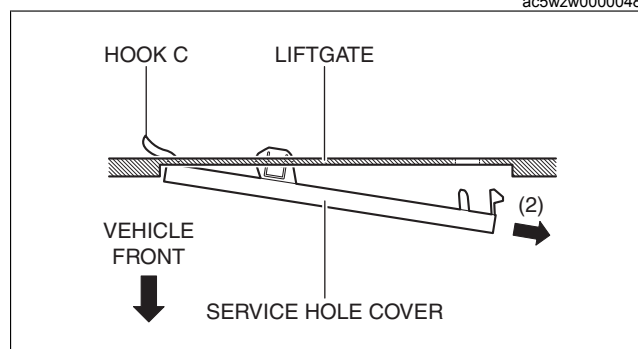


ac5wzw000005958

6. Insert a flathead screwdriver into the service hole in the position shown in the figure.

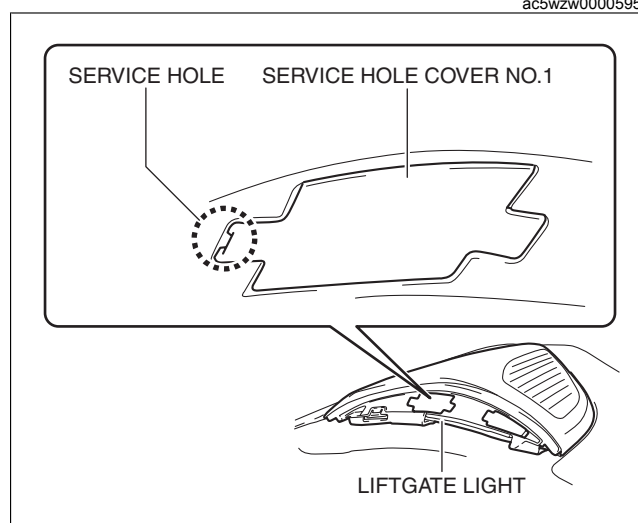


ac5wzw000001201

7. Move the flathead screwdriver in the direction of the arrow (3) shown in the figure, pull out the service hole cover No.1, and detach the service hole cover No.1 tab D from the bracket.

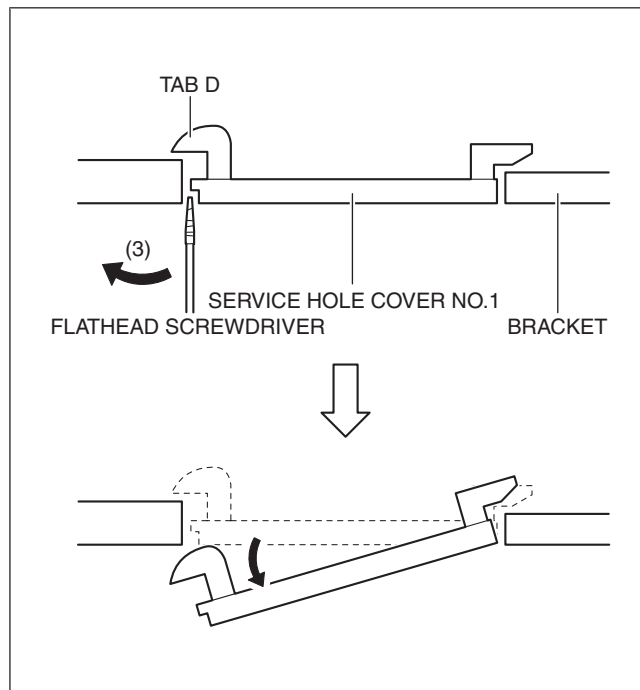


ac5wzw00005959

8. Remove the service hole cover No.1.

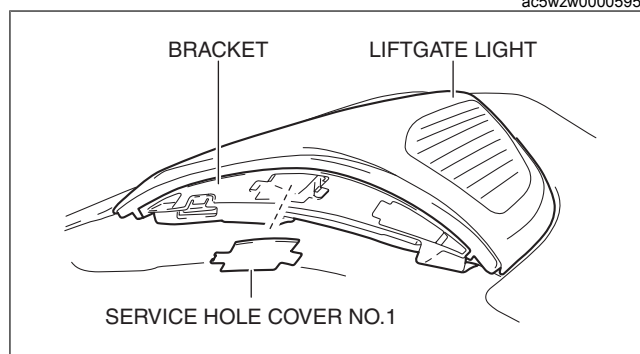


ac5wzw00005951

9. Insert a flathead screwdriver into the service hole in the position shown in the figure.

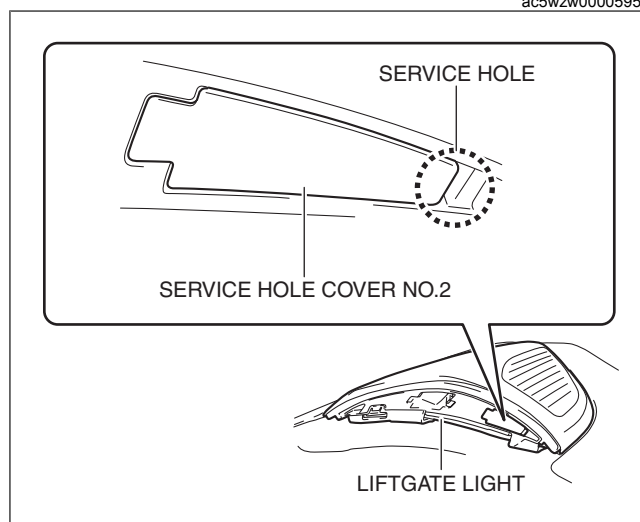


ac5wzw00000172

10. Move the flathead screwdriver in the direction of the arrow (4) shown in the figure, pull out the service hole cover No.2, and detach the service hole cover No.2 tab E from the bracket.

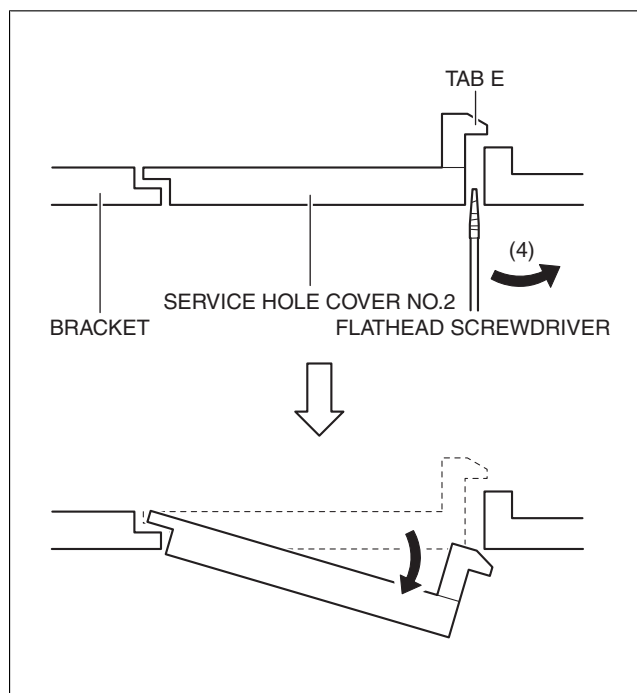


ac5wzw00005960

11. Remove the service hole cover No.2.

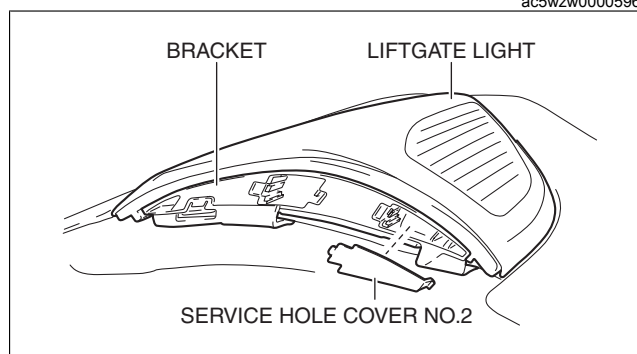


ac5wzw00005952

12. Insert the flathead screwdriver into the clearance between the bracket tab F and the liftgate light shown in the figure.

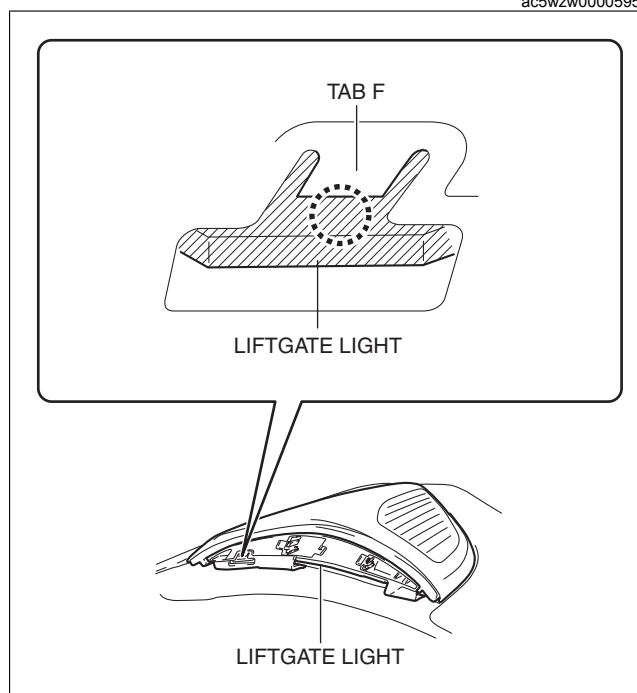


ac5wzw00005961

13. Move the flathead screwdriver in the direction of the arrow (5) shown in the figure, pull out the bracket in the direction of the arrow (6) shown in the figure while pressing the bracket tab, and detach the bracket tab G and liftgate light.

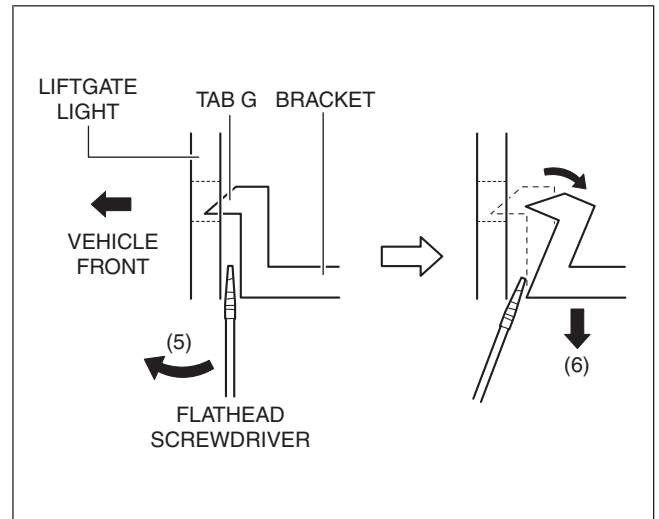


ac5wzw00005962

14. Insert the flathead screwdriver into the clearance between the bracket tab and the liftgate light shown in the figure.

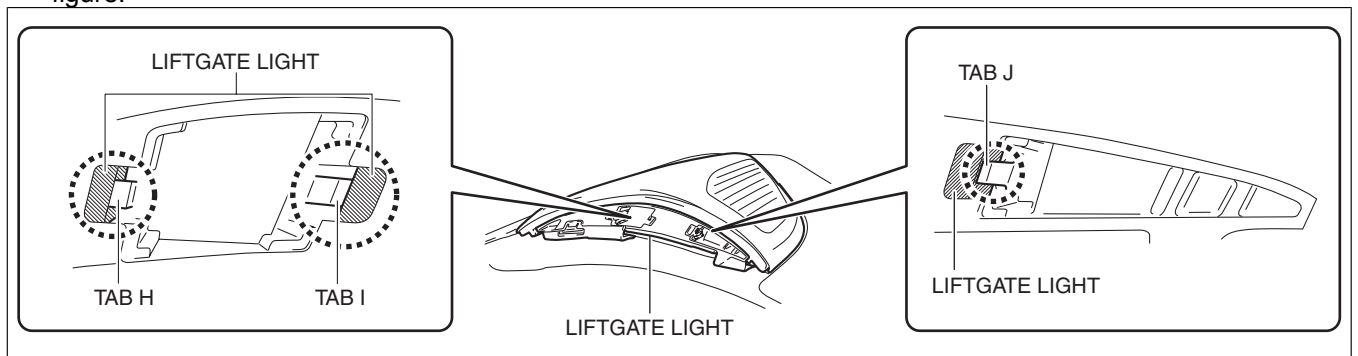


ac5wzw00005963

15. Move the flathead screwdriver in the direction of the arrow (7) shown in the figure, pull the bracket in the direction of the arrow (8) shown in the figure, and detach the bracket tab H, I, J and liftgate light.

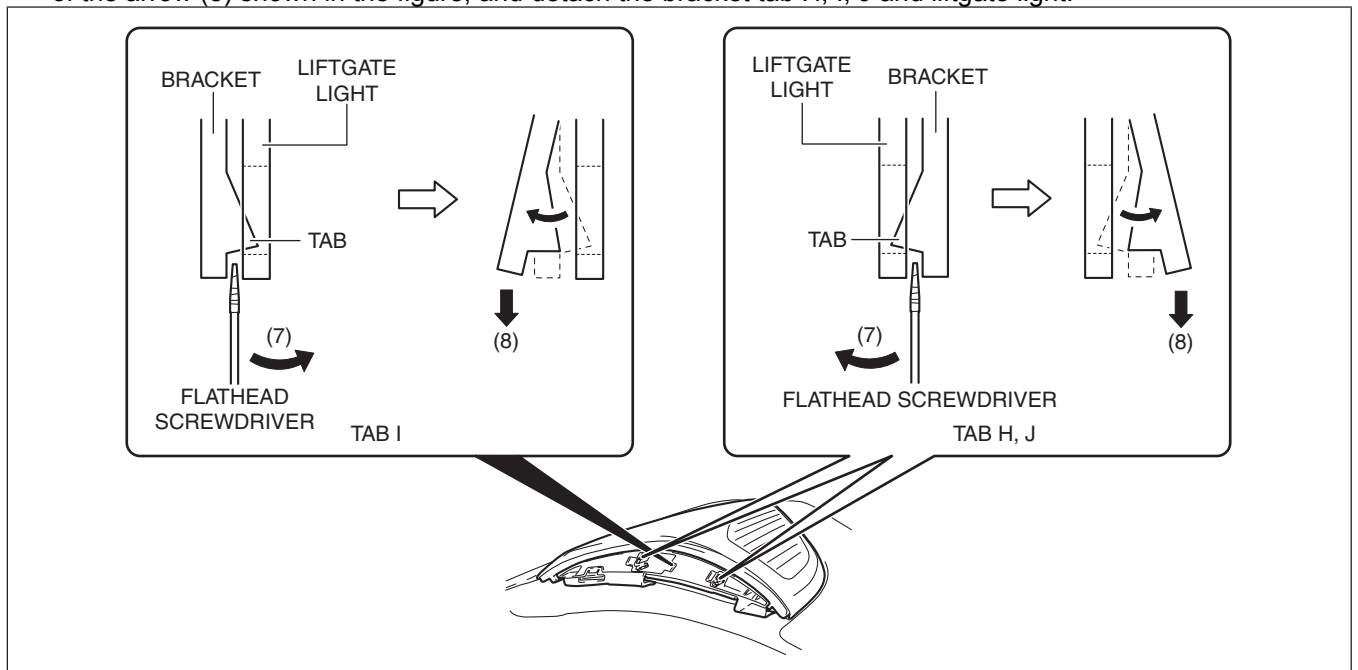


ac5wzw00005964

16. Move the bracket in the direction of arrow (9) shown in the figure to pull out hook K of the bracket from the liftgate.

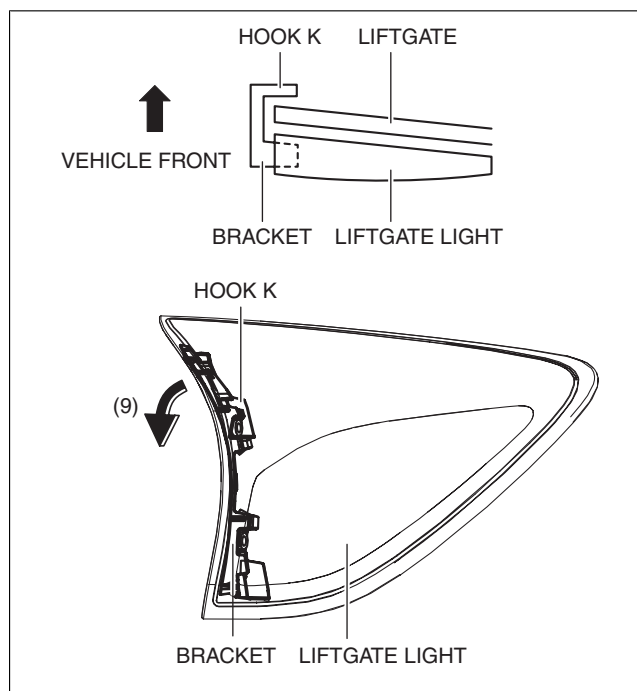


ac5wzw00005953

17. Move the bracket in the direction of arrow (10) shown in the figure to detach tab L of the bracket from the liftgate light, then pull out hook M of the bracket from the liftgate and remove the bracket.

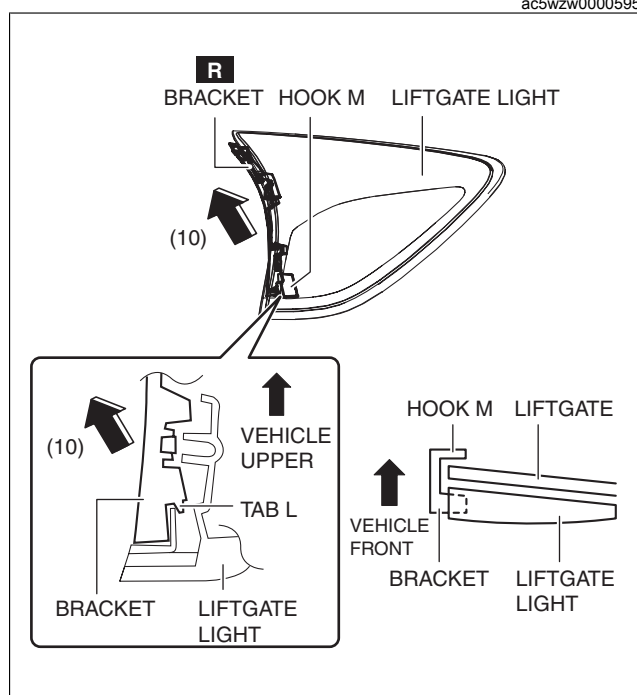


ac5wzw00005954

18. Rotate the socket in the direction of the arrow (11) shown in the figure and remove it from the liftgate light in the direction of the arrow (12) shown in the figure.

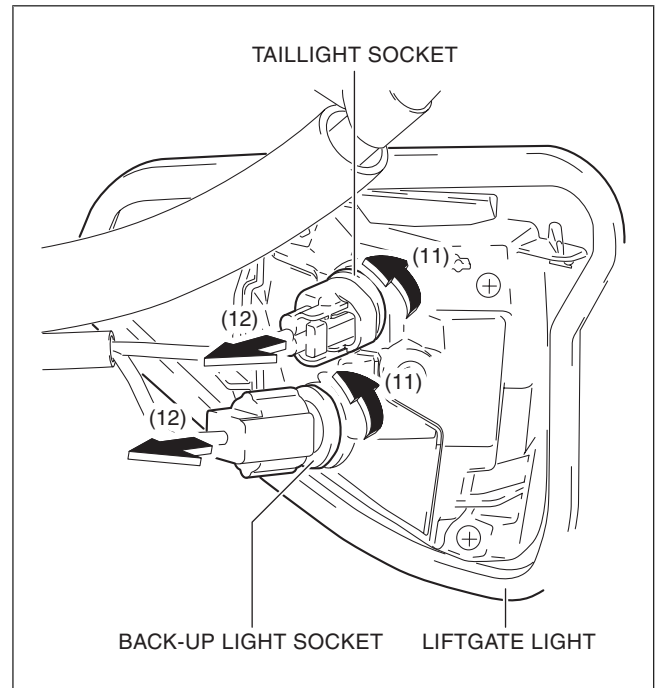

ac5wzw00005955

19. Remove the cap nut.

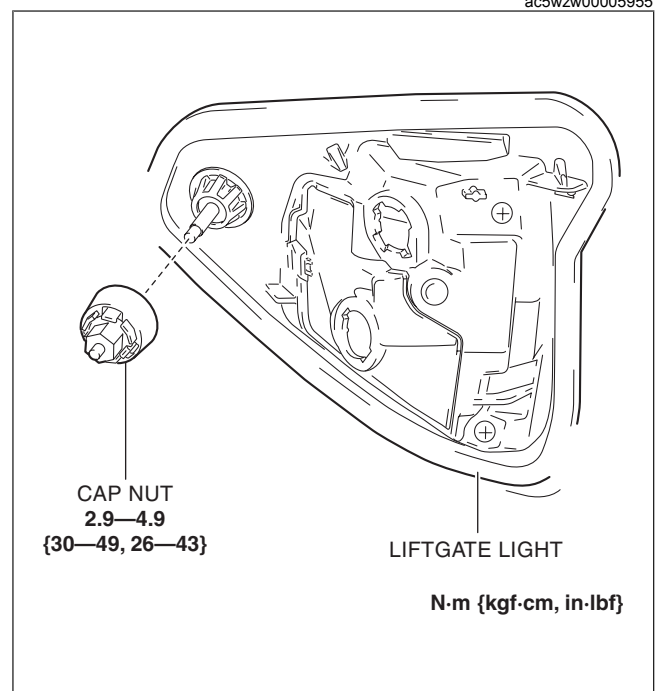


ac5wzw00000058

20. Push out the liftgate light in the direction of the arrow (13) shown in the figure and remove it from the liftgate.

Caution

- If the liftgate light is removed from the liftgate, the liftgate light may fall off and be damaged. When removing the liftgate light from the liftgate, hold the liftgate light on the lens side with a hand during the servicing.

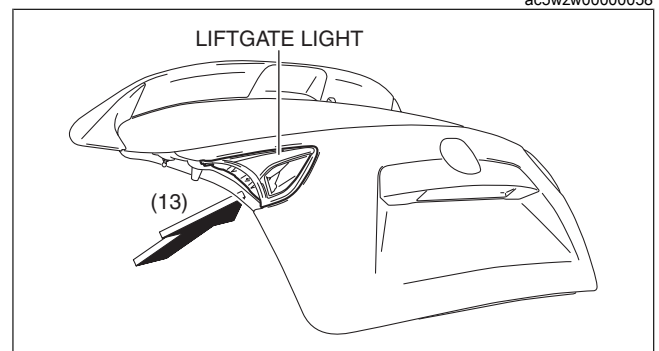

ac5wzw00005956

21. Install in the reverse order of removal.