


AIR MIX ACTUATOR REMOVAL/INSTALLATION [FULL-AUTO AIR CONDITIONER]

id0740a1802400

L.H.D.

Driver-side


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Side wall (driver-side) (See SIDE WALL REMOVAL/INSTALLATION.)
 - (2) Front heat duct (driver-side) (See FRONT HEAT DUCT REMOVAL/INSTALLATION.)
3. Disconnect the air mix actuator connector.
4. Remove the screw.
5. Remove the driver-side air mix actuator.
6. Install in the reverse order of removal.

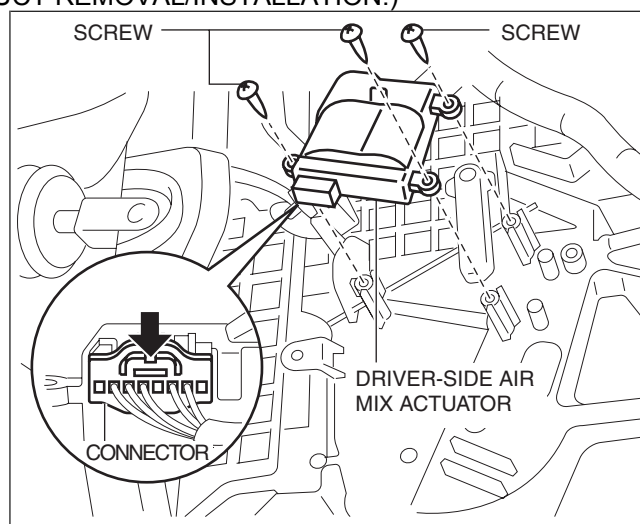

ac5wzw00001857

Passenger-side

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
 - (2) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
3. Disconnect the air mix actuator connector.
4. Remove the screw.
5. Remove the Passenger-side air mix actuator.
6. Install in the reverse order of removal.

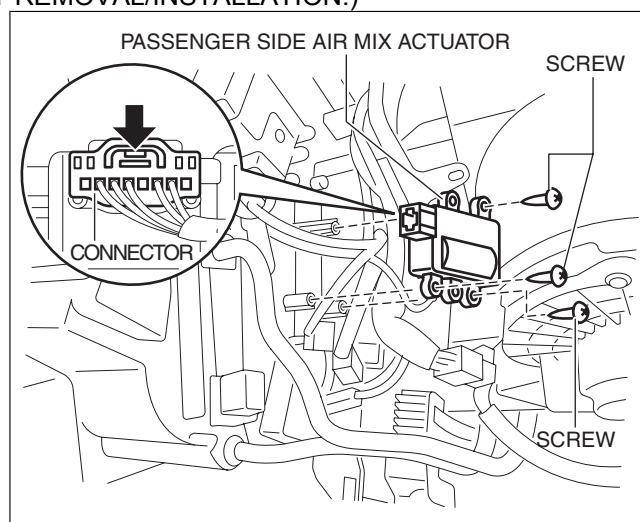

ac5wzw00001858


R.H.D.

Driver-side

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Side wall (driver-side) (See SIDE WALL REMOVAL/INSTALLATION.)

(2) Front heat duct (driver-side) (See FRONT HEAT DUCT REMOVAL/INSTALLATION.)


3. Disconnect the air mix actuator connector.
4. Remove the screw.
5. Remove the driver-side air mix actuator.
6. Install in the reverse order of removal.

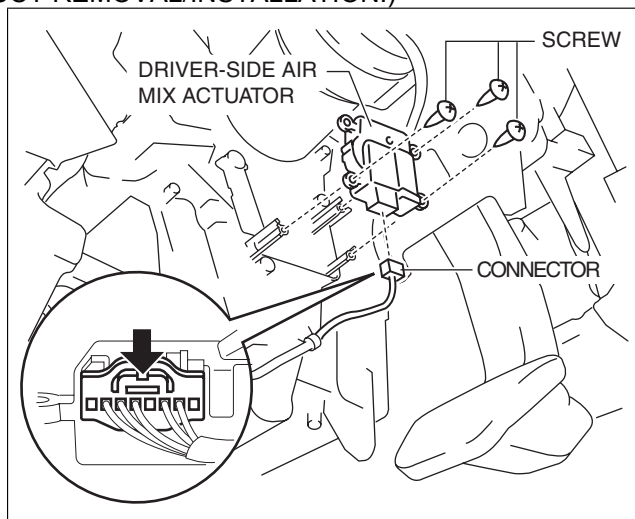

ac5wzw00001859

Passenger-side

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
 - (2) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
3. Disconnect the air mix actuator connector.
4. Remove the screw.
5. Remove the passenger-side air mix actuator.
6. Install in the reverse order of removal.

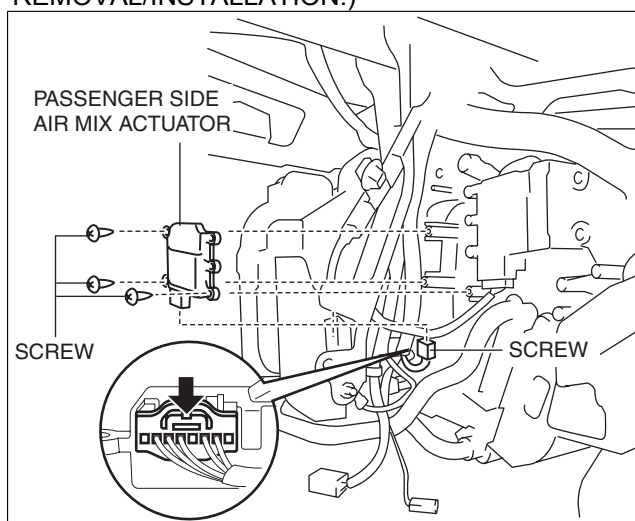

ac5wzw00001860