

KEYLESS ANTENNA [ADVANCED KEYLESS ENTRY SYSTEM]

id091400108033

Purpose


- Outputs a request signal and specifies the remote transmitter location.

Function

- The keyless antenna outputs request signals to the inside and outside of the vehicle based on the signals from the LF control unit.

Construction, Operation

- The antennas for request signal output form the request signal output range at 5 locations.

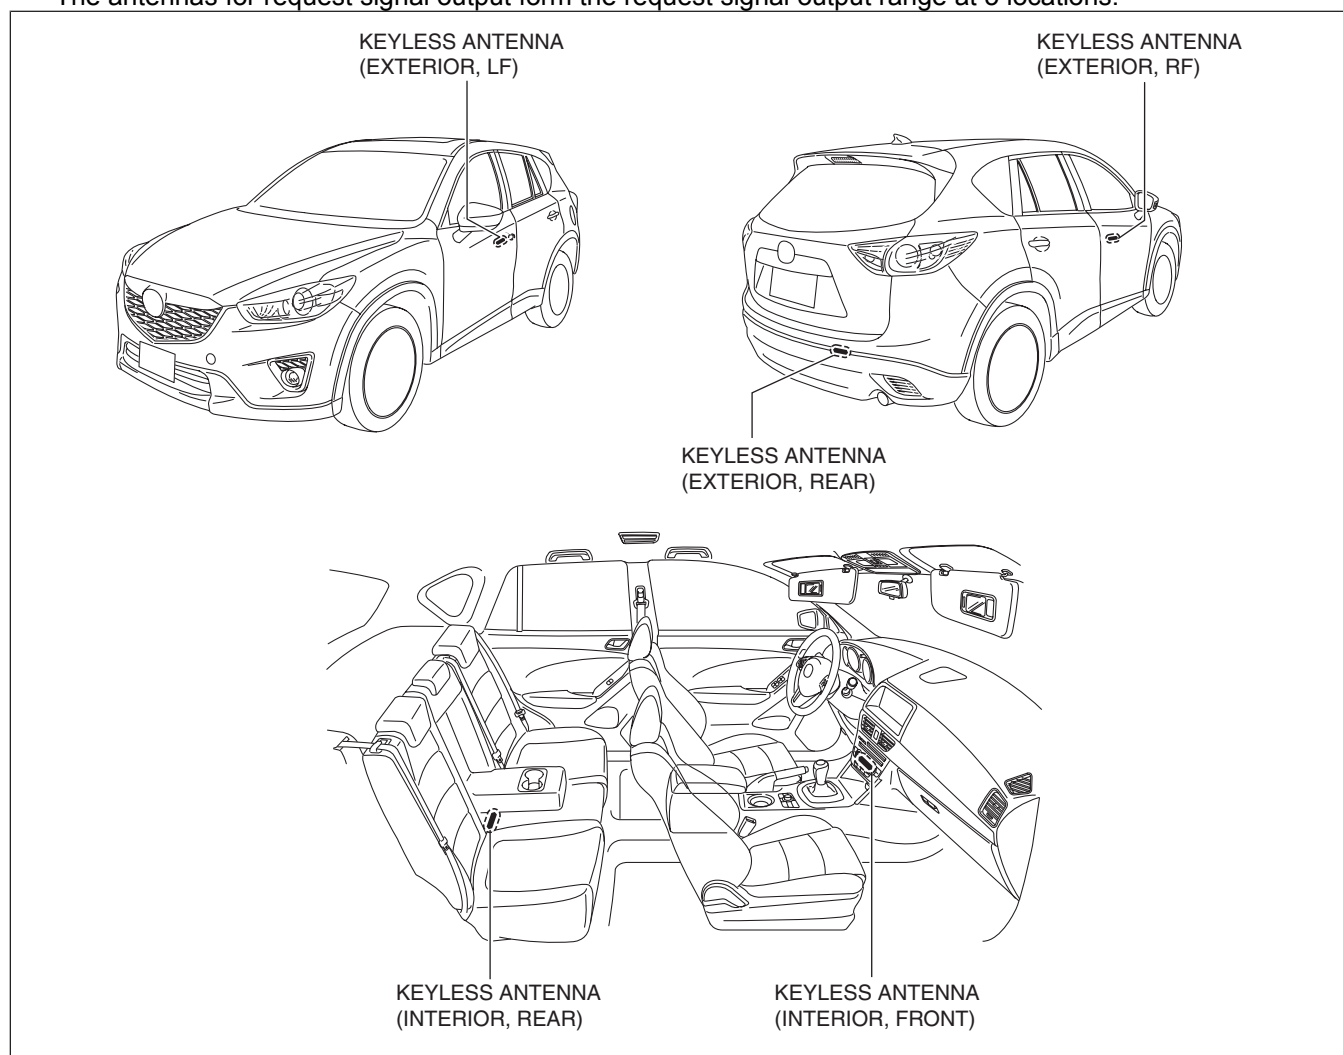


ac5wzn00000414

Request signal output range

- The keyless antennas for the vehicle exterior (driver-side, passenger-side, rear) form the request signal output area in the range of an **approx. 80 cm {31 in}** radius from each location and communicate with the advanced key.

- The keyless antennas for the vehicle interior (front, rear) form the output range inside the vehicle.

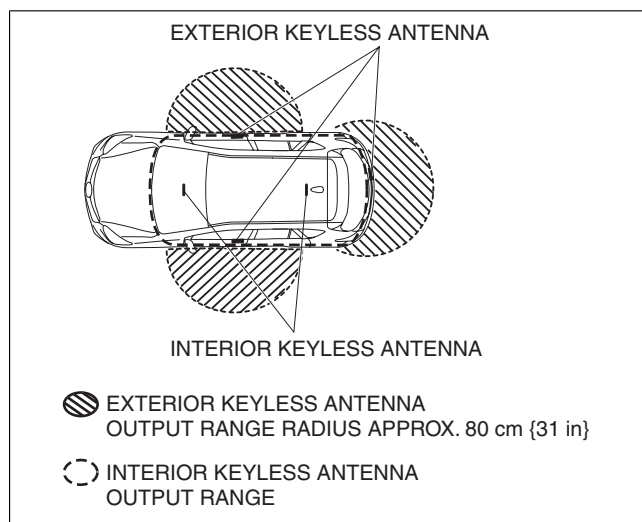

ac5wzn00001410

Fail-safe

- Function not equipped.