


BONNET REMOVAL/INSTALLATION

id091000407200

Warning

- Removing the bonnet without supporting it could cause the bonnet to fall and cause serious injury. Always perform the procedure with at least another person to prevent the bonnet from falling.


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Front over fender (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
 - (2) Front bumper (See FRONT BUMPER REMOVAL/INSTALLATION.)
 - (3) Front combination light (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)
 - (4) Front fender panel (See FRONT FENDER PANEL REMOVAL/INSTALLATION.)
3. Loosen bolts A.
4. Remove bolts B.

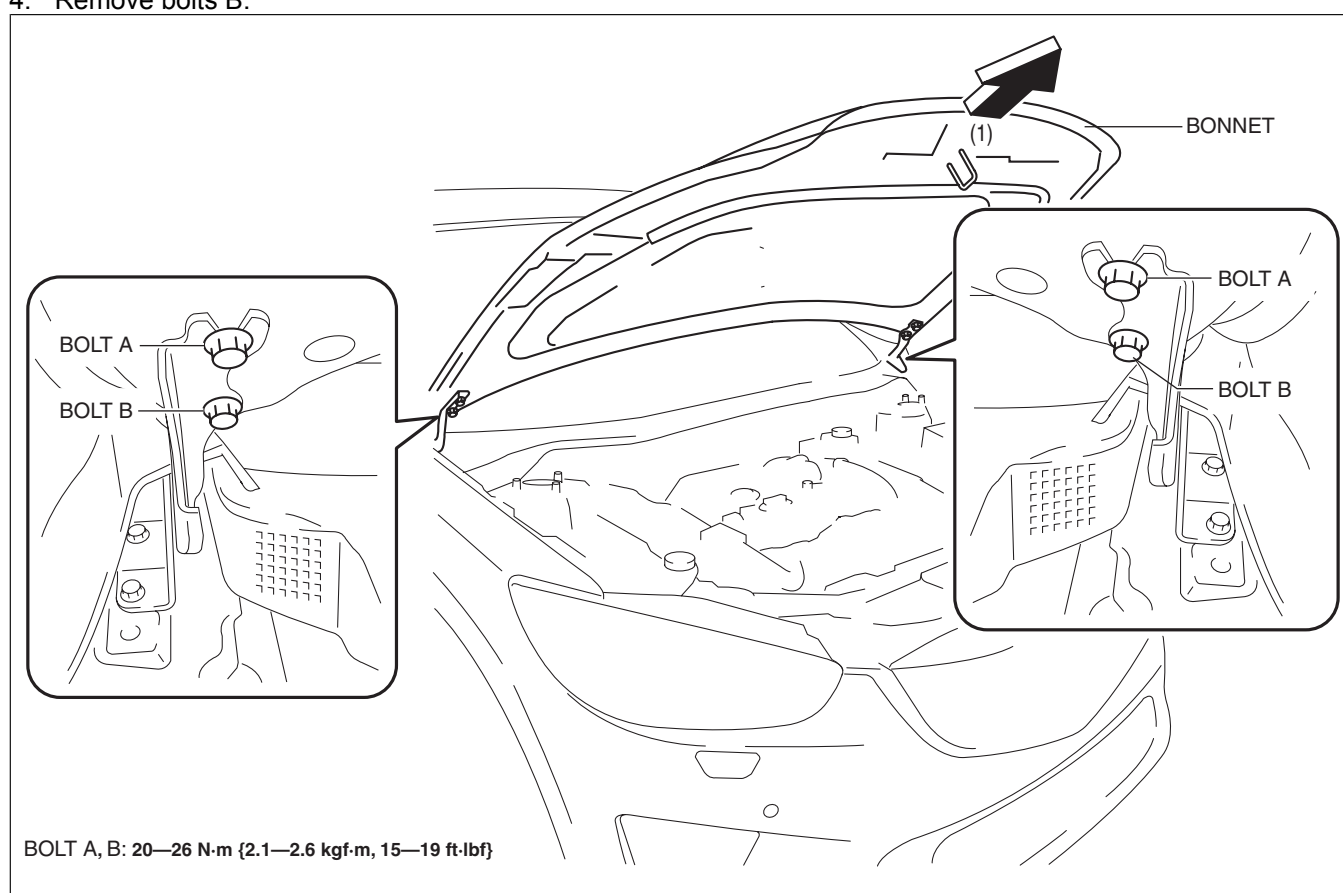

5. Remove the bonnet in the direction of the arrow(1) shown in the figure.

ac5wzw00002473

6. Remove bolts C.
7. Move the bonnet hinge in the direction of the arrow (2), (3) shown in the figure, while remove it.
8. Install in the reverse order of removal.
9. Adjust the headlight aiming. (See HEADLIGHT AIMING.)
10. Adjust the front fog light aiming. (with front fog lights) (See FRONT FOG LIGHT AIMING.)
11. Perform the bonnet adjustment. (See BONNET ADJUSTMENT.)

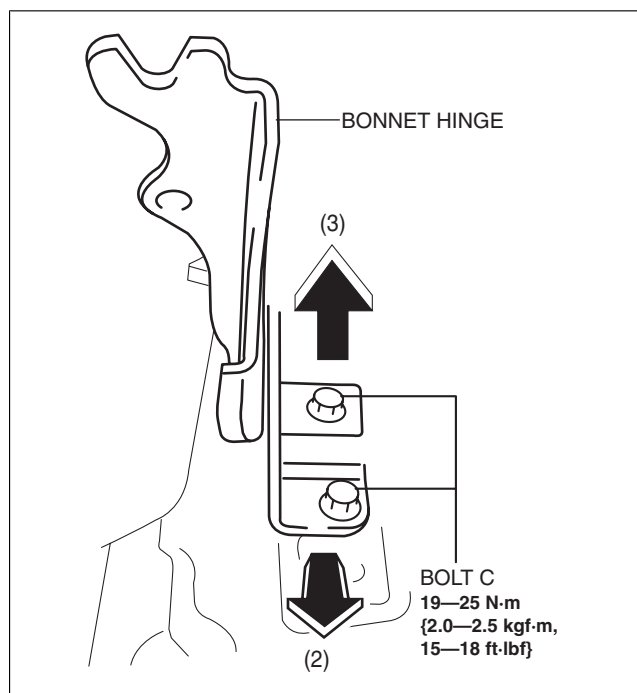

ac5wzw00002474