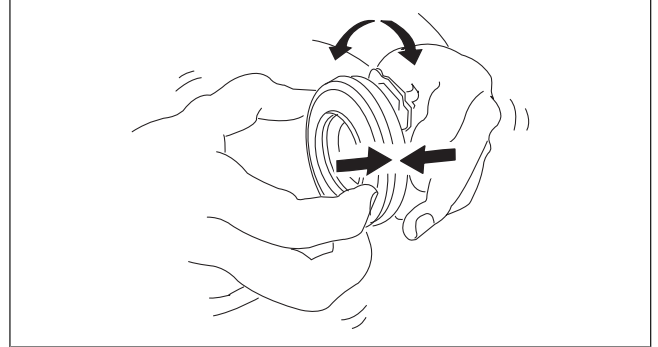

CLUTCH RELEASE COLLAR INSPECTION [D66M-R, D66MX-R]

id0510mf157300

Caution

- Do not clean the clutch release collar with cleaning fluids or a steam cleaner because it is filled with grease.

1. Turn the collar while applying force in the axial direction, and inspect for sticking, excessive resistance, and an abnormal noise.
 - If there is any malfunction, replace the clutch release collar.



ac5wzw00005828