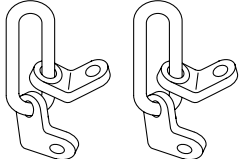


SERVICE TOOLS [FW6A-EL]

id0560008043d5

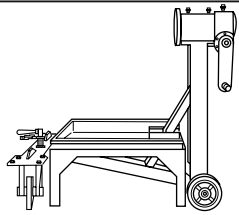
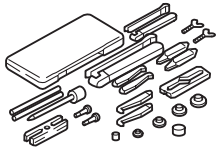
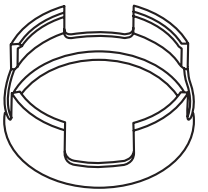
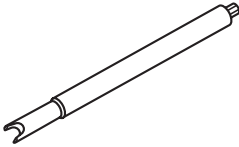
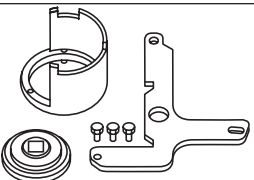
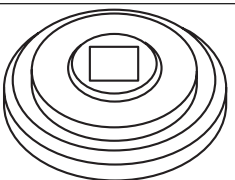
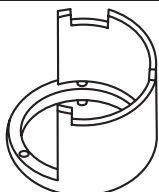
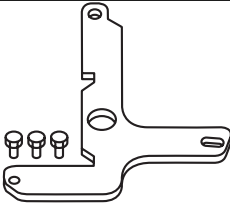

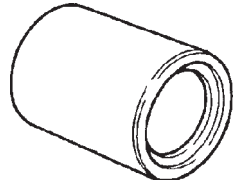
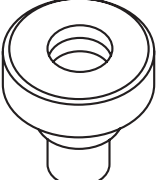

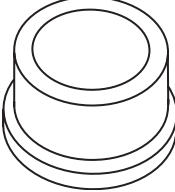
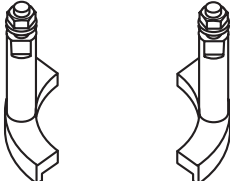
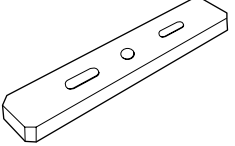
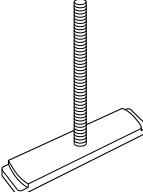
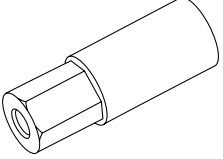
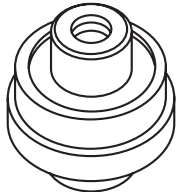
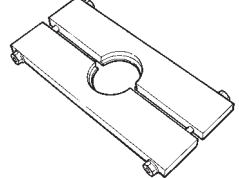

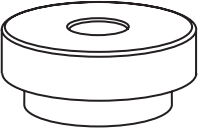
Example of description

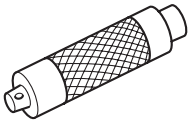


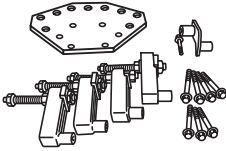
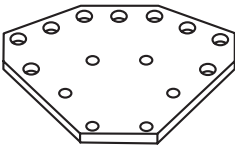
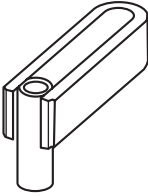
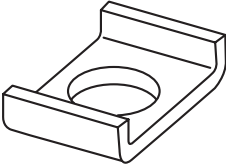
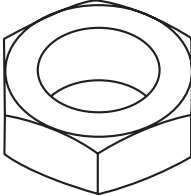
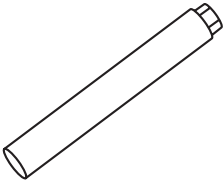

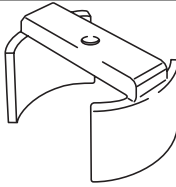
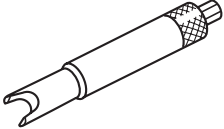
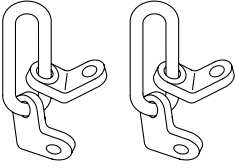
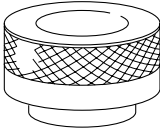
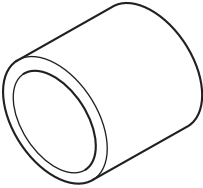
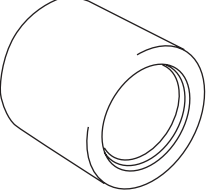
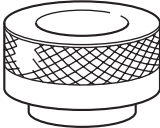

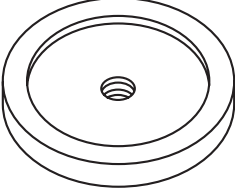
Ford manufactured **SSTs** are as follows: Mazda and Ford **SST** numbers can be referenced.

1:49 UN30 3050 2:303-050 Engine lifting bracket	
--	---

1: Mazda **SST** number

2: Ford **SST** number

1:49 0107 680A 2:— Engine stand		1:49 0839 425C 2:— Bearing puller set		1:49 B019 002 2:— Body	
1:49 B019 025 2:— Preload adpoter (component part for 49 B019 0A3)		1:49 B019 0A4 2:— Locknut wrench set		1:49 B019 027 2:— Socket (component part for 49 B019 0A4)	
1:49 B019 028 2:— Holder (component part for 49 B019 0A4)		1:49 B019 029 2:— Plate (component part for 49 B019 0A4)		1:49 B025 001 2:— Body	
1:49 D034 201 2:— Dust boot installer		1:49 F011 104 2:— Installer		1:49 F027 005 2:— Attachment for 62 bearing (component part for 49 F027 0A1)	
1:49 F027 009 2:— Attachment for 68 and 77 bearing		1:49 G019 025 2:— Body B		1:49 G019 026 2:— Plate	
1:49 G019 027 2:— Attachment A		1:49 G019 029 2:— Nut		1:49 G026 102 2:— Bearing replacer	
1:49 G027 002 2:— Removing plate		1:49 G028 201 2:— Support block		1:49 G030 728 2:— Attachment B	

1:49 G030 797 2:— Handle 	1:49 G032 308 2:— Oil seal installer 	1:49 G033 102 2:— Handle 
1:49 L010 1A0 2:— Engine hanger set 	1:49 L010 101 2:— Plate (component part for 49 L010 1A0) 	1:49 L010 102 2:— Arm (component part for 49 L010 1A0) 
1:49 L010 103 2:— Hook (component part for 49 L010 1A0) 	1:49 L010 104 2:— Nut (component part for 49 L010 1A0) 	1:49 L010 105 2:— Bolt (component part for 49 L010 1A0) 
1:49 M005 796 2:— Body 	1:49 T019 003 2:— Body 	1:49 T027 001 2:— Preload adopter (component part for 49 G030 380D) 
1:49 UN30 3050 2:303-050 Engine lifting bracket 	1:49 UB71 525 2:— Bearing installer 	1:49 U027 003 2:— Oil seal installer 
1:49 U034 204 2:— Dust boot installer 	1:49 V001 525 2:— Bearing installer 	1:49 W032 2A0 2:— Bearing remover set 
1:49 W033 105 2:— Oil seal installer 	—	—