

## SHIFT SOLENOID NO.3 [FW6A-EL, FW6AX-EL]


id0517h2361300

### Purpose/Function

- Shift solenoid No.3 adjusts the hydraulic pressure in the R-3-5 brake circuit based on the current demand from the TCM according to the vehicle conditions.

### Construction

- Shift solenoid No.3 is installed to the solenoid control valve body.
- Shift solenoid No.3 is a normal open-type linear solenoid.

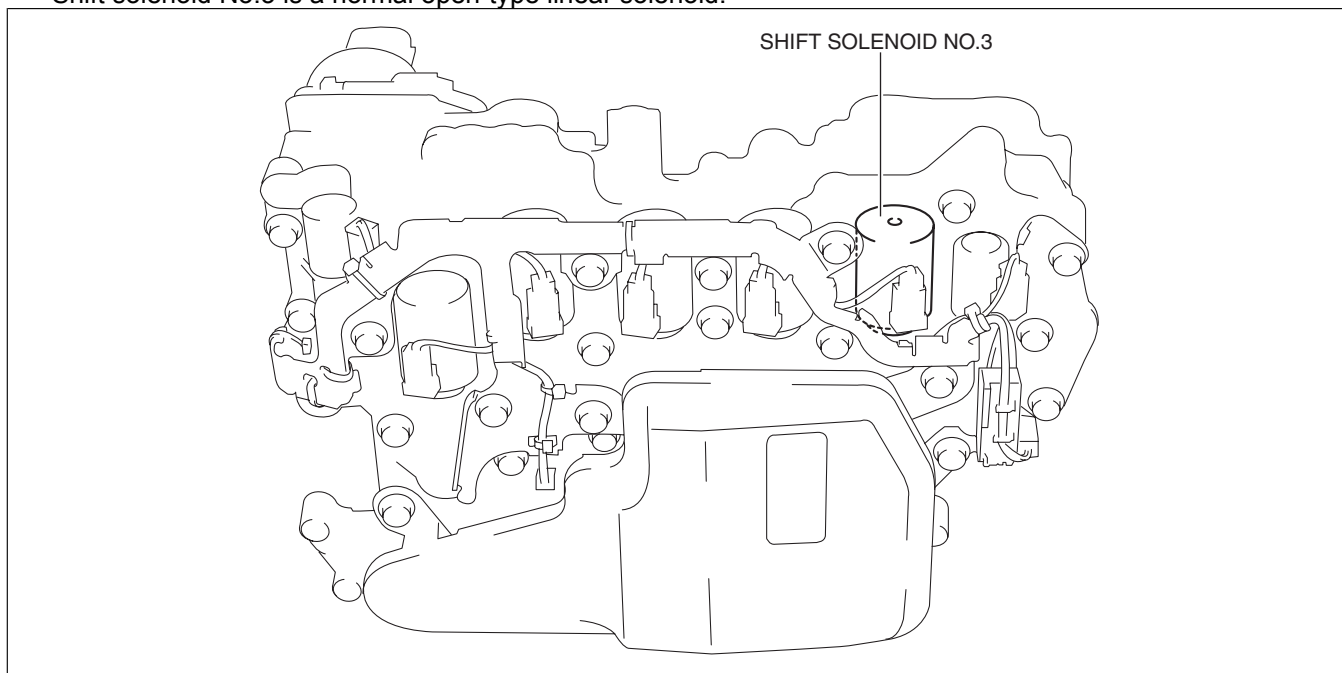

am3uun00002356

### Operation

- Adjusts the R-3-5 brake pressure by increasing/decreasing the energization current to shift solenoid No.3 according to the signal from the TCM.