


## ADJUSTER ANCHOR REMOVAL/INSTALLATION

id081100802000

### Warning


- The side air bag sensor is attached to the lower part of the B-pillar. When working around the B-pillar, disconnect the negative battery cable or work carefully, avoiding excessive impact to the lower part of the B-pillar.

1. Switch the ignition to off.
2. Disconnect the negative battery cable and wait for **1min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Set the adjuster to the lowest position.
4. Remove the following parts:
  - (1) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
  - (2) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
  - (3) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
  - (4) Front seat belt upper anchor installation bolt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
  - (5) B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
5. Remove bolt A.

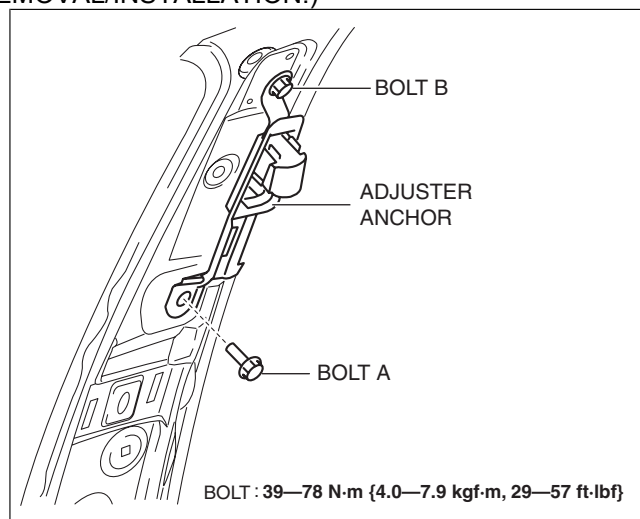

ac5wzw00002072

6. Remove bolt B.
7. Remove the tab.
8. Remove the adjuster anchor.
9. Install in the reverse order of removal.

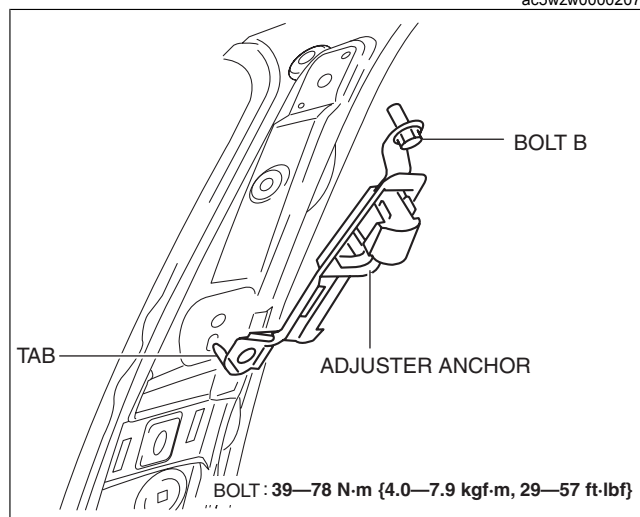

ac5wzw00002073