


REAR CONSOLE REMOVAL/INSTALLATION


id091700898500

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
 - (2) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
 - (3) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
 - (4) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
3. Remove screws A.

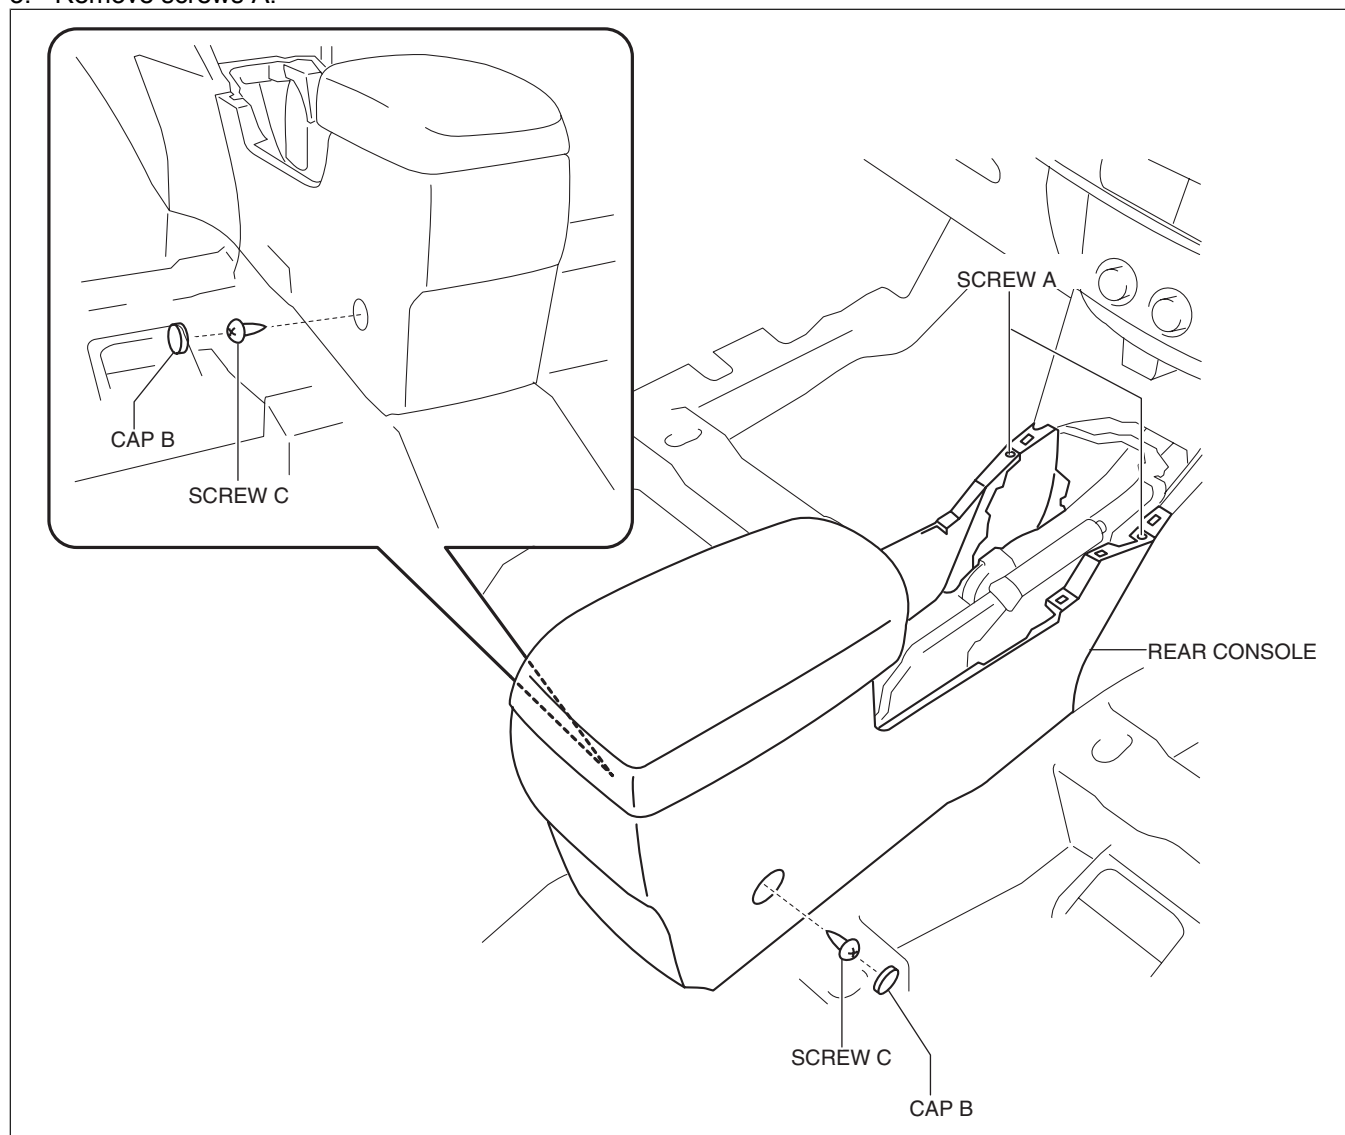


4. Remove caps B, then remove screws C.
5. Pull the rear console in the direction of the arrow (1) while detaching clips D.

ac5wzw00001456

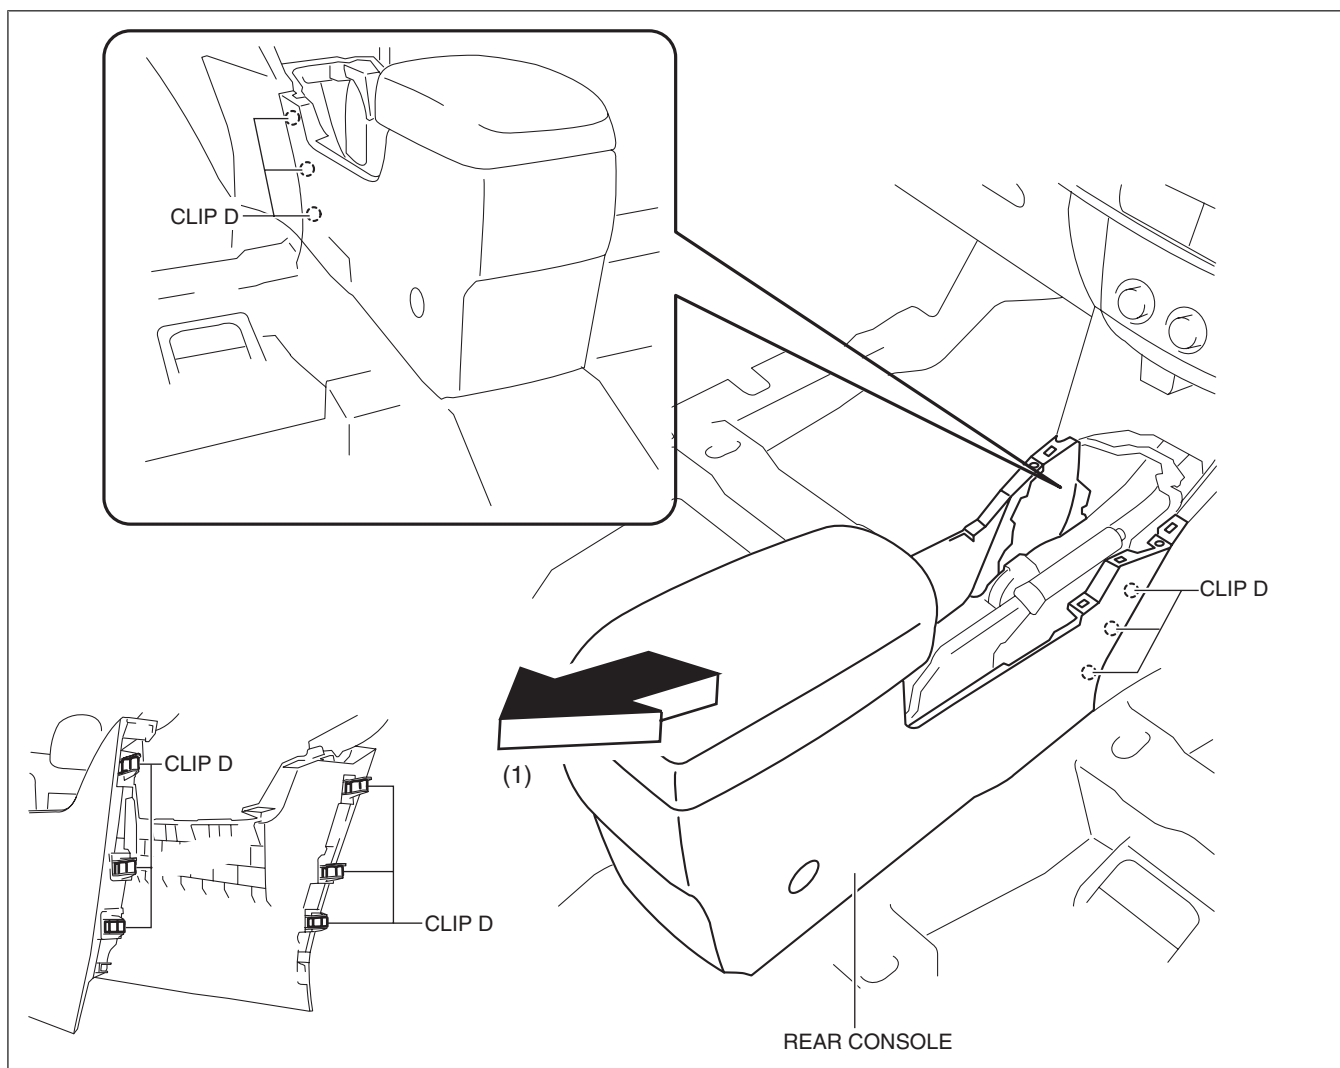

ac5uuw00001803

6. Disconnect the center accessory socket connector and auxiliary jack / USB port connector.
7. Remove the rear console in the direction of the arrow in the order of (2), (3), (4), (5) shown in the figure.

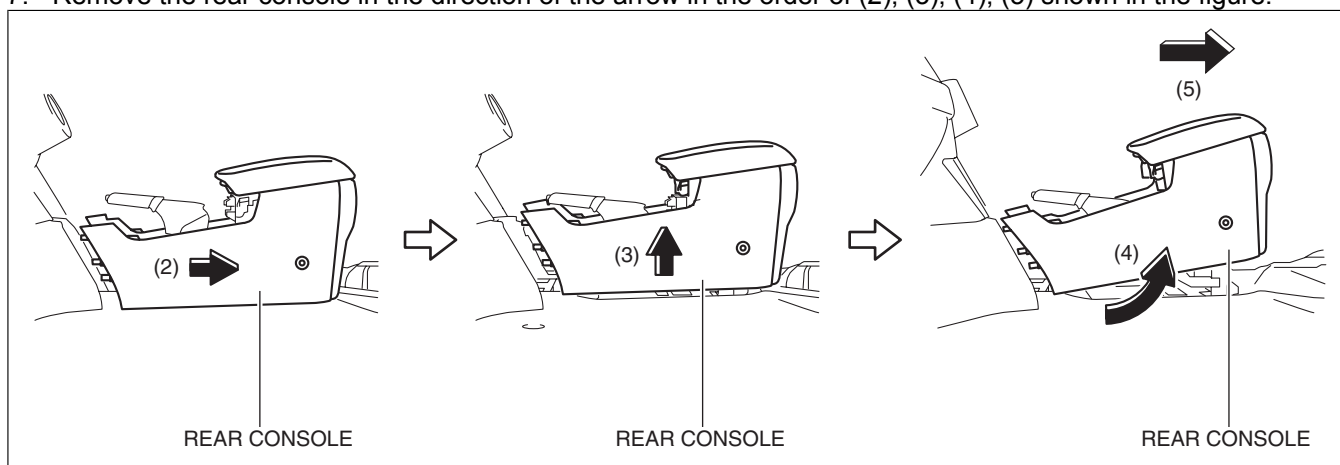

ac5wzw00003003

8. Install in the reverse order of removal.