

## REGULATING SOLENOID VALVE INSPECTION [SKYACTIV-D 2.2]

id0113z7265700


### Resistance inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the regulating solenoid valve. (See REGULATING SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3. Measure the resistance between the regulating solenoid valve terminals A and B.

### Regulating solenoid valve resistance (specification)

**9.8—11.2 ohms [20 °C {68 °F}]**

- If not within the specification, replace the regulating solenoid valve. (See REGULATING SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

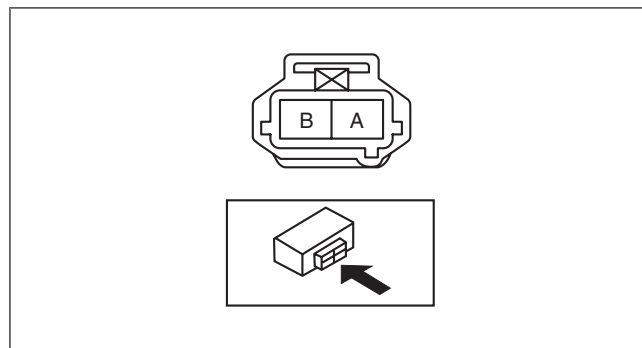

ac5jjw00003479