

CLEARING DTC [AUDIO]

id0902f6855600

Caution

- If the memory is cleared, past malfunctions may no longer be displayed, therefore before clearing DTCs, record all DTCs displayed in the DTC inspection on the Audio Repair Order Form.


Audio unit (with color LCD)

When using the M-MDS

1. Connect the M-MDS to the DLC-2.
2. After vehicle identification, select the following from the M-MDS initialization screen.
 1. "Self-test"
 2. "Module"
 3. "ACU"
3. Verify the DTC according to the directions on the screen.
4. Press the clear button on the DTC screen to clear the DTC.
5. Switch the ignition off (LOCK).
6. Switch the ignition ON (engine off) and wait for 5 s or more.
7. Perform DTC inspection. (See DTC INSPECTION [AUDIO].)
8. Verify that no DTCs are displayed.

Not using M-MDS (on-board diagnostic test mode)


1. Switch the ignition to ACC or ON (engine off).
2. Launch the on-board diagnostic test mode. (See DTC INSPECTION [AUDIO].)
3. Select the DTC and press the CLEAR switch to clear the DTC.
4. Switch the ignition off (LOCK) to complete the on-board diagnostic test mode.

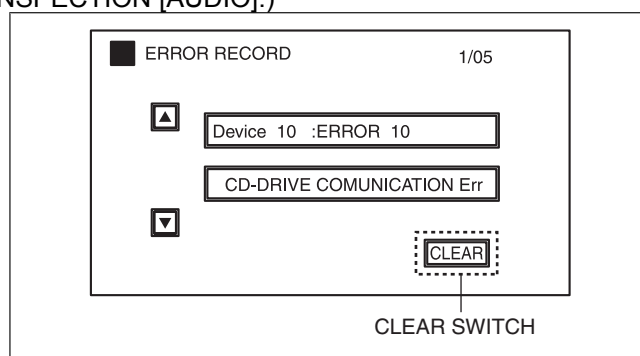

Audio unit (without color LCD)


1. Switch the ignition to ACC or ON (engine off).
2. Launch the on-board diagnostic test mode and display the DTCs. (See DTC INSPECTION [AUDIO].)
3. Press the TUNE/AUDIO switch for 3 s or more while simultaneously pressing the POWER/VOLUME switch to clear the DTCs.

With POWER/VOLUME switch on left side

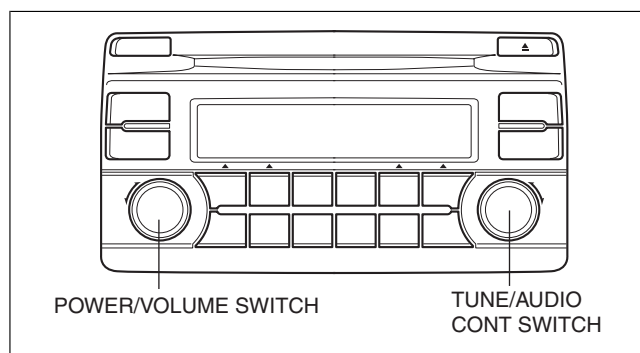

With POWER/VOLUME switch on right side

4. Switch the ignition off (LOCK) to complete the on-board diagnostic test mode.

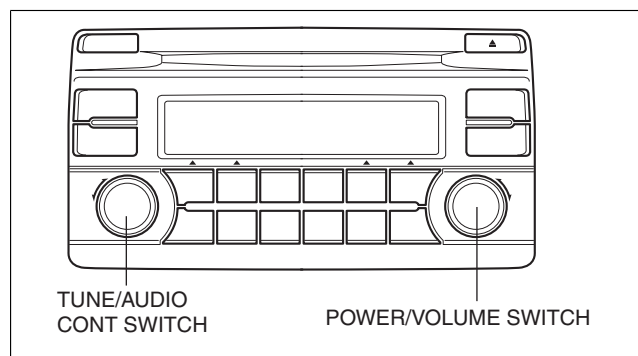

ac5wzw00005603