


## INTAKE AIR TEMPERATURE (IAT) SENSOR NO.2 REMOVAL/INSTALLATION [SKYACTIV-D 2.2]


id0140z7806300

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the engine cover. (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3. Disconnect the IAT sensor No.2 connector.
4. Remove clip A from the bracket.

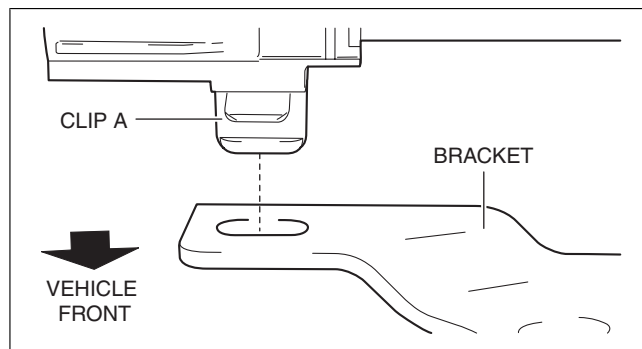


ac5wzw00004490

5. Remove clip B from the bracket.

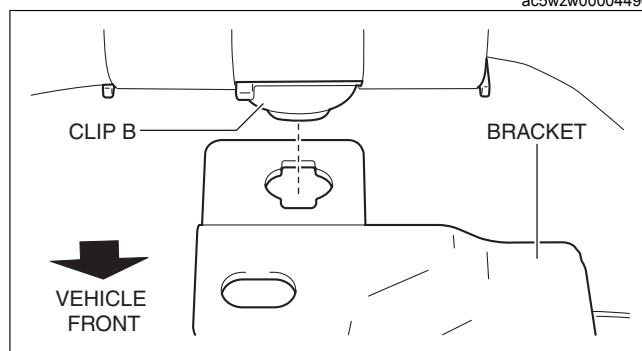


ac5wzw00005491

6. Set the wiring harness aside.

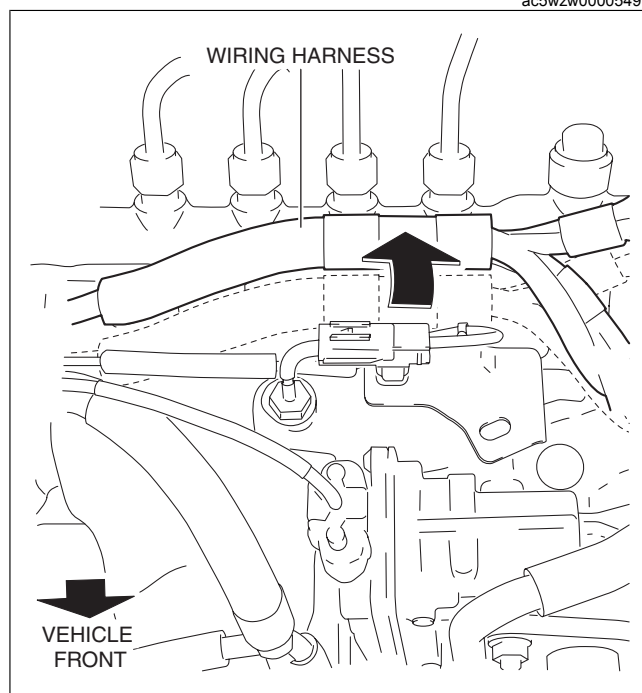


ac5wzw00005492

7. Remove clip C from the bracket.

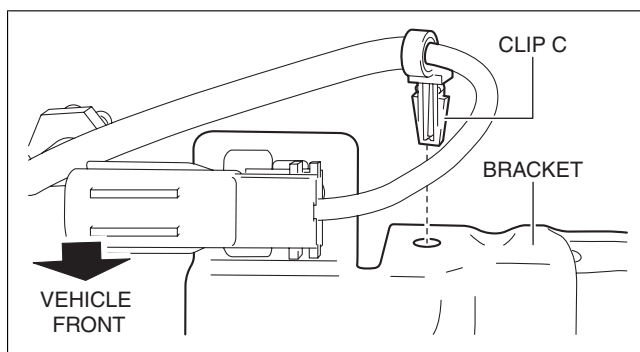

ac5wzw00005493

8. Remove the IAT sensor No.2.  
9. Install in the reverse order of removal.

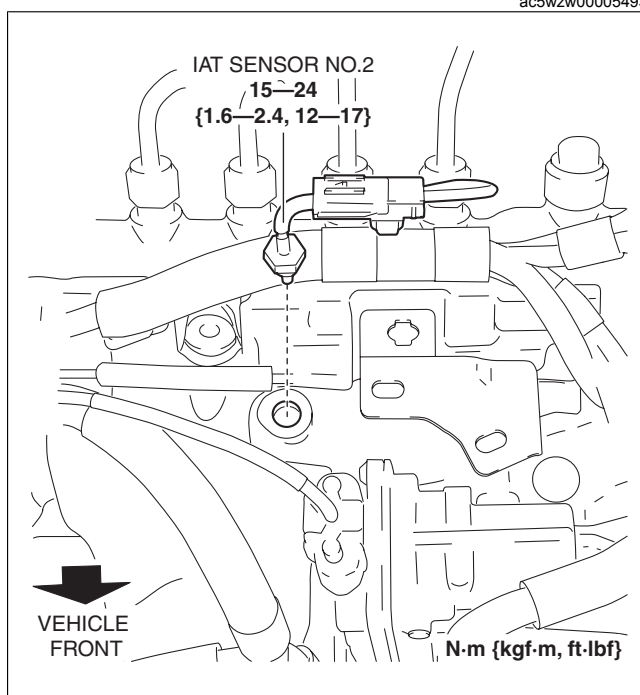

ac5wzw00005494