


FRONT PARKING SENSOR BUZZER REMOVAL/INSTALLATION

id092200030400

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Upper column cover (See COLUMN COVER REMOVAL/INSTALLATION.)
 - (2) Meter hood (See METER HOOD REMOVAL/INSTALLATION.)
 - (3) Instrument cluster (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.)
3. Disconnect the connector.
4. Pull out the front parking sensor buzzer in the direction of arrow (2) shown in the figure while pressing the clip in the direction of arrow (1) shown in the figure, detach the clip and dashboard, and remove the front parking sensor buzzer.
5. Install in the reverse order of removal.

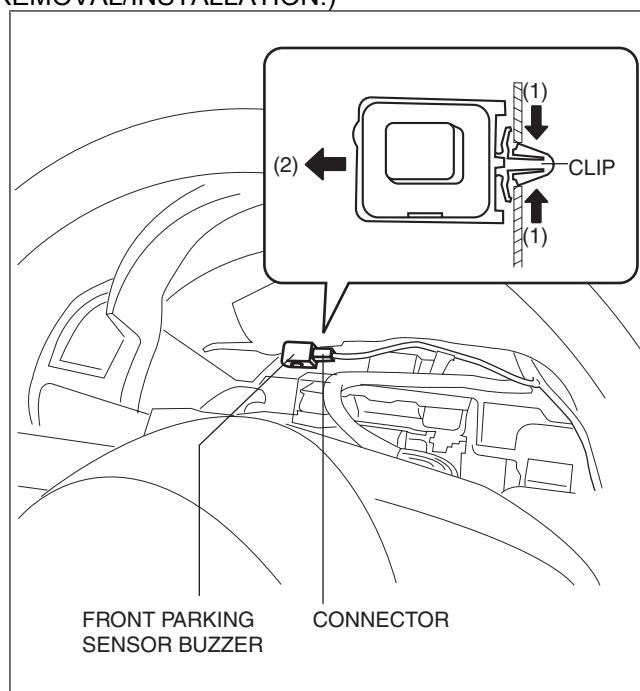

ac5jjw00000402