

FRONT STABILIZER CONTROL LINK INSPECTION


id021300800500

1. Remove the front stabilizer control link. (See FRONT STABILIZER REMOVAL/INSTALLATION.)
2. Inspect for bending or damage. If there is any malfunction, replace the front stabilizer control link.
3. Rotate the front stabilizer control link ball joint stud **10 times** and shake it side to side **10 times**.
4. Measure the front stabilizer control link ball joint rotational torque using an allen wrench and a torque wrench.

Front stabilizer control link ball joint starting torque

0.8—3.5 N·m {8.2—35 kgf·cm, 7.1—30 in·lbf}

- If not within the specification, replace the front stabilizer control link.
- Even when within the specification, if there is excessive play in the front stabilizer control link ball joint, replace the front stabilizer control link.

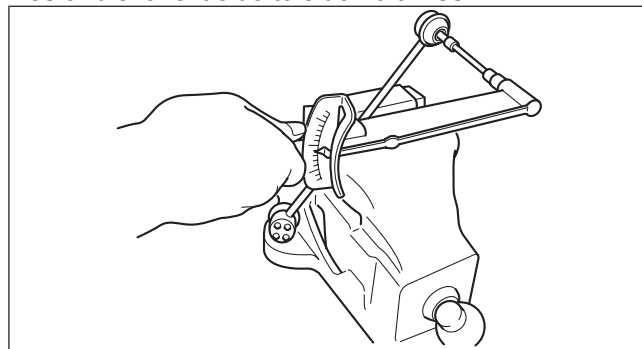

ac5uuw00000118