


OUTER MIRROR GLASS INSPECTION

id091200010400

Heated Outer Mirror

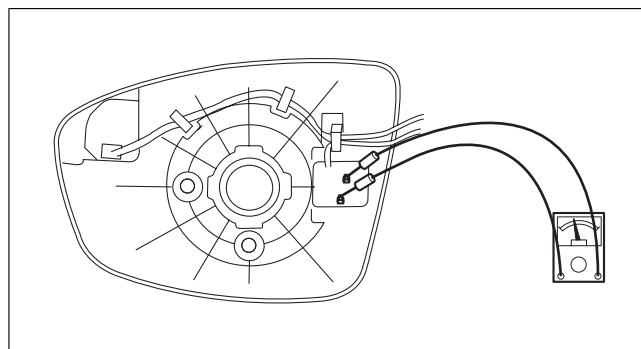

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the outer mirror glass. (See OUTER MIRROR GLASS REMOVAL.)(See OUTER MIRROR GLASS INSTALLATION.)
3. Verify that the resistance and continuity between the heated outer mirror terminals is as indicated in the table.



ac5wzw00002988

- If not as indicated in the table, or if the resistance is not within the specification, replace the outer mirror glass.


ac5wzW0000298

		 : Resistance
MIRROR OPERATION	TERMINAL	
	A	G
HEATER		
Resistance : 9—13.5 ohms		

ac5uuw00001093

RVM Indicator Light

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the outer mirror glass. (See OUTER MIRROR GLASS REMOVAL.)(See OUTER MIRROR GLASS INSTALLATION.)
3. Connect the battery voltage as shown in the figure.

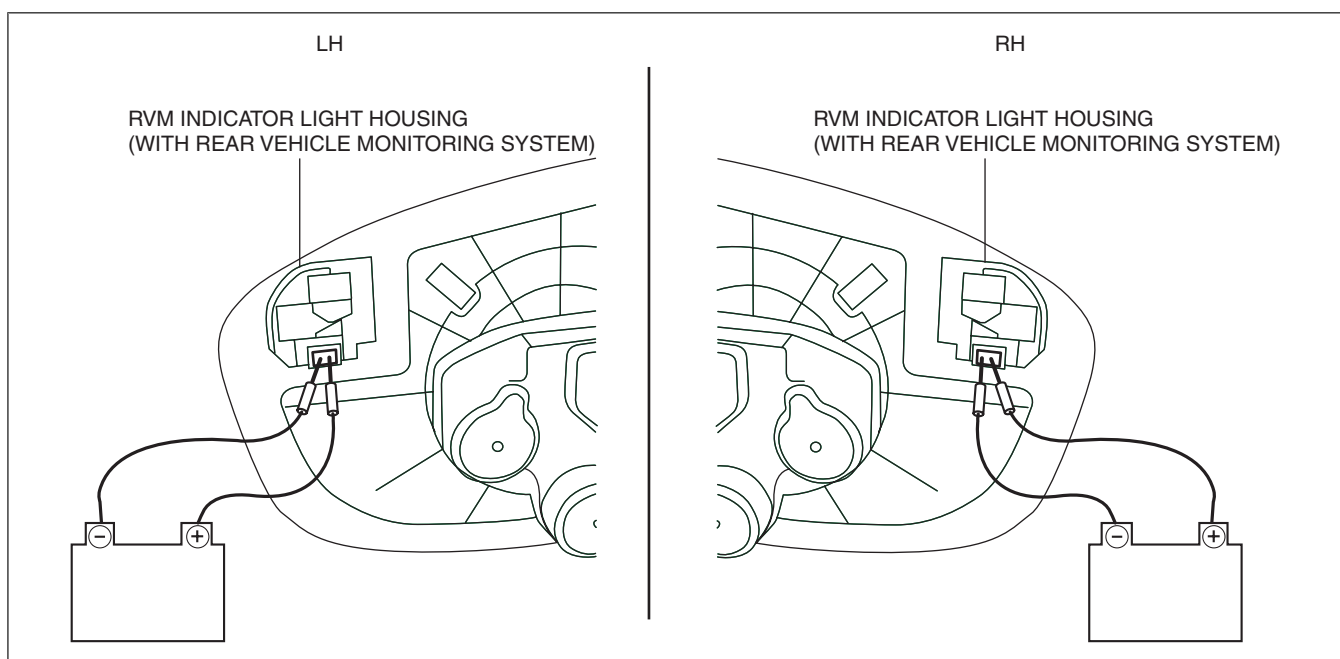


ac5wzw00002989

- If the RVM indicator light does not illuminate, replace the outer mirror glass.

BSM Indicator Light

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the outer mirror glass. (See OUTER MIRROR GLASS REMOVAL.) (See OUTER MIRROR GLASS INSTALLATION.)
3. Connect the battery as shown in the figure.

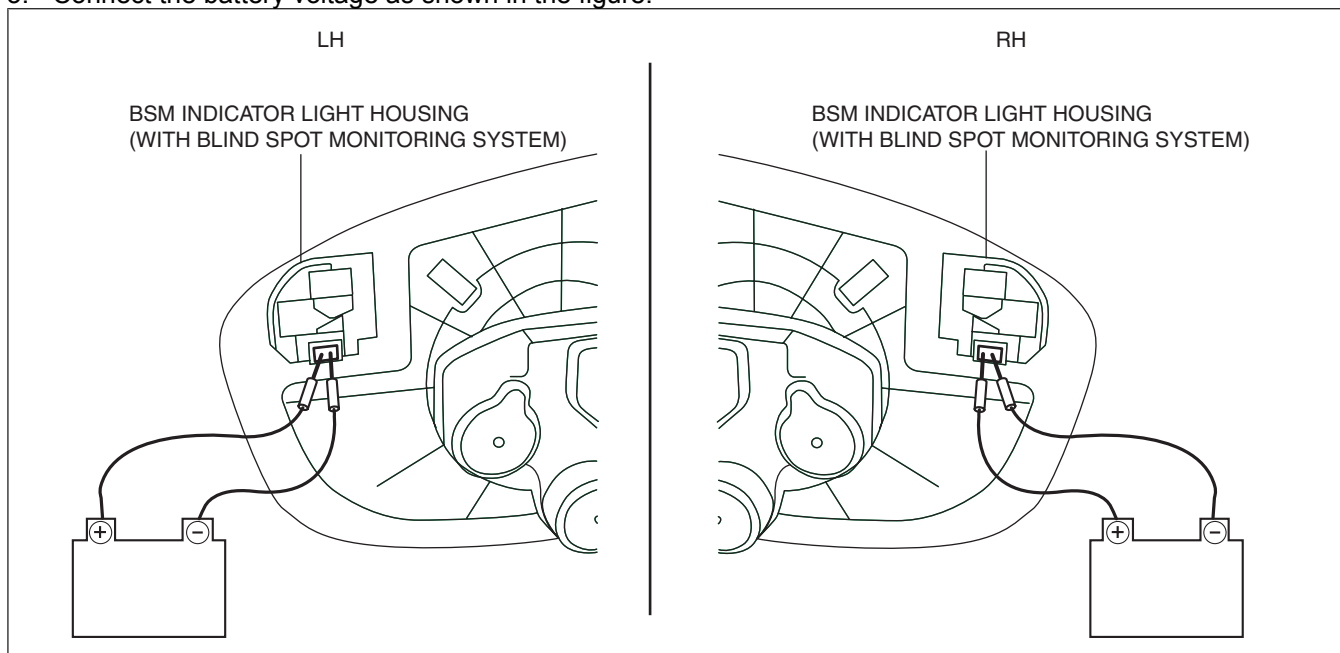

ac5wzw00002990

- If the BSM indicator light does not illuminate, replace the outer mirror glass.